


TECHNICAL DATA


Curved Shower Rods

5" ROD EXTENDER 190 SERIES

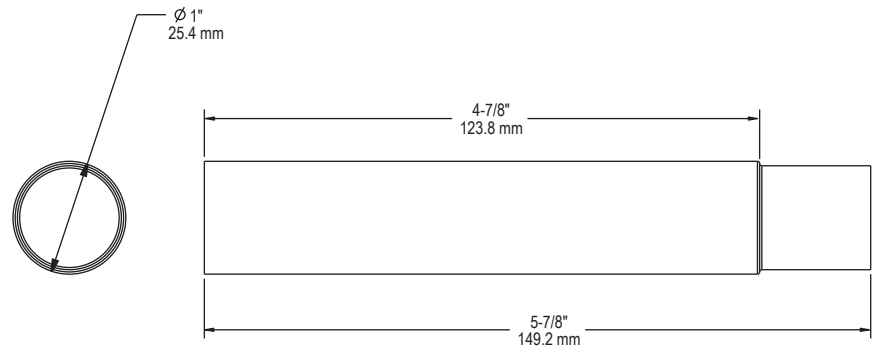


Curved Shower Rods

190 SERIES

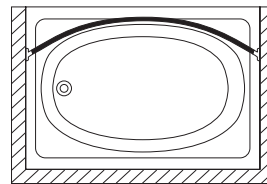

Oval Tub

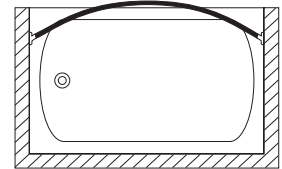

Standard Tub

INSTALLATION:

Mount wall plates 3" inside where a straight rod would normally go with 4 - #8 x 1-1/2" flat head stainless steel screw provided. Place rod with swivel connectors attached and set screws facing up into wall plates. Screw in and tighten 4-3/4" retaining screws. Adjust rod and tighten set screws into swivel connectors with allen wrench provided. Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, use anchors or plugs provided with screws. See complete mounting, installation and anchor instructions in each rod package.

FranklinBrass[®]
A Liberty Hardware Brand