


Planting the post

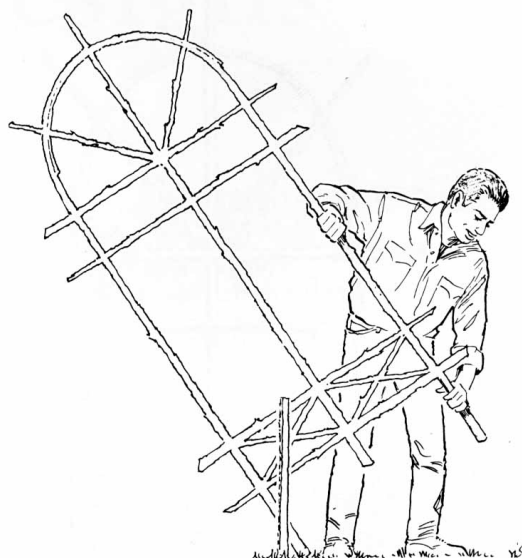

Securing to the post

Installing a low pedestrian fence, trellis, willow edging and bamboo edging border is simple.

There are several options for installing your trellis and edging in the garden. You can use metal posts, wooden stakes, metal rods, or plastic rods. Make sure that whatever you choose is sunk 16 to 18 inches into the ground for and 8' trellis so that the trellis is secure, for shorter edging, 8 to 10 inches is fine.

Driving in the post

With a heavy hammer, drive one post or stake into the ground at the approximate point where one side of the trellis upright or first leg of the edging will be. Hold one trellis or edging upright against the post you have just driven and mark the spot where the other touches the ground. Set the trellis or edging aside.

Where you marked the spot, drive the second post into the ground to approximately the same depth as the first one. And repeat the same process if you need more than two stakes, such as in the case of our 6' long edging.

Wiring the trellis or edging to the post

Position the trellis or the edging against the posts, with the trellis or edging upright in the front of the posts. Find a spot 3" to 4" from the top of the post and wire it upright to the post at this point. Then firmly wire the bottom upright to the post 3" from the ground. You should now have one trellis or edging upright wired securely to one post.

Repeat the same process with the other post, securely wiring the trellis or edging in place.