



TRIO NARROW SHELF




Included




36 Pins



6 Vertical zBoards
adhesive strips on 2 edges




3 Backboards
adhesive strips on 3 edges



4 Horizontal zBoards

WARNING: CHOKING HAZARD
Small parts NOT for children under 3 years

Important

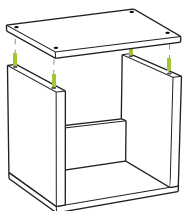

↑
THIS SIDE UP

Tip Start assembly from bottom to top.

DO NOT place unit on its side or back as it will compromise its structural integrity.




- Assemble your unit on a flat even surface, carpet not recommended
- Furniture is for indoor use only

- When moving your Way Basics furniture, lift from the bottom
- Make sure zBoard surfaces are clean and dry


1

Peel adhesive strips off backboard.




2

Insert 4 pins in backboard.

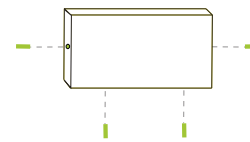


3

Align backboard on horizontal zBoard.
(holes only on one side of board)

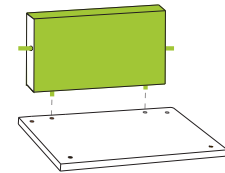


4

Carefully remove the 3M protective layer from adhesive.

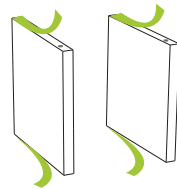


5

Place alignment pins in vertical zBoards.

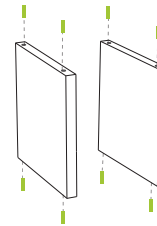


6

Align vertical zBoards (with inner holes facing backboard) to horizontal zBoard as shown.

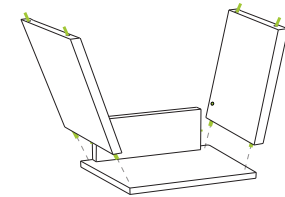


7

Adhere vertical zBoards on to backboard.

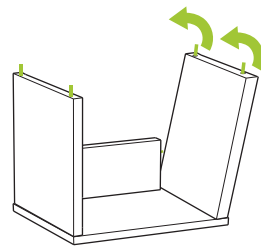

8

Next, align middle horizontal zBoard
(there will be holes on both sides of board) on top of vertical zBoards.

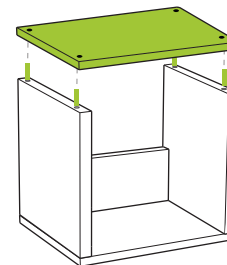

9

Repeat steps 1-8.
Visit links below for more details.
Enjoy building possibilities!

