



IMPORTANT – MUST READ PRIOR TO INSTALLATION


Installation Instructions

Tools Required: Tape Measure, Screw gun (power drill) with #2 Phillips bit and Pliers

Measure the distance between the 16" on center studs. **The inside distance between the studs must be 14 1/2" inches +/- 1/8".** If the distance is more or less than this dimension, adjust the studs as required or shim between the bracket and the stud. Locate and install the UniBrackets and Bracket Extensions as shown below. (Tip: Tap screws in place with a hammer then screw with a power drill). Visit <u>www.the-cpg.com</u> for installation videos and helpful hints.

Small Shelf Installation

Large Shelf Installation

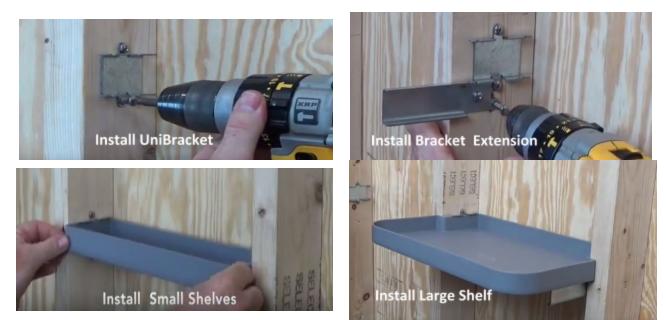

Hanger Bar and Hooks Installation





