



BSBB-Bakers Sideboard Base Only

Thank you for choosing Enclume!

Enclume racks are the ultimate quality, design, strength and function.

WARNING: READ ALL OF THE INSTRUCTIONS BEFORE ASSEMBLING AND USING YOUR RACK

Enclosed you will find everything needed for the assembly and use of your storage rack. Two people make assembly and installation easier. Unpack and identify all the parts before you begin. The parts and hardware included are:

Components:

- 2 – Rectangular uprights with feet attached
- 1 – Butcher block work surface
- 1 – Steel trim band
- 2 – Shelf rims
- 2 – Grid shelves

Hardware:

- 4 – ¼ x 7/8” button head screws
- 20 – 3/8” x ½” button head screws
- 2 – 2 ½ “ lag bolts
- 1 – 5/32” Allen wrench (small)
- 1 – 7/32” Allen wrench (large)

If you need help, please call 1-877-ENCLUME

Enclume Design Products

24 Colwell Street, Port Hadlock, WA 98339

Phone 360-385-6100 • Fax 360-385-6156


www.enclume.com



Photo: BSB1 - BSBB1 base only does not include upper shelf

See reverse side for ASSEMBLY INSTRUCTIONS

Assembly and for the BSBB1

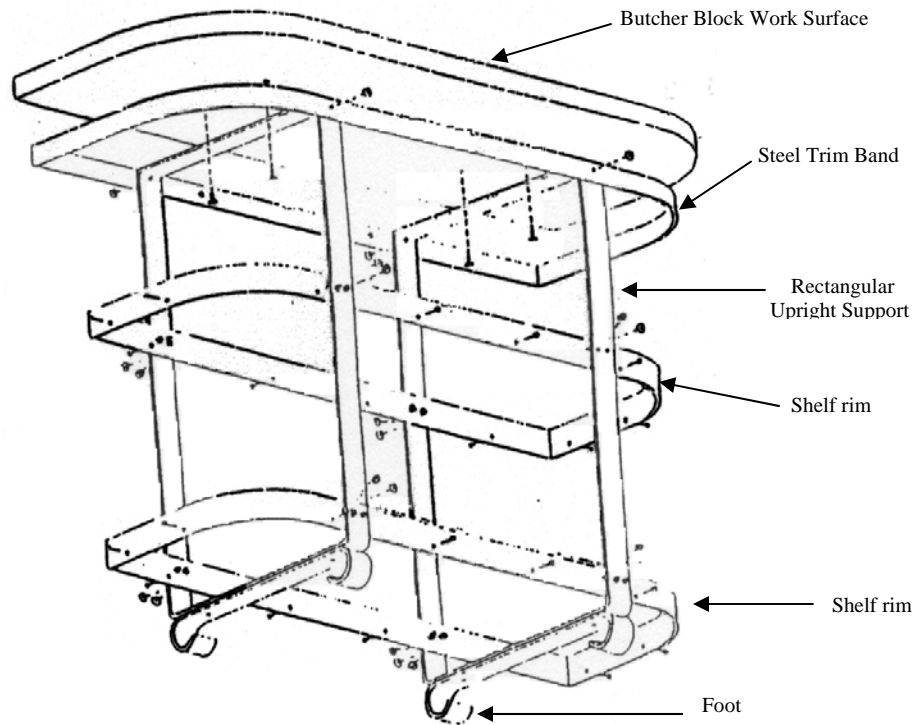

Assembly

- 1) Lay the rectangular uprights side by side on the floor in the correct relationship to one another, about 24" apart.
- 2) Notice the rivet placement on the shelf rims. When the rims are right side up the rivets are positioned closer to the bottom of the shelf rim than the top. This positioning allows the grid shelves to seat deeply inside the rim. Slide one of the shelf rims *inside* the rectangular uprights. Attach the rim to the uprights using 8 - 1/2" button head screws. The button heads should be inserted front to back so the head is visible from the outside of the sideboard.
- 3) Repeat Step 2 for the second shelf rim.
- 4) Attach the steel trim band to the *outside* of the rectangular uprights using the last four 1/2" button head screws.
- 5) Stand the base on its feet.
- 6) Square up the base and tighten all the screws.
- 7) Slide the grid shelves into the middle and lower shelf rims with the long wires facing upward.
- 8) Put the butcher block work surface on top of the unit. The back of the board should be flush with the back of the rectangular uprights. Align the holes on the bottom of the work surface with the slots on the top of the rectangular uprights. Attach the pieces together with four 7/8" button head screws and the small Allen wrench.
- 9) We recommend the sideboard be placed tightly against a wall. The two 2 1/2" lag screws are for attaching the rack to the wall should you wish to do so. Four extra holes have been drilled in the back of the steel trim band. The holes are drilled on 16" x 32" centers to match standard wall stud placement. If the positioning of the holes does not match those of your wall studs, you may drill new holes in the trim to align the rack.



It is important that your rack is assembled correctly. If the unit is assembled or used incorrectly, it could become unstable and collapse, possibly causing injury.

Limited Warranty: This product is warranted to be free of material defects for a period of five years from the date of purchase. Customer's exclusive remedy shall be the repair or replacement of the defective product and shall be subject to the following conditions: (1) notice of any defect is received by Enclume within the warranty period and (2) customer returns the defective product to Enclume Design Products, 24 Colwell St., Port Hadlock, WA 98339, *postage prepaid* within 20 days following a return authorization number (which may be obtained by telephoning the number at the top of this instructions) being provided to the customer by Enclume. There are no other warranties, expressed or implied. **THERE ARE NO WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ENCLUME SPECIFICALLY DISCLAIMS ANY AND ALL INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE PURCHASE OR USE OF ENCLUME'S PRODUCTS.**