


Installation Guide 1.2


Jagged edge Mosaïks

This installation guide is for the following Mosaïk families:


BELLAGIO
CRESCENDO

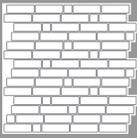


MILANO

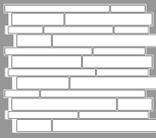

MURANO/MURETTO
MILENZA/MANDOLIA

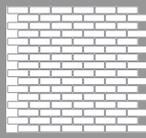

SUBWAY

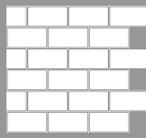


DO NOT INSTALL
OR USE AS
TABLE PAD
SHOWER WALLS
FLOORS
COUNTER TOP


CAPRI




CAVALIS

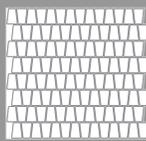


HEXAGONE

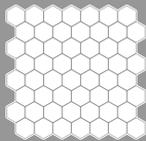


RAVENNA/BRIXIA

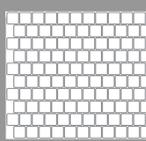

METRO

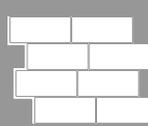

OSLO/NORWAY

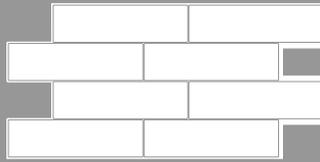

What you need:

- Grease Remover (TSP)
- Cutting Mat
- Non-Slip Ruler
- Measuring Tape
- Box Cutter
- Pen & Level



Cleaning

First, wash the surface with a powerful grease-remover such as TSP (Tri-Sodium Phosphate). Make sure you allow enough time for the surface to dry properly.



Guideline

Using a level or chalk line, trace a guideline to ensure perfect alignment using a Mosaïk to mark the height. If you are facing an uneven counter, mark the height of your guideline on the lowest side of the counter.



Measuring & Cutting

Using a simple utility knife (box cutter) and a metal ruler, you will be able to trim and shape your Mosaïk at will should you come across electrical outlets or other irregularities during the installation. Measure and mark your Mosaïk and then lay it on a cutting mat or cutting board to cut off the unwanted portion.



Remove the tabs of the first Mosaïk

For all jagged edge models, you must cut off the overlapping tabs of the first Mosaïk in order to get a straight edge to begin the installation. This will allow you to start in a corner, against a cabinet or to get straight edge ending. * The Hexago Mosaïk will require the same operation to be performed at the bottom for Mosaïks touching the counter.




Peel

Simply fold back half of the protective paper in the back without touching the adhesive portion with your fingers. We strongly recommend you wash your hands before you start the installation to ensure no dust particles or greasy residue are transferred on to the adhesive.



Align & Stick

Now align the adhesive portion with your guideline and apply a light pressure. This will allow you to validate the positioning of your Mosaïk. Once you are satisfied with its placement and alignment, you may remove the rest of the protective paper and apply a firm pressure across the entire surface.

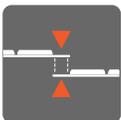

Overlapping

Once you've successfully installed the first Mosaïk, you may continue the process making sure you overlap all the grout lines as you go. This will result in a continuous and even layout of the entire project.

ATTENTION



To install behind a gas ranges without a back control panel or metal plate, you must preserve a safety zone (without Smart Tiles) of 8" (20 cm) on the back wall to prevent direct exposure to open flame (see illustrations A & B). A protective stainless steel panel can be used to safely fill that area. For small appliances such as toasters, counter ovens and others, leave a gap of 2 inches (6 cm) between the Mosaïk and the appliance.

