
## How to Measure Your Window for Cordless Faux Wood Blinds

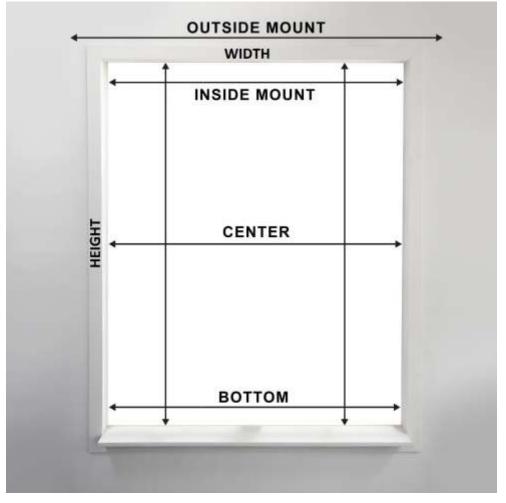

Inside Mount (Inside your window recess)	Outside Mount (Outside your window recess, on framework or the surrounding wall)
1. <u>Width:</u> To find the width, measure the top, middle and	1. Determine where the blind is to be placed. You will
bottom within your window recess. Use the narrowest	need a minimum of 1-1/4 inches of flat mounting space
width as your window-width.	above your window to accommodate the mounting
2. <u>Height/Length:</u> To find the height, measure exact	hardware.
window-recess height at left, middle, and right side. Use	2. <u>Width:</u> Choose a product-width that is the same or
the longest height as your window-height.	greater than the width of your window recess. We
3. <u>Depth</u> : Minimum 1-1/4 inches required. If you want a	recommend adding 2 to 6 inches extra to the measured-
flush mount a minimum of 3 inches is required.	width to maximize light control and privacy.
4. ORDERING: Choose a width that is 1/4 inch or smaller	3. <u>Height/Length:</u> Measure exact measured-height from
than the window-width from above. Choose a height that	the top of the proposed headrail location to the base of
is the same or longer than your window-height.	the sill. If there is no sill, measure where you would like
	the blind to drop. Add 2 to 6 inches to the height for
*Ordering a product that is more than 1 inch shorter in	optimum light control and privacy.
width than your window-width will create a large light	4. <b>ORDERING:</b> Choose a width that is the same or wider
gap, so think about what will satisfy your need.	than the product-width from above. Choose a height that
	is the same or longer than your measured-height.

## All of our products ship exactly as ordered. There are no deductions.

Example: If you order a 24"Width x 60"Height/Length, then the product that you'll receive will be 24"Width x 60"Height/Length.