


Installation Instructions

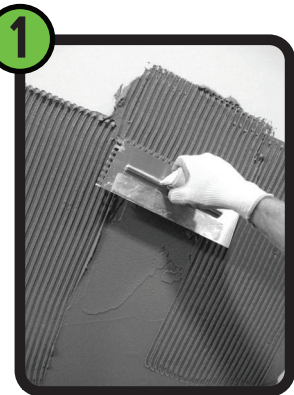

Apply modified thin-set adhesive or mastic to substrate using a 3/8" x 3/8" notch trowel.
(Aplique el adhesivo de capa delgada modificado o masilla de sustrato utilizando un 3/8" x 3/8" llana dentada.)

*Prior to installation, verify all materials meet local building codes and requirements. For additional installation tips, check with your local building professional. Store Brickweb between 55° & 95°F.



Begin layout process by applying Brickweb corners. Firmly press Brickweb into adhesive, ensuring adhesive extrudes through webbing.

(Comienza proceso de diseño mediante la aplicación de esquinas Brickweb. Presione firmemente el Brickweb en el adhesivo, asegurando que salga el adhesivo a través de la malla.)

WARNING: The dust generated from dry sawing may contain silica and may be a potential health problem for the lungs. Wet sawing is recommended. Wear all necessary protective gear.



Apply Brickweb sheets by overlapping exposed webbing. Firmly press Brickweb into adhesive, ensuring adhesive extrudes through webbing.

(Aplicar hojas Brickweb colocando sobre malla expuesta. Presione firmemente el Brickweb en el adhesivo, asegurando que salga el adhesivo a través de la malla)

If sheet slides down wall, place a few drywall screws through webbing to hold in place. Remove when adhesive is dry.


(Si la hoja se desliza por la pared, poner unos cuantos tornillos para yeso a través de la malla. Retirar cuando el adhesivo está seco.)

*To help keep brick faces clean, apply a grout sealer or release product to the brick prior to grout application.



Grout Option 1

(Recommended)

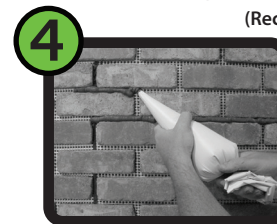

Apply grout using grout bag.
(Aplique el grout con la bolsa.)



Finish joint with tool.
(Termine el grout con la herramienta.)

Grout Option 2



Apply grout using tile float.
(Aplicar el grout usando una flota para piso de ceramic.)



Finish grout with sponge.
(Terminar el grout con una esponja humeda.)

Grouting or Pointing

Type-S mortar is recommended for filling mortar joints and will provide a traditional look. Tile grout may be used if a different color is desired and recommended on floors.

IMPORTANT: Mortar or grout must be removed from the brick surface before drying. Rinse and refill bucket often with clean water. Wipe until no residue rings from the sponge. Grout and clean small sections at a time to avoid mortar drying on brick.