



LIST OF PARTS:


- 11 pcs. Stainless Steel Standoffs.
- 11 pcs. Plastic Dowels.
- 11 pcs. Stainless Steel Screws.
- 20 pcs. Black Plastic Caps.
- 3 pcs. Plastic Cross Clamps.
- 1 Spool of cable 55 feet long.

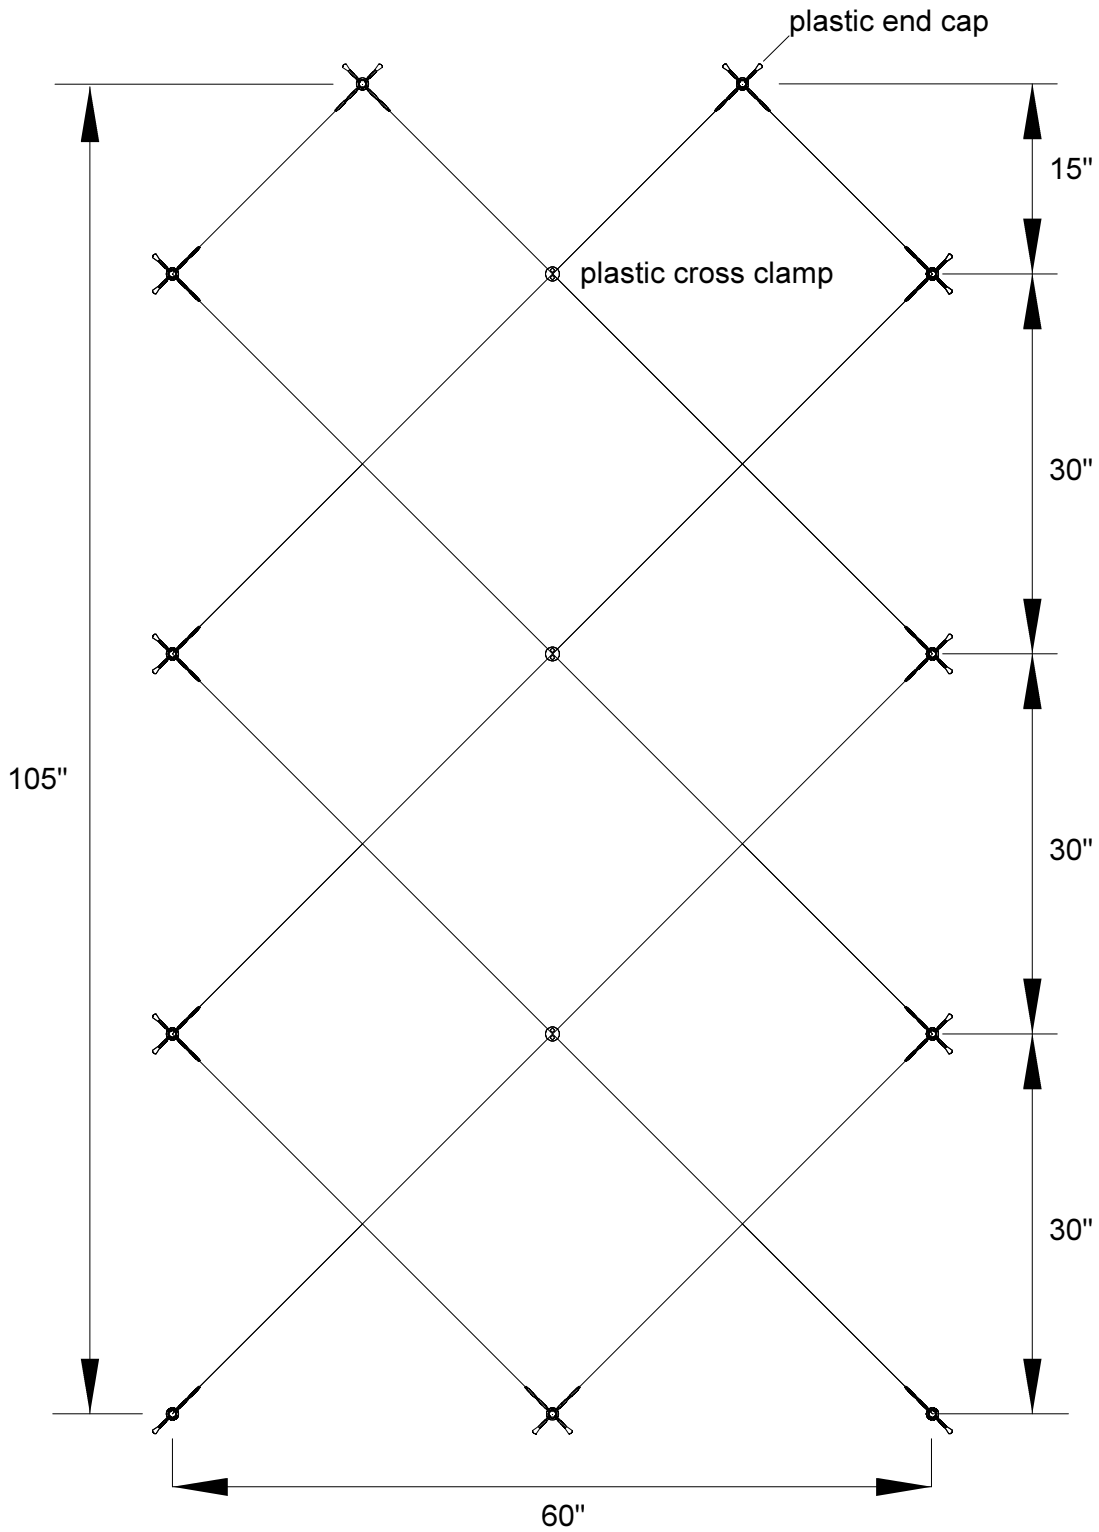





INSTALLATION

SPACER - Wall attachment

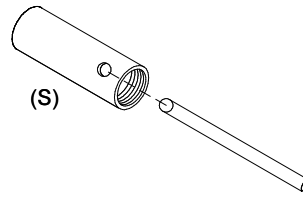



1 Remove insert (I) from SPACER

7 Pass cables through holes

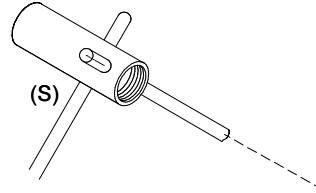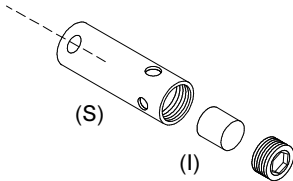



2 Mount Nylon Dowell to the wall

8 TENSION THE CABLE BY HAND

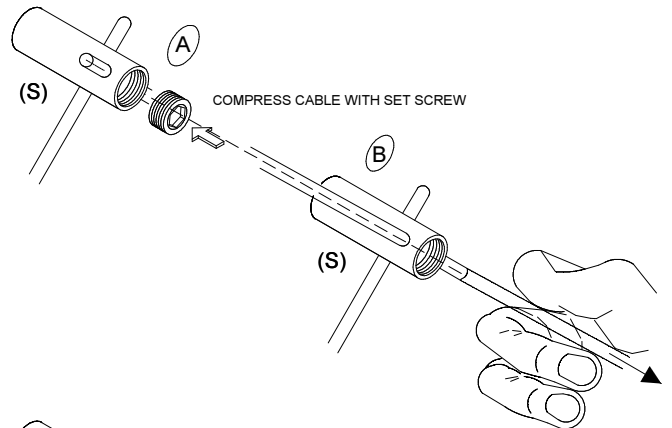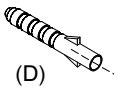

SUBSTITUTE SCREW IF NECESSARY UPON WALL MATERIAL

3 Attach SPACER to the wall using the screw

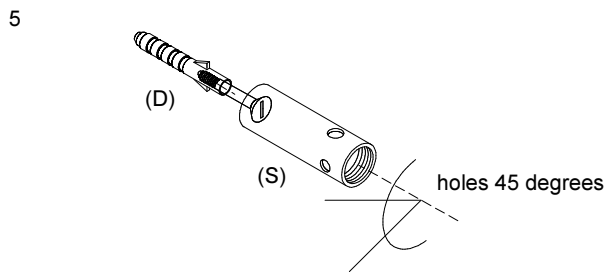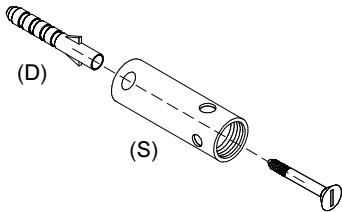

6 Insert back into Spacer

10 Cut the cables - Attach plastic end caps

