


FlagStone Installation Sheet

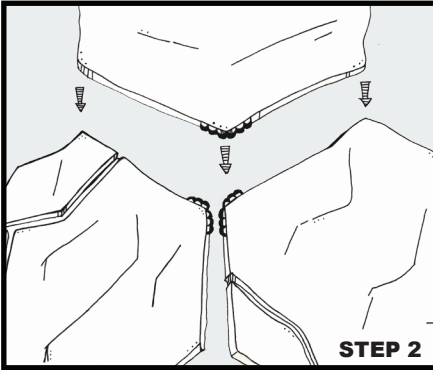

STEP 1


Pull all the flagstones out of the package and look for the different tab configurations – they are “One,” “Two,” & “Three”. Start laying out the pattern prior to commencing.

STEP 2 (refer to diagram)

Align the straight edge sides together and make sure the tabs are all in the center area.

STEP 3 (refer to diagram)

Line up the curved points to properly align the center of our pattern. Make sure to line up the tabs accordingly.

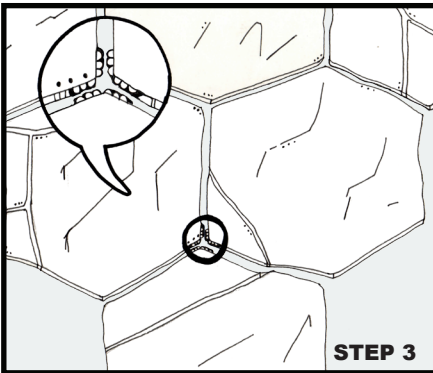

STEP 4 (refer to diagram)

Align grout joint using the clearly marked spacer on the package. Cut out the spacer with scissors and use to keep the grout joints equally spaced.

STEP 5

Clean the surface with a wire brush or power wash, to insure a clean surface.

STEP 6

Mix “Polymer Thin-set” as needed and apply with a 1/2” notch trowel.

STEP 7

Apply flagstones as pictured and firmly push them into the thin-set. Allow thin-set to dry approximately 12 hrs prior to starting the grouting process.

STEP 8

Mix grout as selected and use sponge or grout bag to apply and clean with water after. Allow roughly 12 hours prior to walking on your new flagstone project.

