
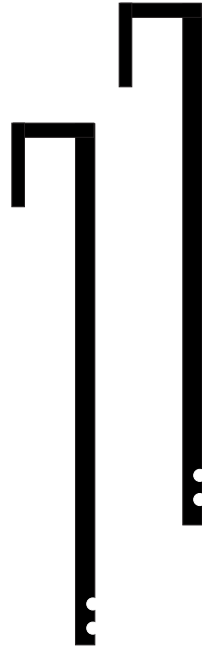


Over the Door Mirror (can hang on the wall)

This mirror can hang on the wall (with screws) OR over the door (with the enclosed hanging hooks)


Upon opening the carton, please check that you have all the parts listed below and that they are in good order. Mirrotek always strives to make a quality product which you will be proud to own. If anything is damaged or missing, please contact us. We will be happy to ship you replacement parts at no charge. In order that we may serve you better, please have the instruction sheet on hand when you call.

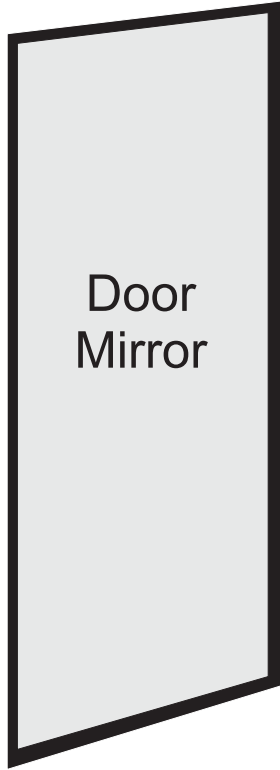

Over
the Door
Hooks



Hangers
to hang
armoire
on the wall

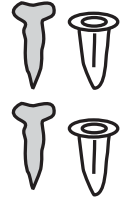

Screws and
Anchors
(for Standard walls)


INSTRUCTIONS TO HANG THE MIRROR OVER THE DOOR:

Step 1: Place the mirror with the mirror side down on a secure flat surface.


Step 2: Locate the 2 screws already screwed into the back of the item and unscrew (keep the screws nearby).

Step 3: Take one hanger and using the screws you just removed, attach the hanger to the mirror.

Step 4: To attach the second hanger repeat steps 1, 2, and 3.

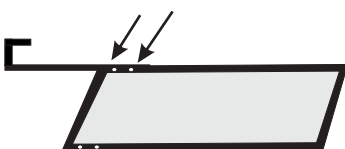

Step 5: Hang on door by placing hangers (screwed into mirror back) over the door (Fig.C).

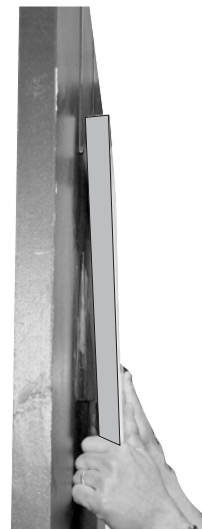

Hang
over the
door once
hangers
are attached
to mirror .
(Fig.C)




ATTACHING MIRROR TO THE WALL

ATTACHING THE WALL HANGERS:

1. Place the door mirror with the mirror side down on a secure flat surface.
2. Locate the 2 screws already screwed into the back of the item and unscrew (keep the screws nearby).
3. Take one hanger and using the screws you just removed, attach the hanger to the mirror LEAVING THE KEYHOLE SHOWING ABOVE THE FRAME.
4. Attach the second hanger repeat steps 1, 2, and 3.


IMPORTANT:
Be sure to use the right hardware for your type of wall. Mollies and special anchors are sometimes necessary for certain walls.

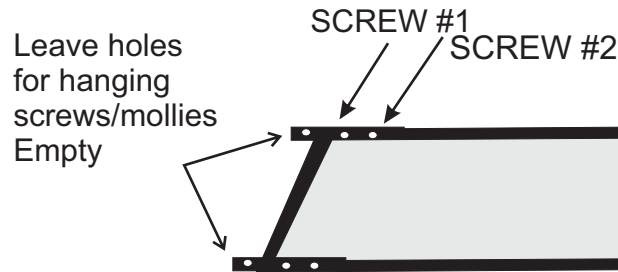

Wall Hangers


Step 1: Using a pencil, mark off a starting area on wall. We recommend that you hang the mirror between 64 to 68 inches from the floor.

IMPORTANT:
Be sure to use the right hardware for your type of wall. Mollies and special anchors are sometimes necessary for certain walls.

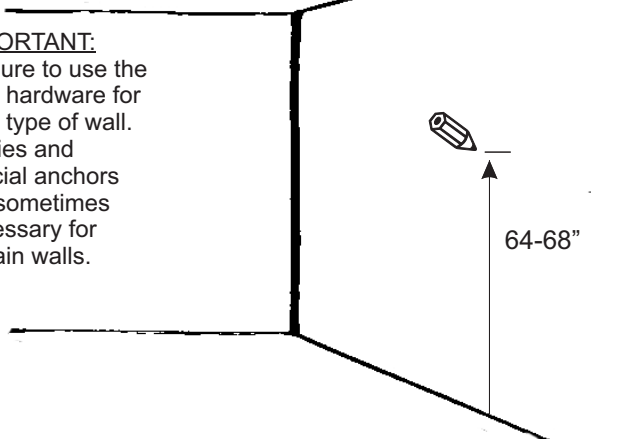


Step 2: Hold the enclosed template on the wall and using a level make sure the paper is straight. Drill through the paper where the holes are marked for

For anchors enclosed you will need 1/4 inch drill bit.

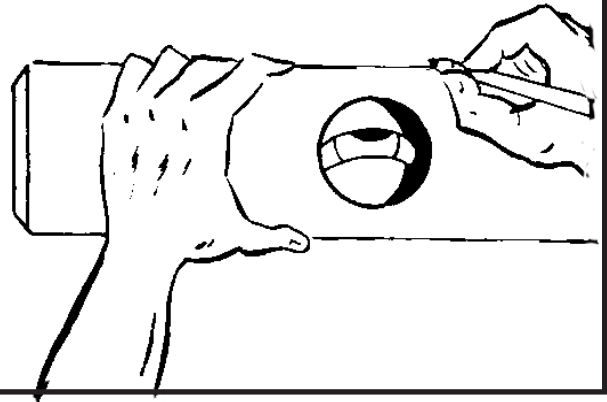

Step 3: Gently hammer mollies into the wall.

Step 4: Using long screws, hold the armoire to the wall and screw in hangers until mirror is secure to the wall.

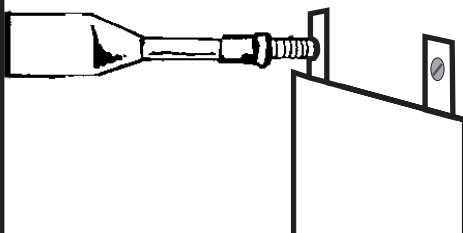

Step 7: Hang unit on screws

Step 8: You are ready to enjoy your mirror.

