




POUR-IN-PLACE BLOCK VENTS

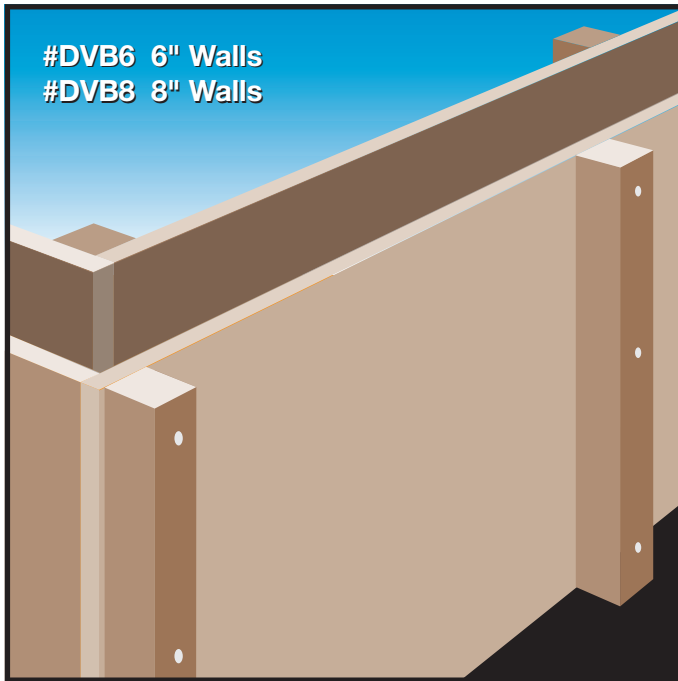


1. Set foundation forms

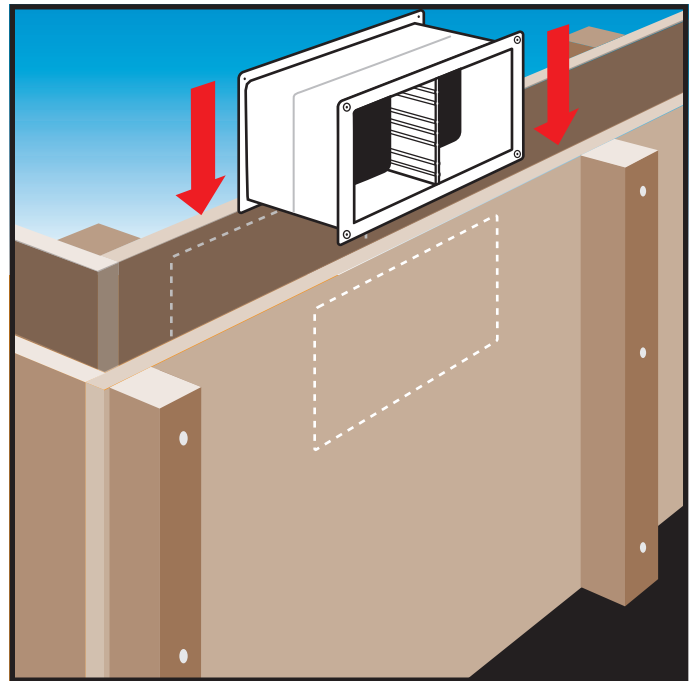

2. Slide block vent into form to the desired depth.

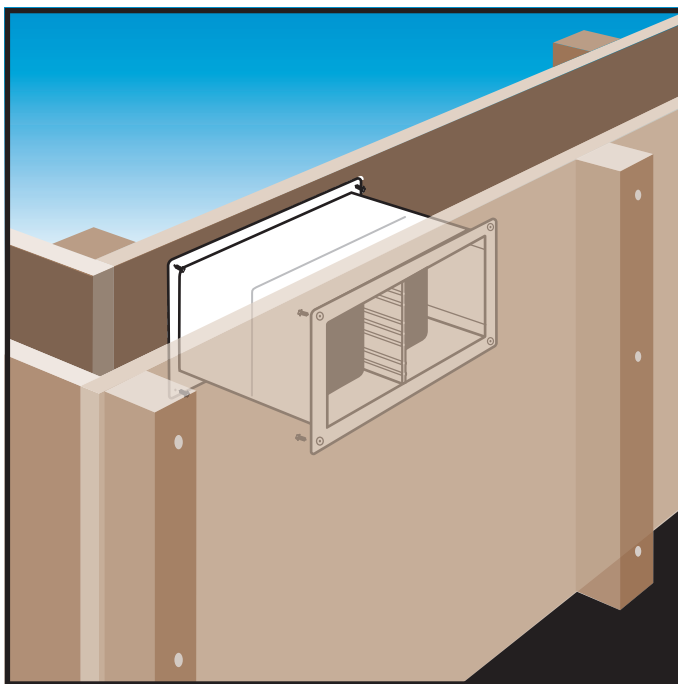

3. Fasten block vent to form using 4 fasteners on each side.

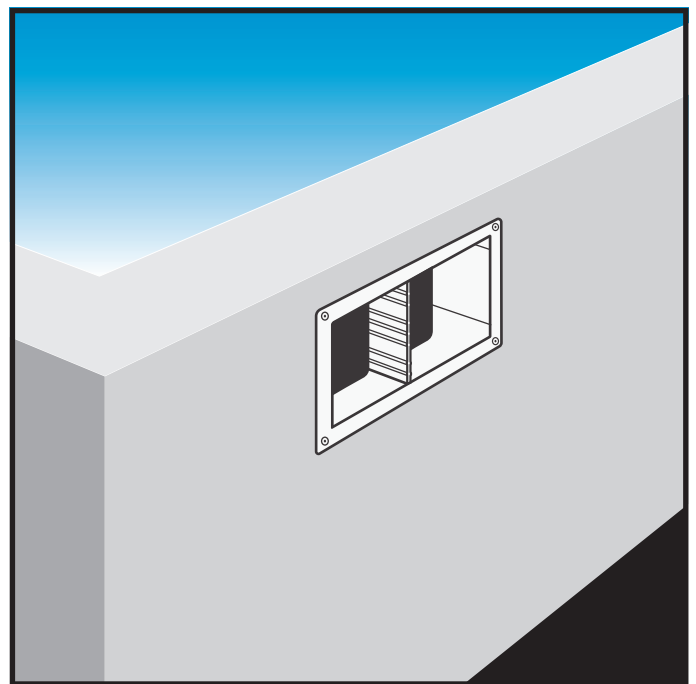

4. Pour concrete as usual. After the concrete has dried, remove the forms.