



Delta Shower Door Measurement Guide

Choosing the right Shower Door is as easy as 1-2-3. But before you customize your dream door, you need to make sure you have the correct measurements.

• **Identify Vertical and Horizontal Openings**

Height (A) and Widths (B). Widths (B) measurements are often not the same so doors can be adjusted up to 3/8".

• **Vertical Opening**

Measure from the top of the tub apron or the top of the threshold up to the top of the acrylic (or tile) surround wall.

• **Horizontal Opening**

Measure width of opening at the top and the bottom of the enclosure.

• **Sill Width**

Measure the depth of the sill for installation. Each track style is has different sill depth requirements:

Traditional: 2"

MOD 6mm: 2-3/4"

Contemporary: 2-7/8"

MOD 10mm: 3"

• **Pivot**

- Fits doors with opening minimum/maximum of 27 in. to 30 in. (69 cm to 76 cm), with 64-3/4 in. (164 cm) of height.
- Needs clearance of 6+ inches above the top plate.

• **Traditional**

- Shower Door have two options. One with an opening minimum/maximum of 50-1/8 in. to 59-3/8 in. (127 cm to 151 cm) , with a 70 in. (178 cm) height. The second with a minimum 43-3/8 in. to maximum 47-3/8 in. (110 cm to 120 cm) opening, with a 70 in. (178 cm) height, walk-in width of 15-27/32 in. to 19-27/32 in. (40 cm to 50 cm).
- Bathtub Doors fit with an opening minimum/maximum of 50-1/8 in. to 59-3/8 in. (127 cm to 151 cm), with a 58-1/8 in. (148 cm) height.
- Needs clearance of +2 inches above the final track height.


• **Contemporary Tub:**

- Shower Doors fit with an opening minimum/maximum of 50-1/8 in. to 59-1/2 in. (127 cm to 149 cm) , with a 71 in. (180 cm) height.
- Bathtub Doors fit doors with an opening minimum/maximum of 50-1/8 in. to 58-1/2 in. (127 cm to 149 cm), with 58-3/4 in. (149 cm) of height.
- Needs clearance of +(3/4) inches above the final roller height.


• **Mod Tub**

- Shower doors fit with a minimum opening of 50-1/8 in. to a maximum of 58-1/2 in. and a height of 71-1/2 in .
- Bathtub door fit doors with a minimum opening of 50-1/8 in. to a maximum of 58-1/2 in. and a height of 59-1/4 in.
- Needs clearance of +2 ^{3/4} inches above the final track height.

Pivoting Shower Doors

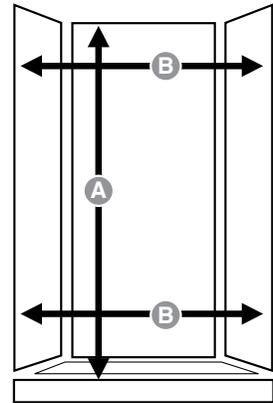

Sliding Tub Doors

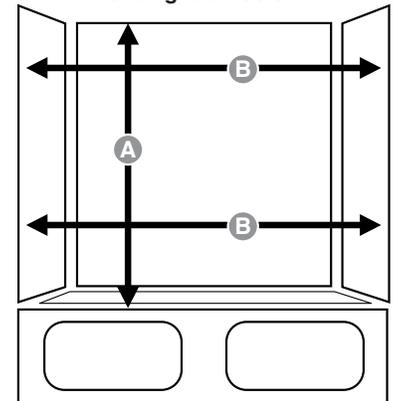

NOTE: the height will be different for shower doors vs. bathtubs.

RECORD DIMENSIONS BELOW

	Opening
Height (A):	
Width of widest point (B):	
Width at narrowest point (B):	

****Disclaimers**

- For ceramic tile application, use the top of the tile for the maximum door height.
- In older homes the opening at the top is often wider than the bottom due to an out-of-plumb condition.
- NOTE: All Delta Shower Doors are designed to accommodate out-of-plumb conditions totaling 3/8".

Need Additional Assistance with Delta Shower Doors?

Call us at 1.800.964.4850

Visit us at www.deltashowerdoors.com

Email us at customersolutions@deltashowerdoors.com