



PURE GARDEN

PATIO AND GARDEN ESSENTIALS

TWIN WHEEL GARDEN WHEELBARROW


ASSEMBLY AND OPERATING INSTRUCTIONS



**Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.**


<p>1  X 8 8X50 BOLTS & NUTS</p>	<p>6  x1 WHEEL BRACE</p>
<p>2  x2 WASHER</p>	<p>7  x1 TRAY</p>
<p>3  x2 PINS</p>	<p>8  x1 LEG BRACE</p>
<p>4  x1 HANDLE</p>	<p>9  x1 AXEL</p>
<p>5  x2 LEG</p>	<p>10  x2 WHEEL</p>

Figure 1

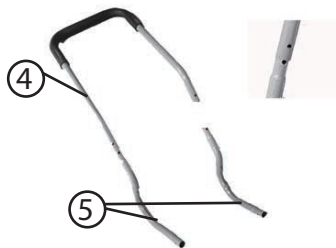

Insert 2 legs (5) into handle (4) lining up holes. Do not connect with bolts and nuts (1) until top tray is attached.

Figure 2

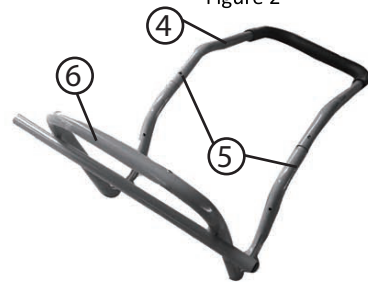

Insert wheel brace (6) onto legs and handle assembly from Figure 1. as shown in Figure 2. Attach with 2 bolts and nuts (1)

Figure 3 Assembled frame from Figure 2



Attach the poly tray (7) to the frame assembly from Figure 2 using 4 bolts and nuts (1) as seen in Figure 3. Note: Insert the bolts into the tray and into the frame so the bolt heads face up, to the inside of the tray.

Figure 5




Slide 2 wheels (10) onto the axel.


Figure 4



Insert axel (9) through the axel cylinder of the wheel base (6)

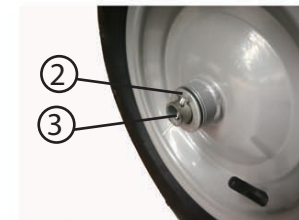

Then slide 2 washer (2) onto each end of the axel outside the wheel, and insert a pin (3) through the hole on the axel end. then bend the pins.

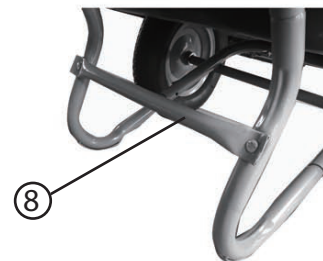

Assemble leg brace (8) with bolts and nuts



Tighten all bolts and nuts. Check periodically to tighten as needed.