
## **CONNECT OPEN CUBE**





## Included



8 Alignment Pins 4 connectors pins

2 Vertical zBoards adhesive strips on 2 edges




1 Backer Board thin and has no adhesive

2 Horizontal zBoards with grooves



## **Important**

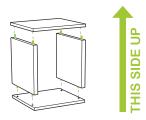

Tip Start assembly from bottom to top.


DO NOT place unit on its side or back as it will compromise its structural integrity.





- · Assemble your unit on a flat even surface, carpet not recommended
- Furniture is for indoor use only




• Make sure zBoard surfaces are clean and dry






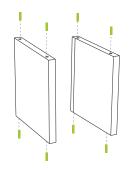


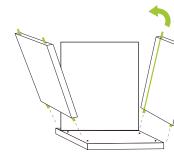



Carefully remove the 3M protective layer from adhesive.





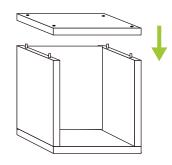





Join other connect cubes with connector pins! Visit links below for more details. Enjoy building possibilities!

> Note Use included decals to cover the connector holes if not stacking cubes.







