

GIBRALTAR BUILDING PRODUCTS

INSTALLATION GUIDELINES


LEAD PIPE FLASHING

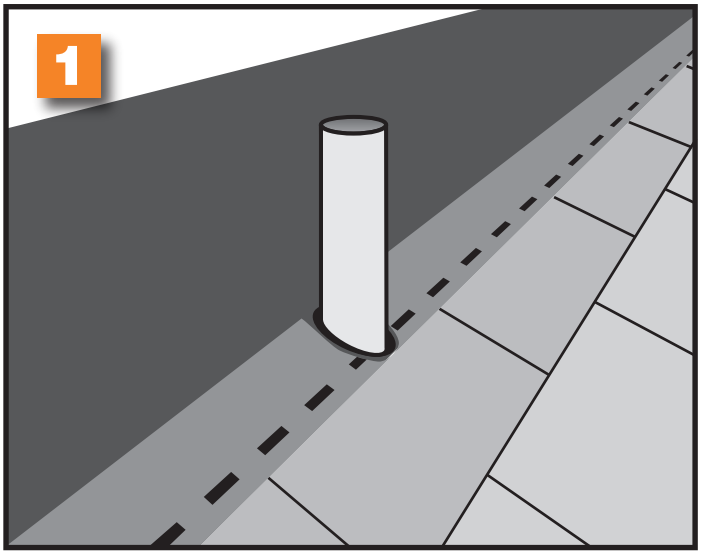


1. Shingle up to the roof penetration.

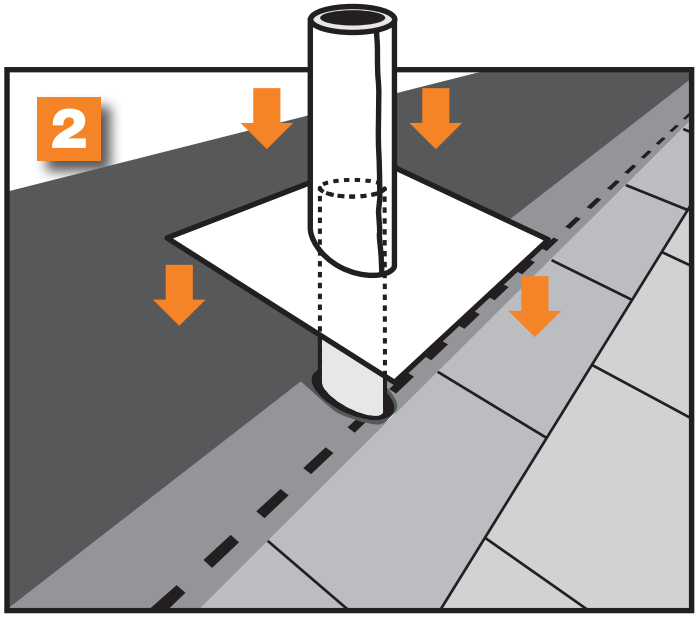

2. Slide flashing over the vent pipe and secure with roofing nails. The lead pipe flashing should be at least 1.5" taller than the exposed vent pipe.

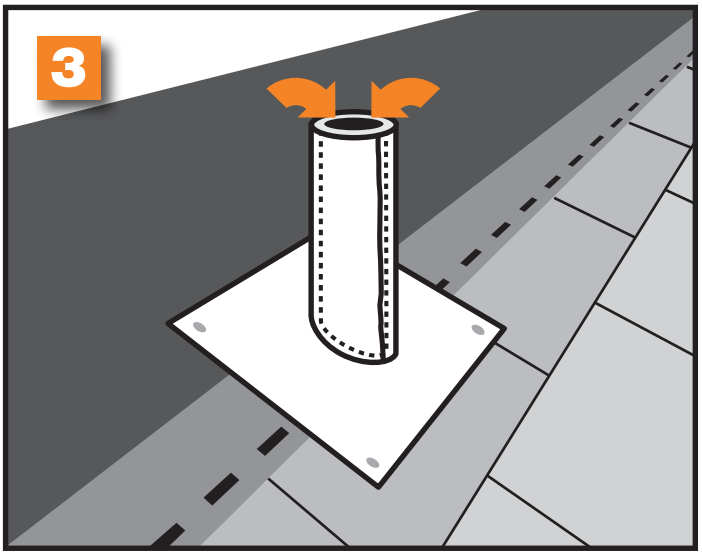

3. Roll the top of the lead pipe flashing into the vent pipe to create a long lasting water resistant seal that is finished in appearance.

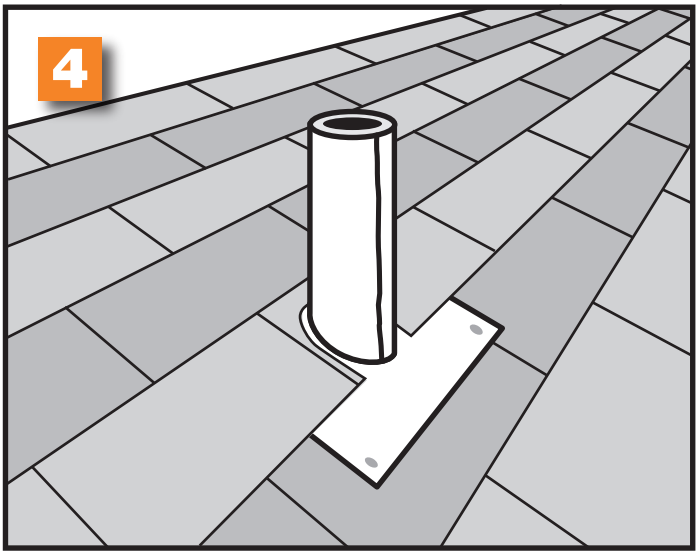

4. Continue shingling above the vent pipe. Apply roofing mastic to the top of the flange before installing upper side shingles.

CAUTION!

Working above grade is inherently dangerous, be sure that proper fall protection measures are in place.
When working with power tools and sheet metal, gloves and eye protection are absolutely required.

These basic installation guidelines are for use with typical or standard applications. It is always recommended to seek advice from a licensed professional, and to check with your local building inspector or building permit office for approvals and possible variations that may apply.