





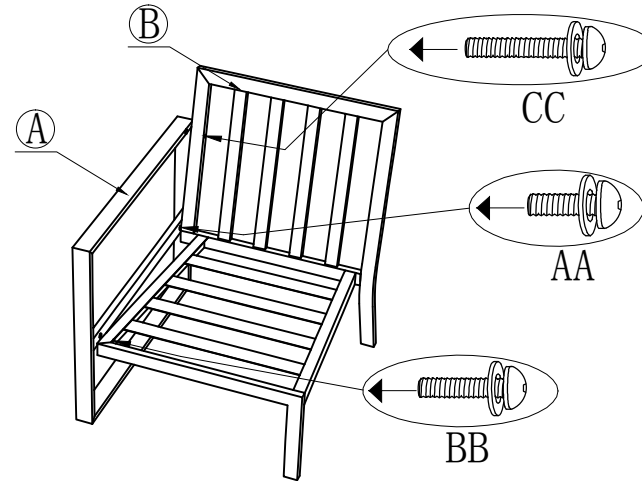


Assembly Instruction

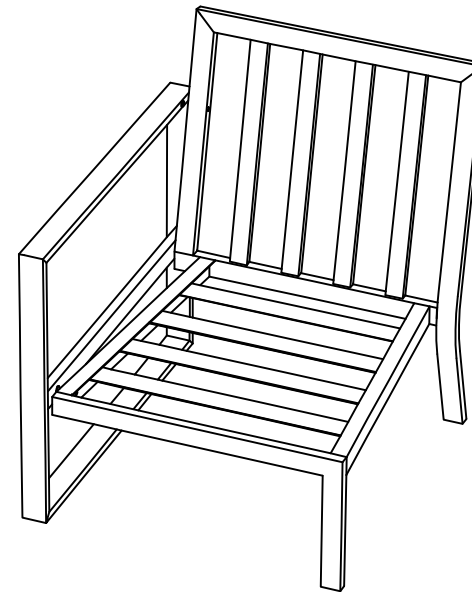
EQ6280

NO.	PART LIST	DESCRIPTION	Q/TY PCS
A		RIGHT ARMREST	1PC
B		SEAT	1PC
AA		BOLT M6X15	1PC
BB		BOLT M6X40	1PC
CC		BOLT M6X55	1PC
DD		Hex Wrench	

(1)



(2)



Note:do not tighten bolts until all parts are connected