



5-Shelf Steel Shelving Unit

MODEL NUMBER (s):

UR185L-BLK UR245L-BLK

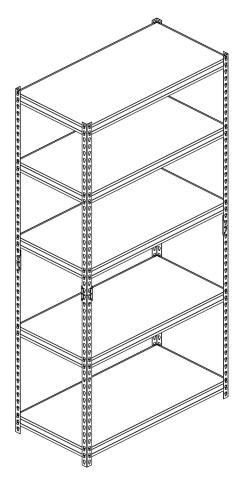

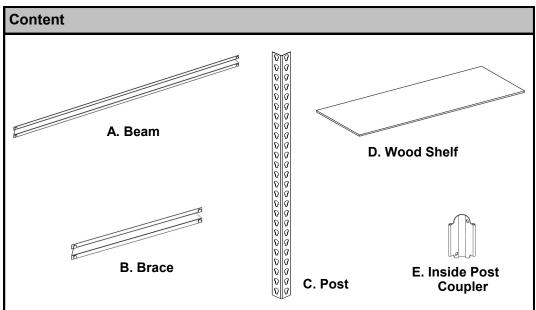

Parts List UR-185BLK 36"W x 18"d x 72"h		
Description	Qty	Part Number
A. beam	10	URBM36-BLK
B. brace	10	URBR18-BLK
C. post	8	URPS36-BLK
D. wood shelf	5	RPB31836
E. inside post coupler	4	CPIN-BLK

Parts List: UR-245BK 48"w x 24"d x 72"h			
Description	Qty	Part Number	
A. beam	10	URBM48-BLK	
B. brace	10	URBR24-BLK	
C. post	8	URPS36-BLK	
D. wood shelf	5	RPB32448	
E. inside post coupler	4	CPIN-BLK	

Safety Instructions

These units should be placed on a level surface. Failure to do so can result in poor product performance or create a possible safety hazard. This unit should be securely anchored to a wall or floor with suitable fasteners, which are not included, to prevent tipping. Do not use this unit for anything other than the manufacturer's intended purpose. **DO NOT CLIMB, STAND ON ANY PART OF THE UNIT, OR USE IT AS A LADDER.** Do not exceed weight capacity limit as stated. Evenly distribute the weight on each level and always keep the heavier loads on the bottom. Use care when working with metal parts, wear gloves for protection. Failure to follow these guidelines can result in property damage and personal injuries. Keep this manual for future reference.

General Instructions

Assembly is done with the rivets of the beams and braces fitting into the slots of the post. A rubber mallet may be used on the beams and braces to seat the rivets properly. A hammer can also be used, providing one uses a cloth or a block of wood between the hammer head and the parts to prevent damage. Tap gently and be sure the rivets are straight and fully engaged.

Should you have any comments, damage, missing parts, or problems with assembly of this unit contact us:
Si tiene algún comentario, daño, piezas faltantes o problemas con el ensamblaje de esta unidad, contáctenos:

Chat: www.edsal.com/chat or www.edsal.com/contact

 \sim

Email: support@edsal.com

П

Phone: 773-475-3131


To obtain replacement parts please provide: Model Number, Part Number & Description, Location Purchased, and Date Purchased Para obtener piezas de repuesto, proporcione: número de modelo, número de pieza y descripción, lugar y fecha de compra.

Edsal Manufacturing Co.


1555 W. 44th Street Chicago, IL 60609

US Patents & Patents Pending Patentes y patentes pendientes de EE. UU.


Rev: C021120

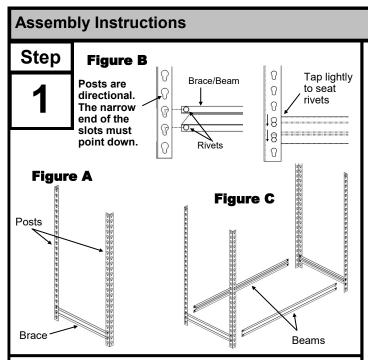


Assemble two (2) post with one (1) brace. Skipping one slot from the bottom of the post (see figure A), place the rivets into post with the narrow end of the slots pointing down, and with the shelf ledge of the brace facing up (see figure B). Tap lightly on the top edge of the brace to seat rivets. Repeat with two (2) post and one (1) brace. Next assemble the two (2) post units with two (2) beams, skipping one slot from the bottom of the post (see figure C). Place the rivets into post with the narrow end of the slots pointing down, and with the shelf ledge of the brace facing up (see figure B). Tap lightly on the top edge of the beam to seat rivets.

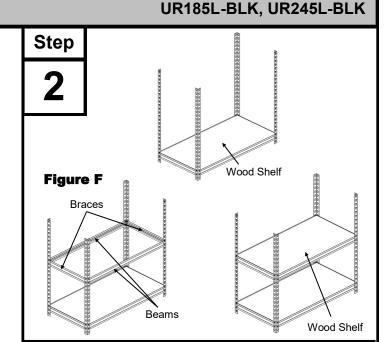

Add a wood shelf to the level previously built, then continue working by adding the second level using two (2) beams and two (2) braces in the post slots of your desired location (see Figure F). Again, place the rivets of the beams and braces into the post slots with the shelf ledge facing up and tap lightly to seat the rivets. Add a wood shelf to the second level.

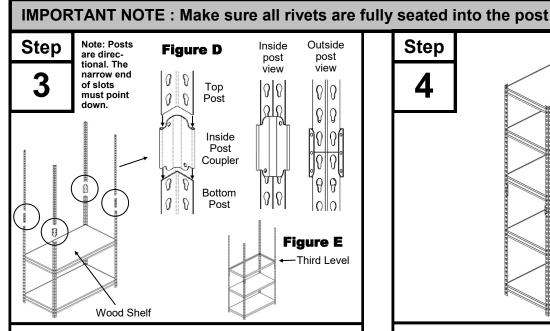

Add a wood shelf to the previously built level, then assemble the top post to the bottom post by using four (4) of the inside post couplers. Place the inside post couplers into the top of the bottom post, and the bottom of the top post and tap down to properly seat (see figure D). Continue by adding the third level using two (2) beams and two (2) braces just above the inside post couplers (see figure E). Again tap lightly to seat the rivets.

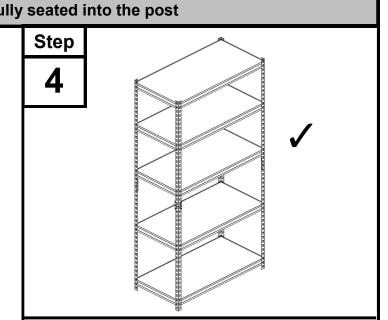

Add a wood shelf to the previously built level, then continue by adding the fourth and fifth level to the unit using two (2) beams and two (2) braces per level. Tap lightly to properly seat the rivets and add the final wood shelves to the unit (see figure E). Do a final inspection to make sure all rivets are securely seated into the narrow ends of the post slots. The assembly is now complete.