


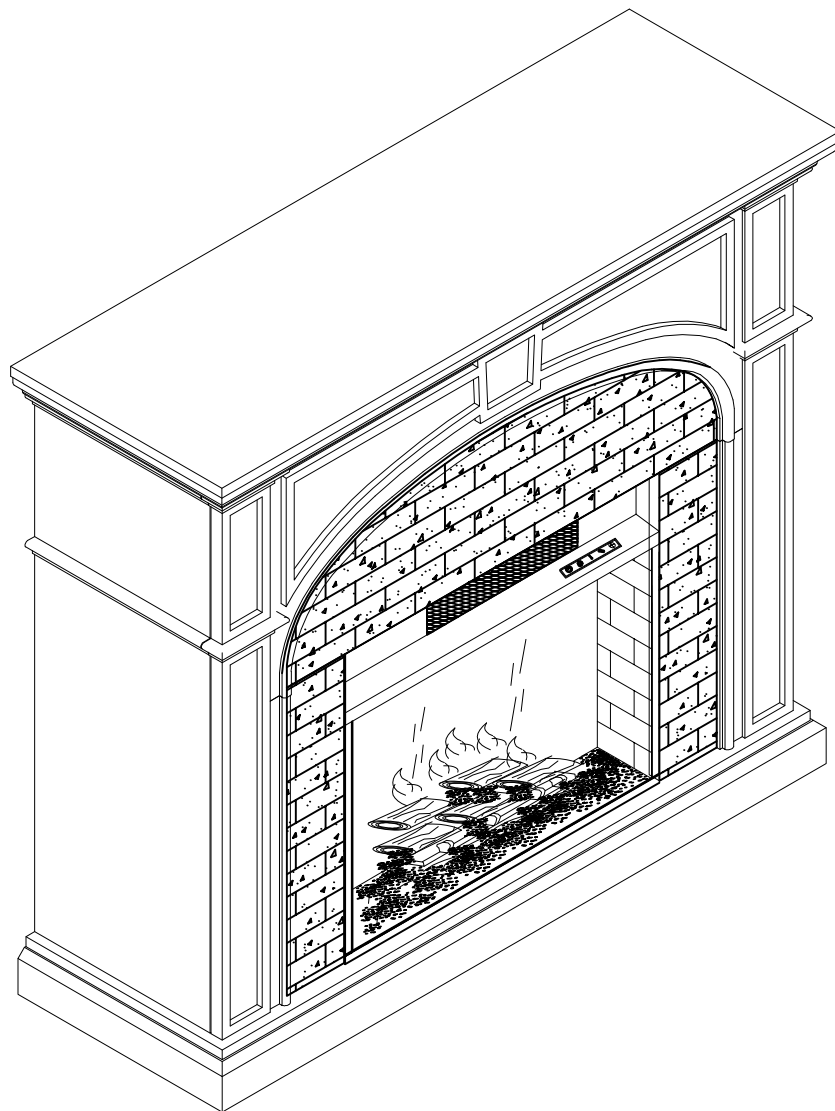
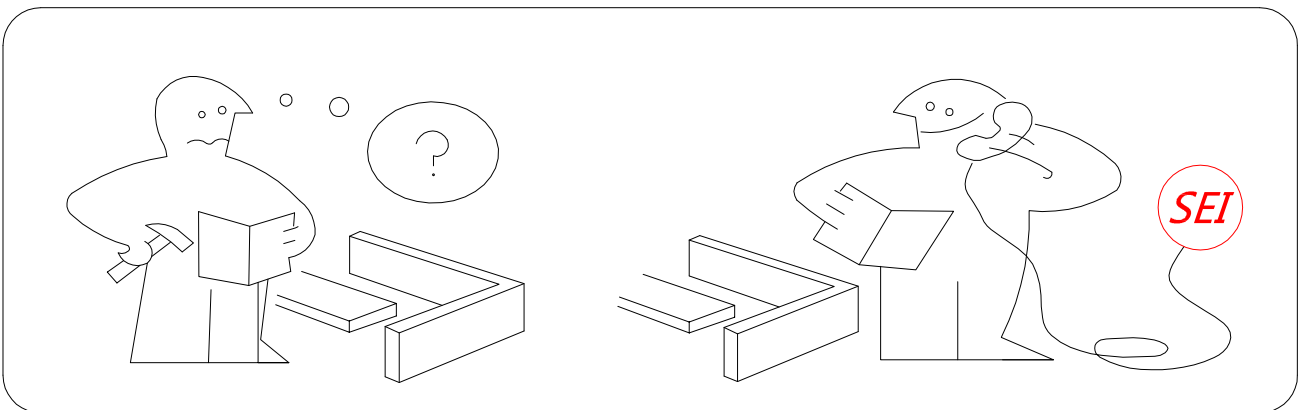
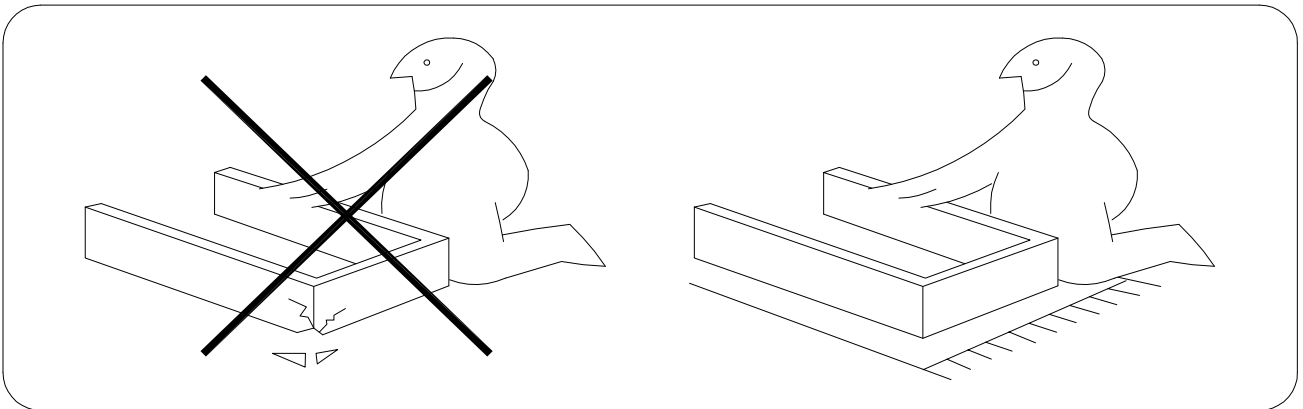


FA962400TX

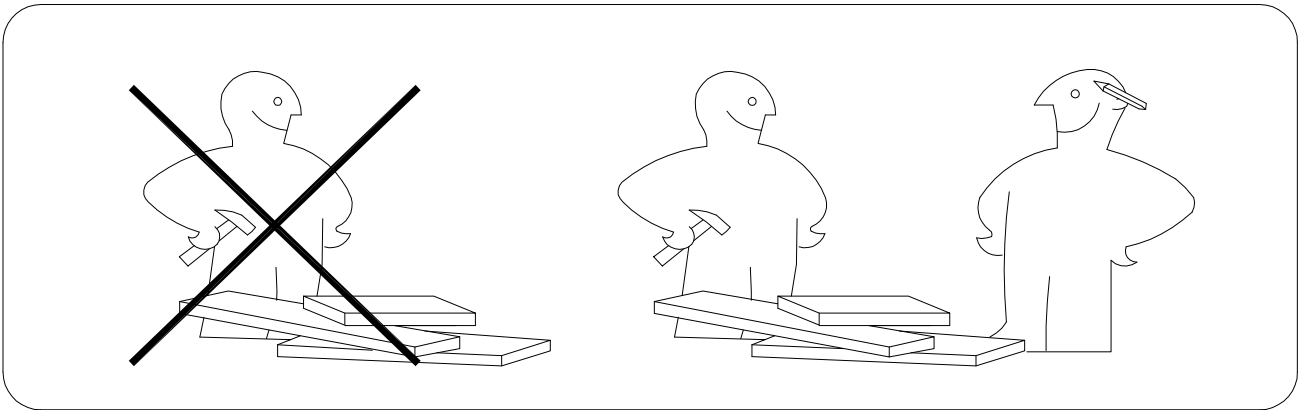


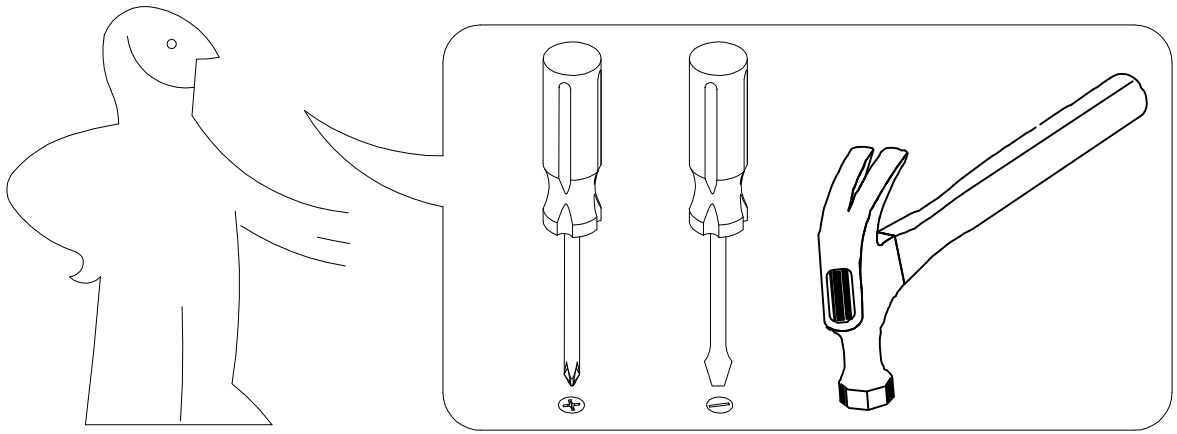


① Top Panel

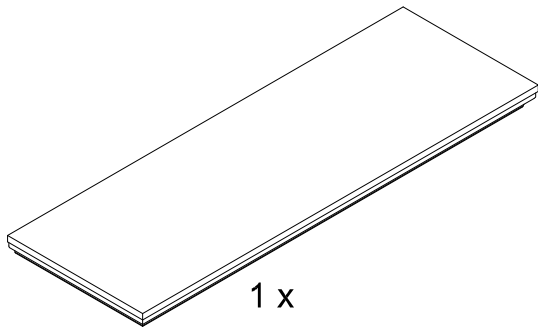


② Bottom Panel

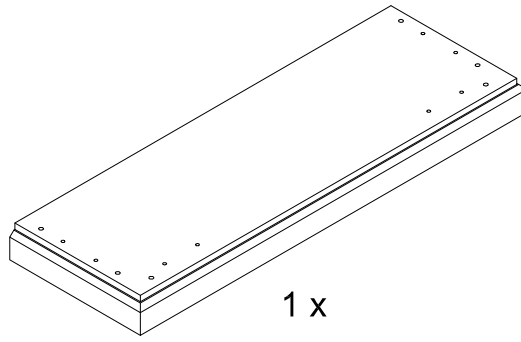


③ Left Front Side Panel

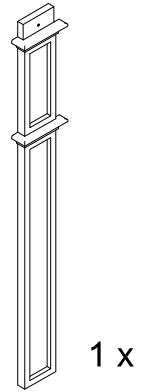


④ Right Front Side Panel

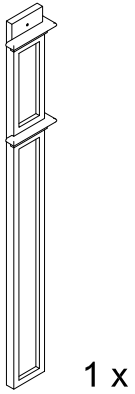


⑤ Left Side Panel

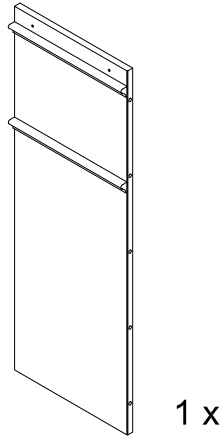


⑥ Right Side Panel

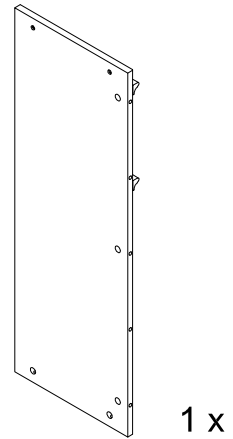


⑦ Middle Front Panel

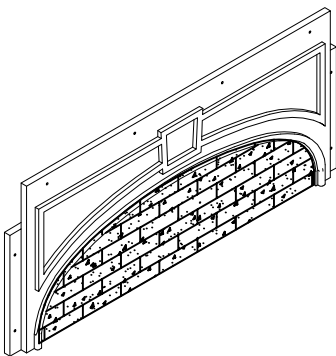


⑧ Left Front Panel



⑨ Right Front Panel



⑩ Wood Blocks

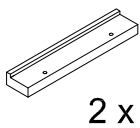

Ⓐ Cam Bolt




16 x

Ⓑ Wood Dowel




14 x

Ⓒ Cam Lock

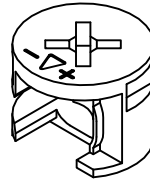


16 x

Ⓓ Screw





24 x

Ⓔ Firebox
(in a separate carton)


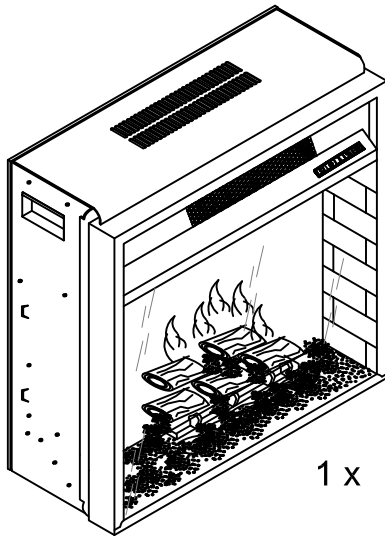


1 x


1

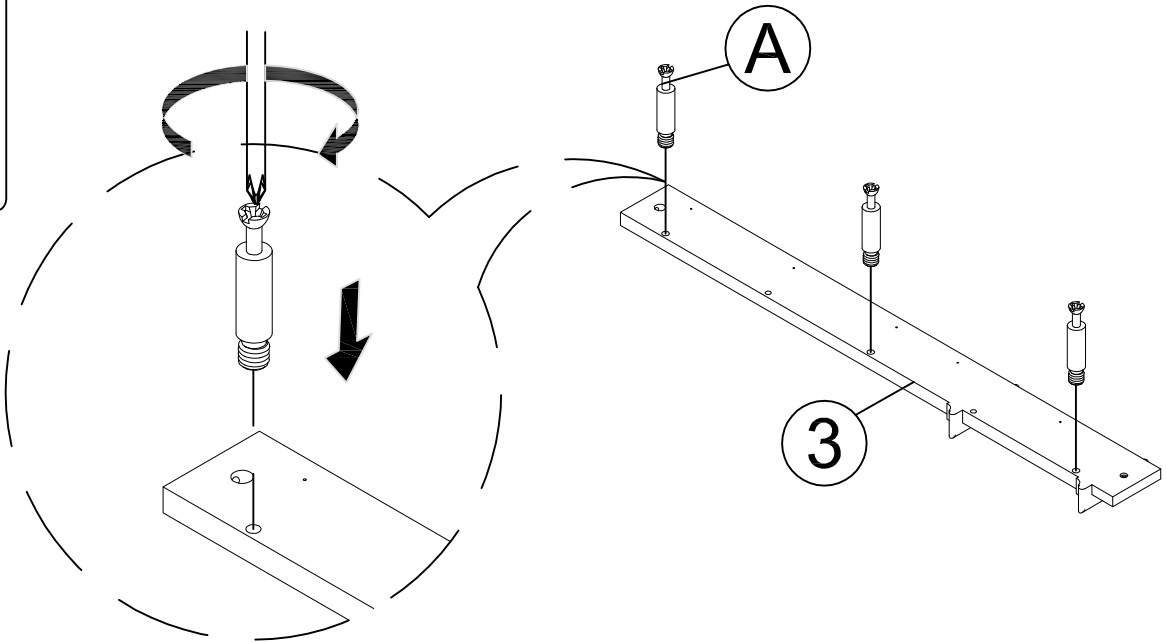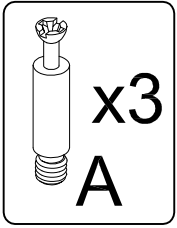


2

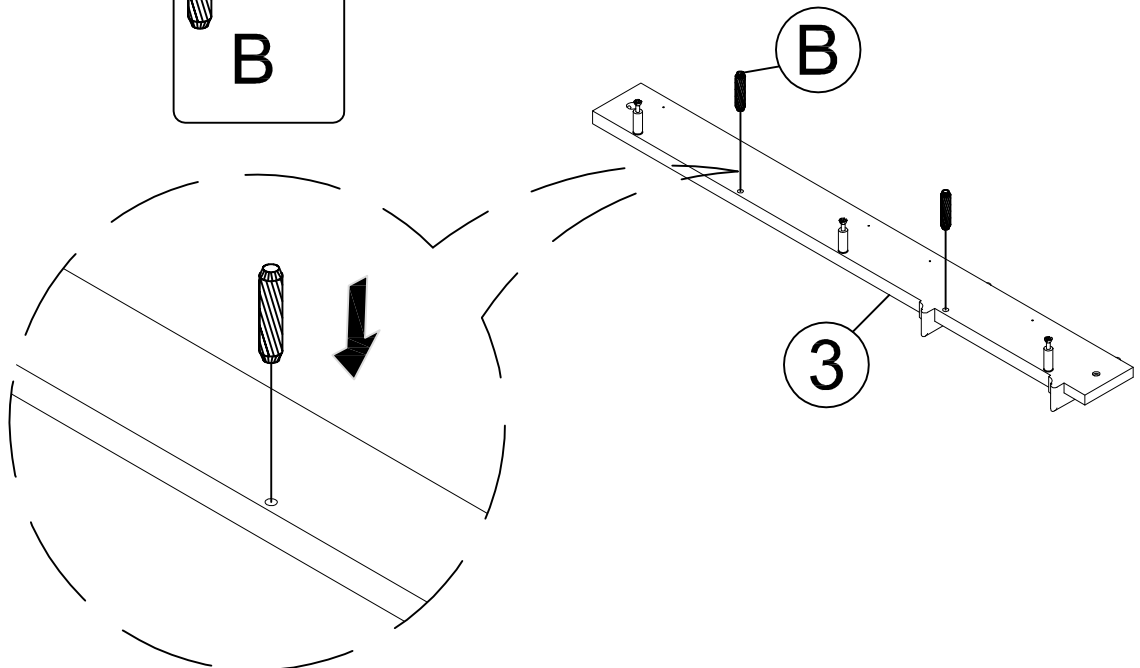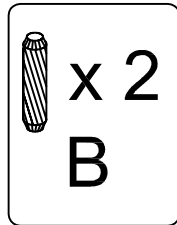


3

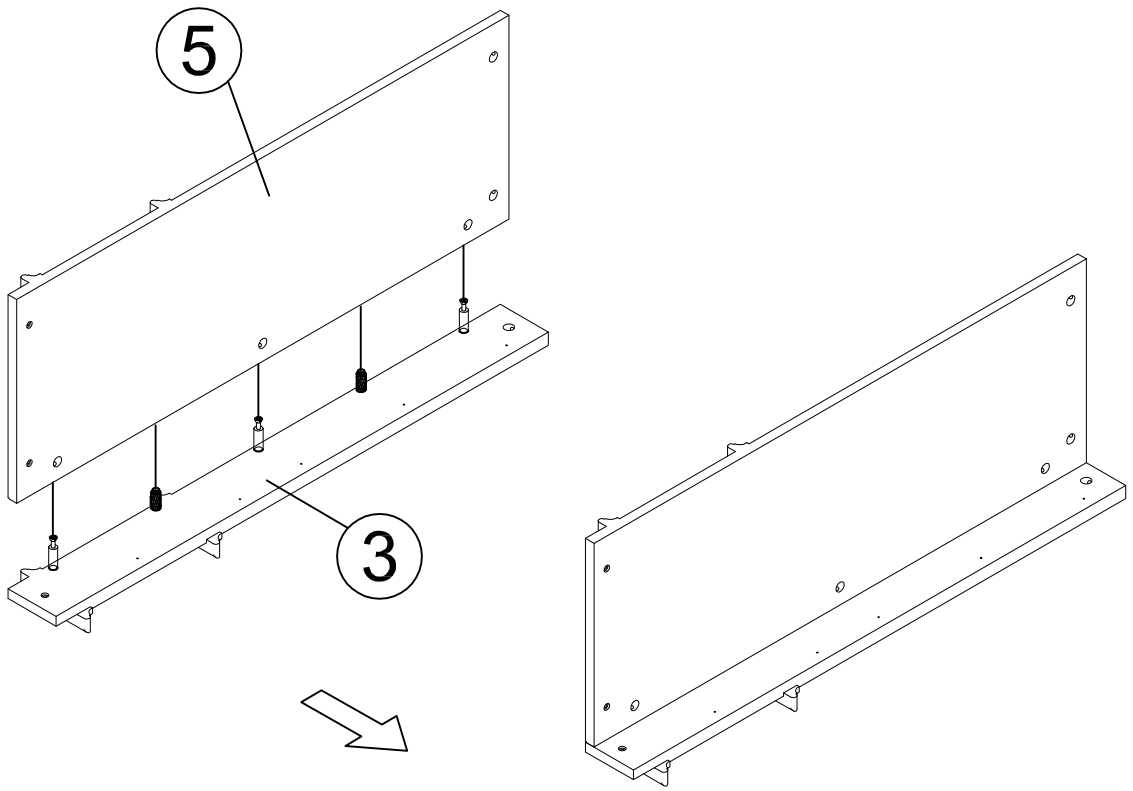


4

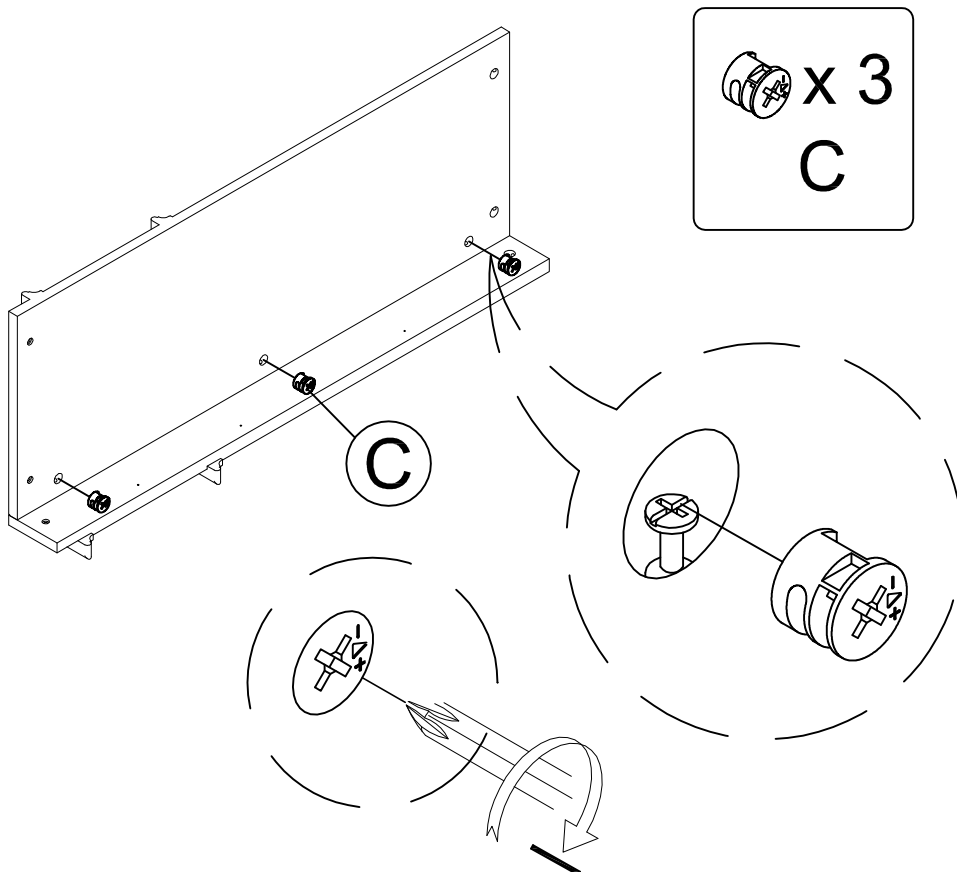


5

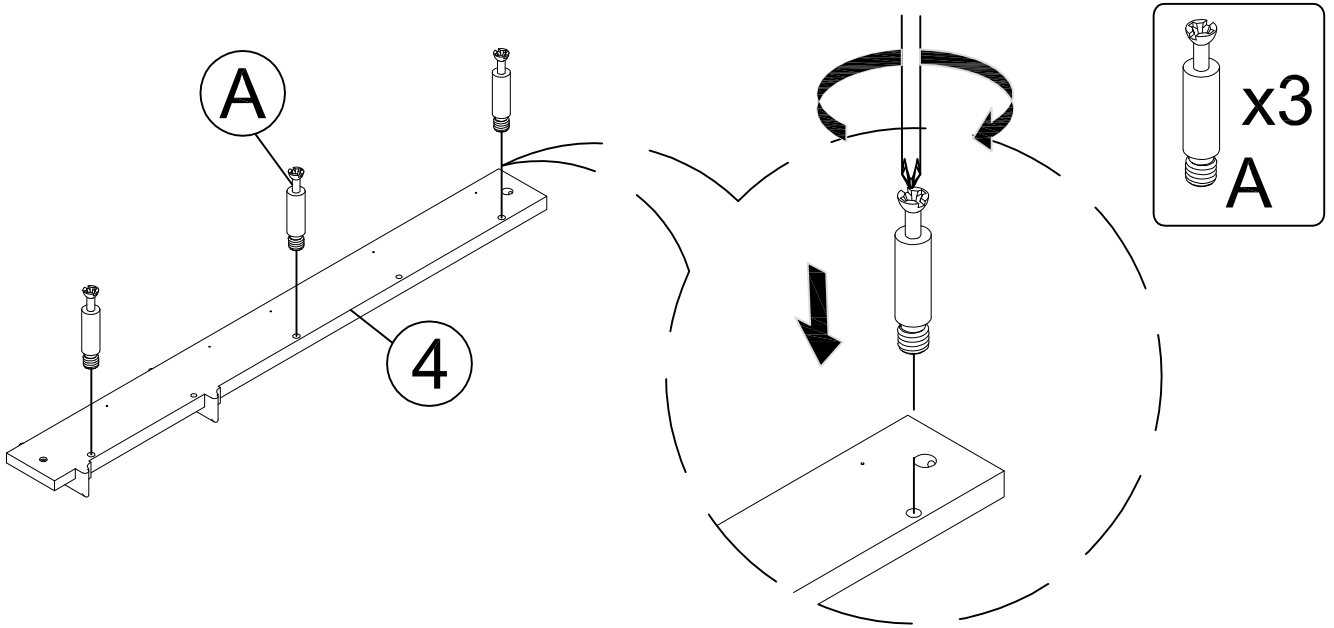


6

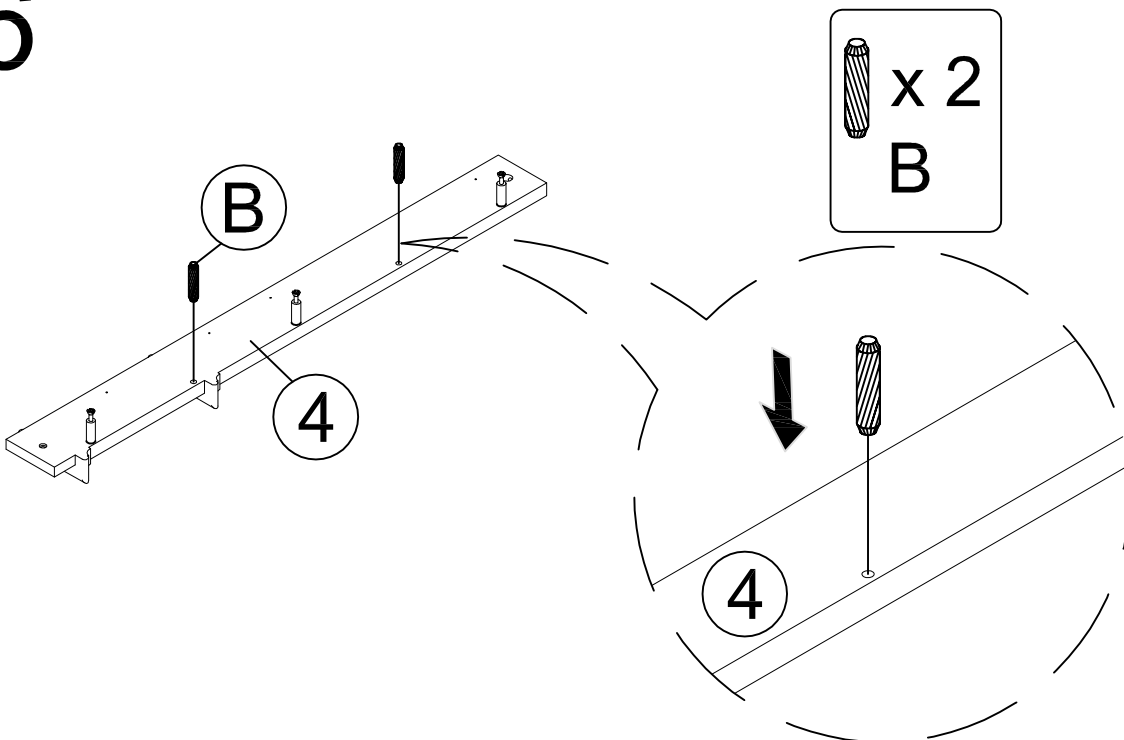


7

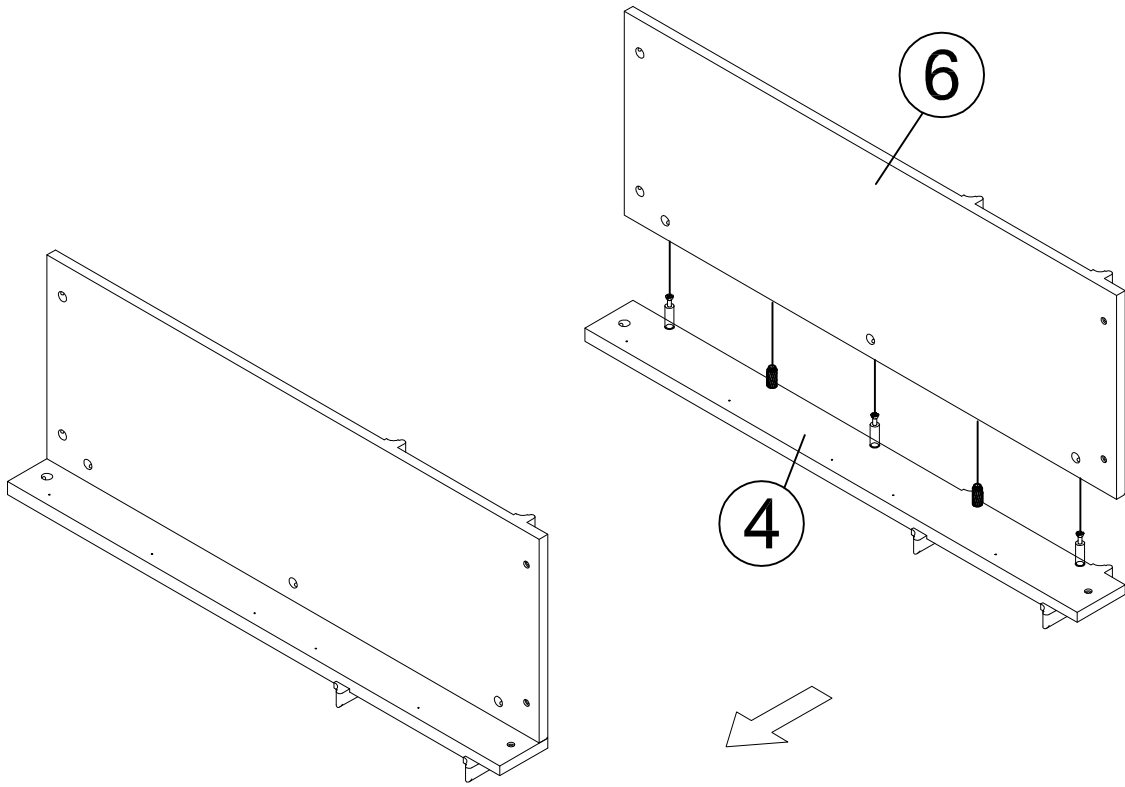


8

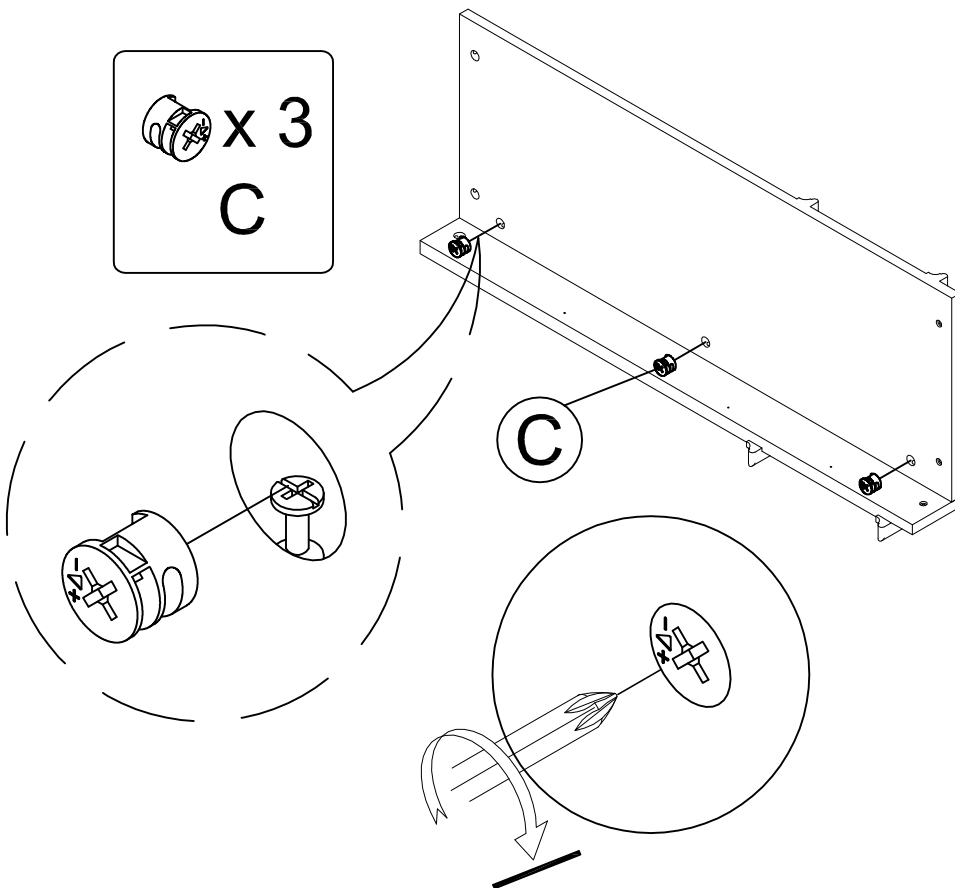


9

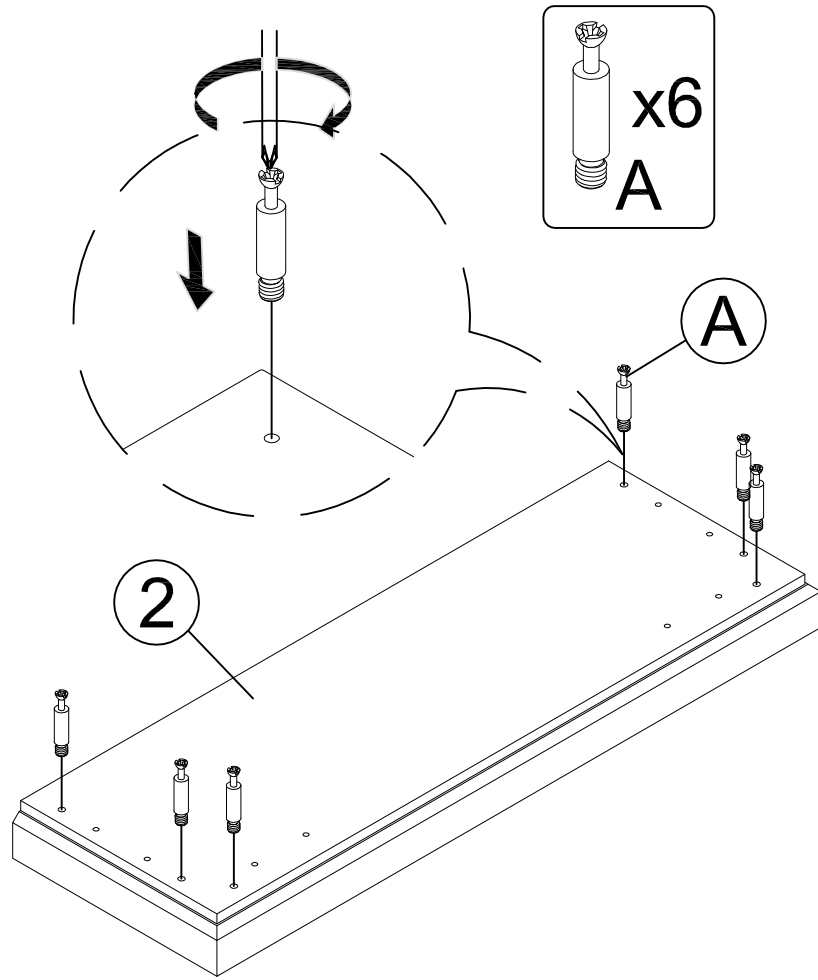


10

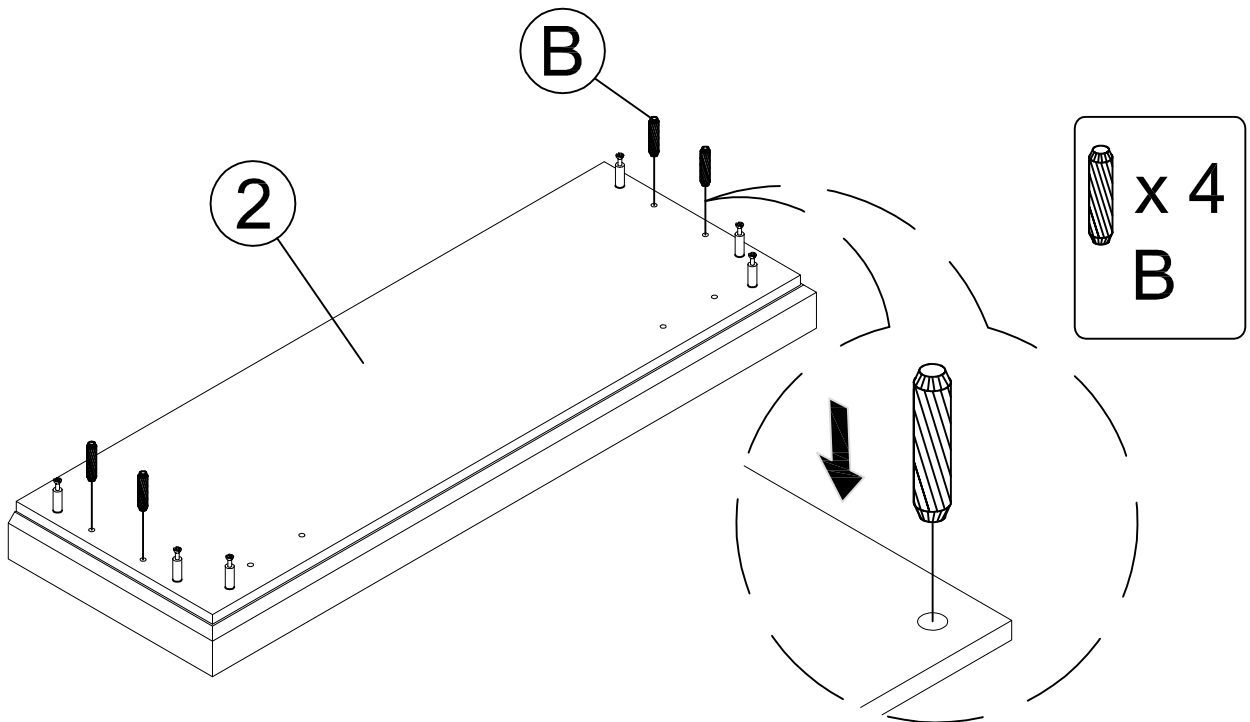


11

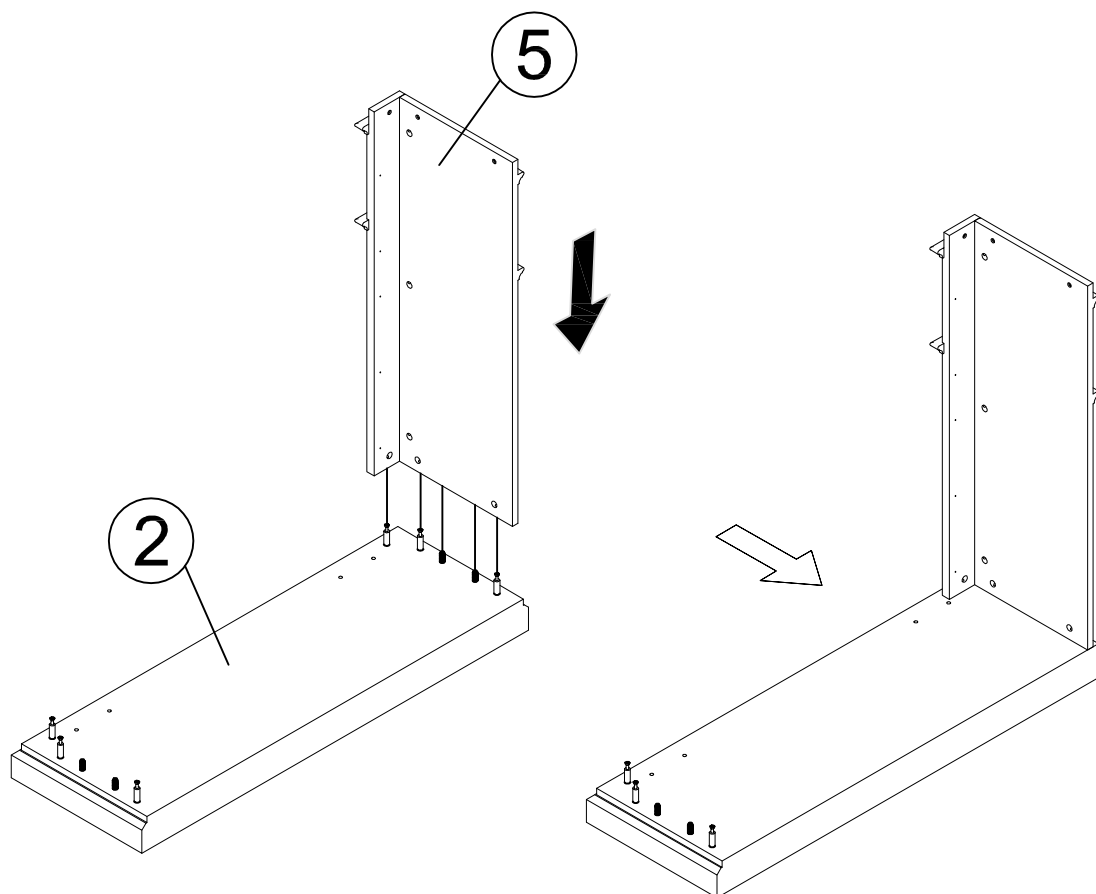


12

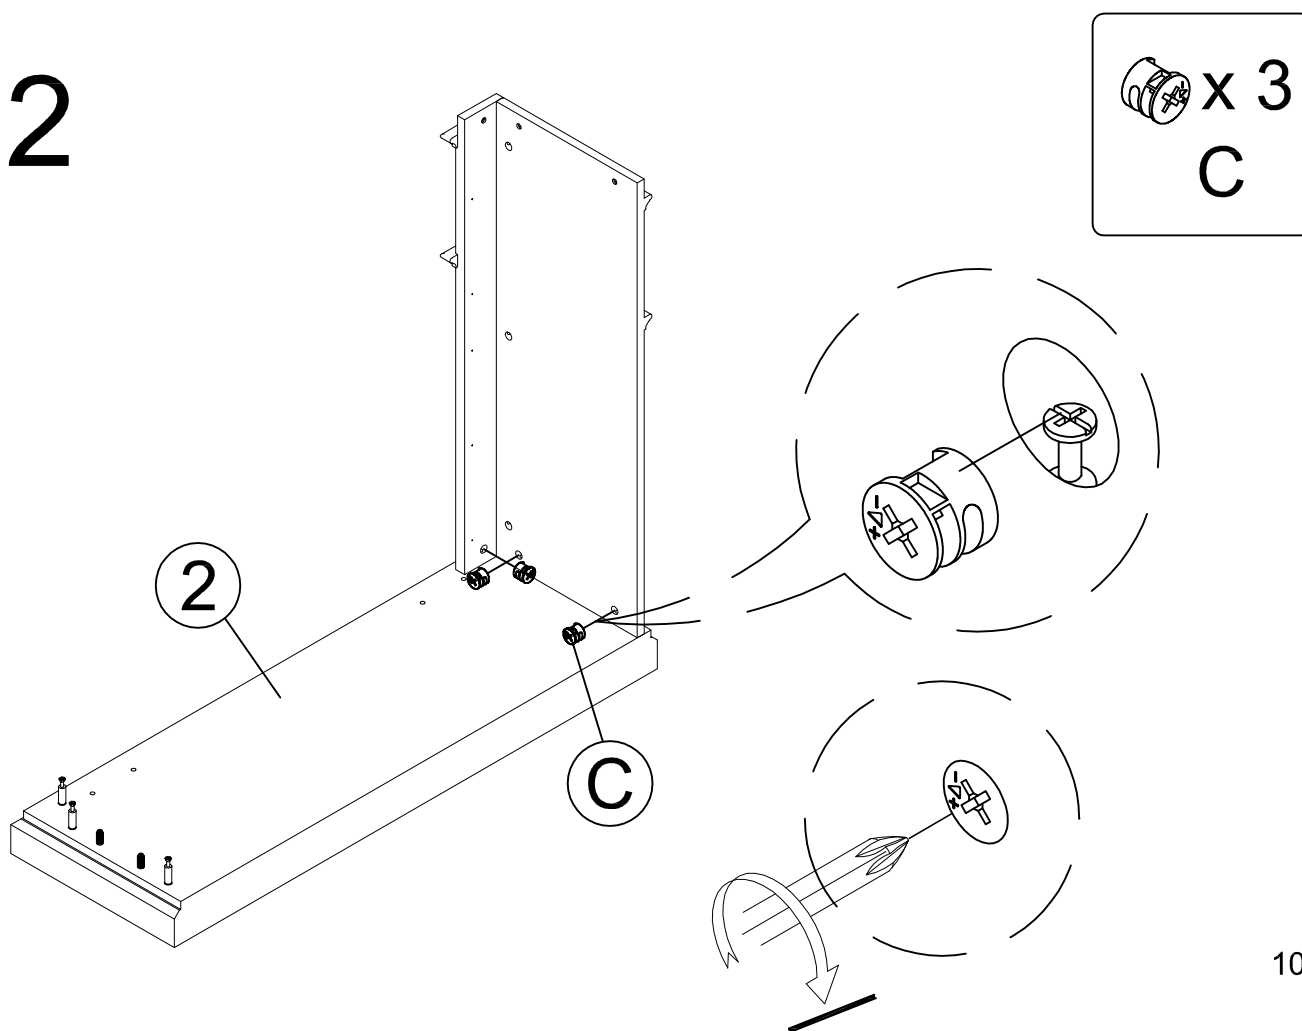


13

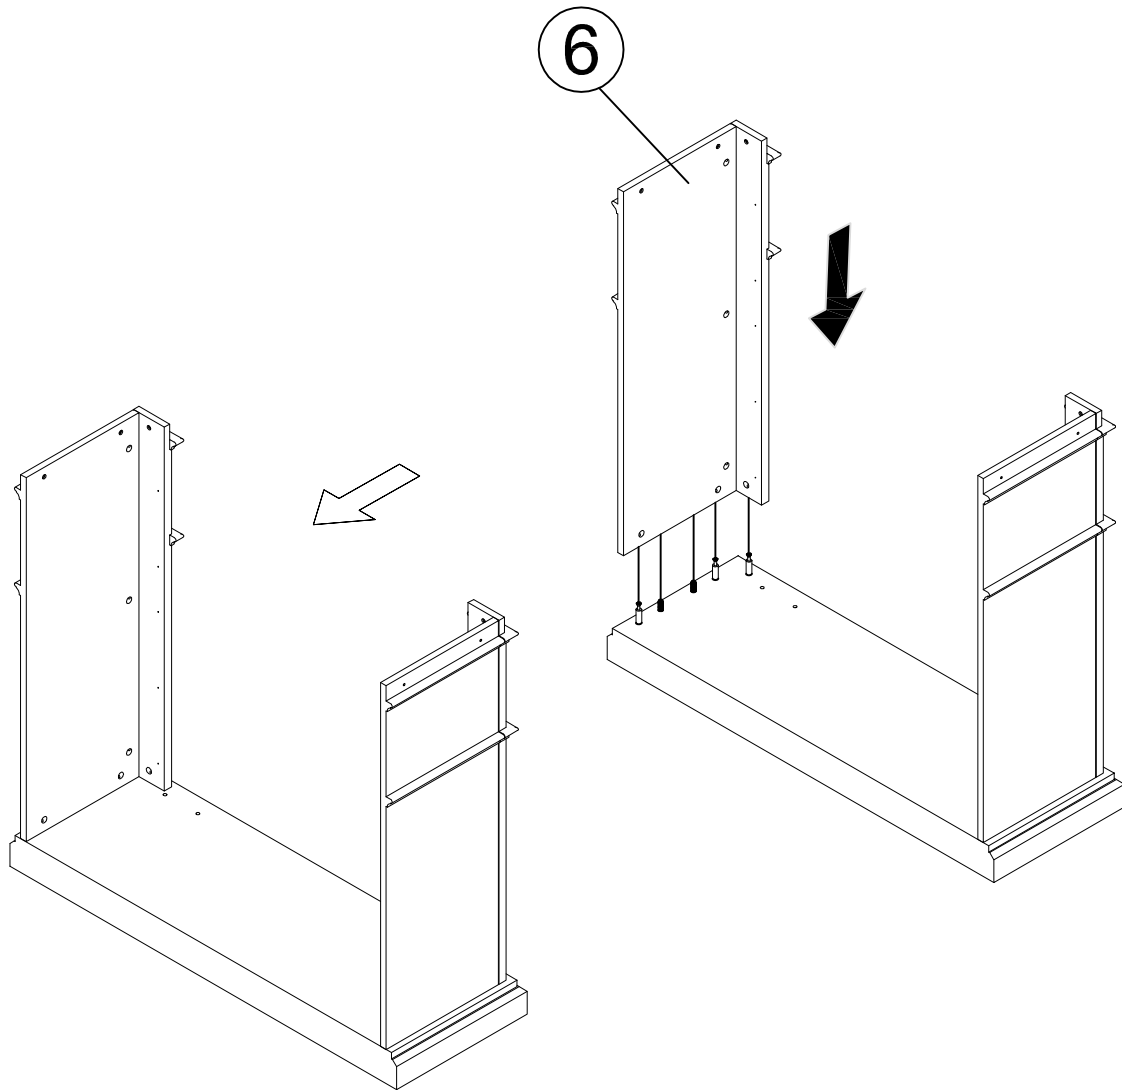


14

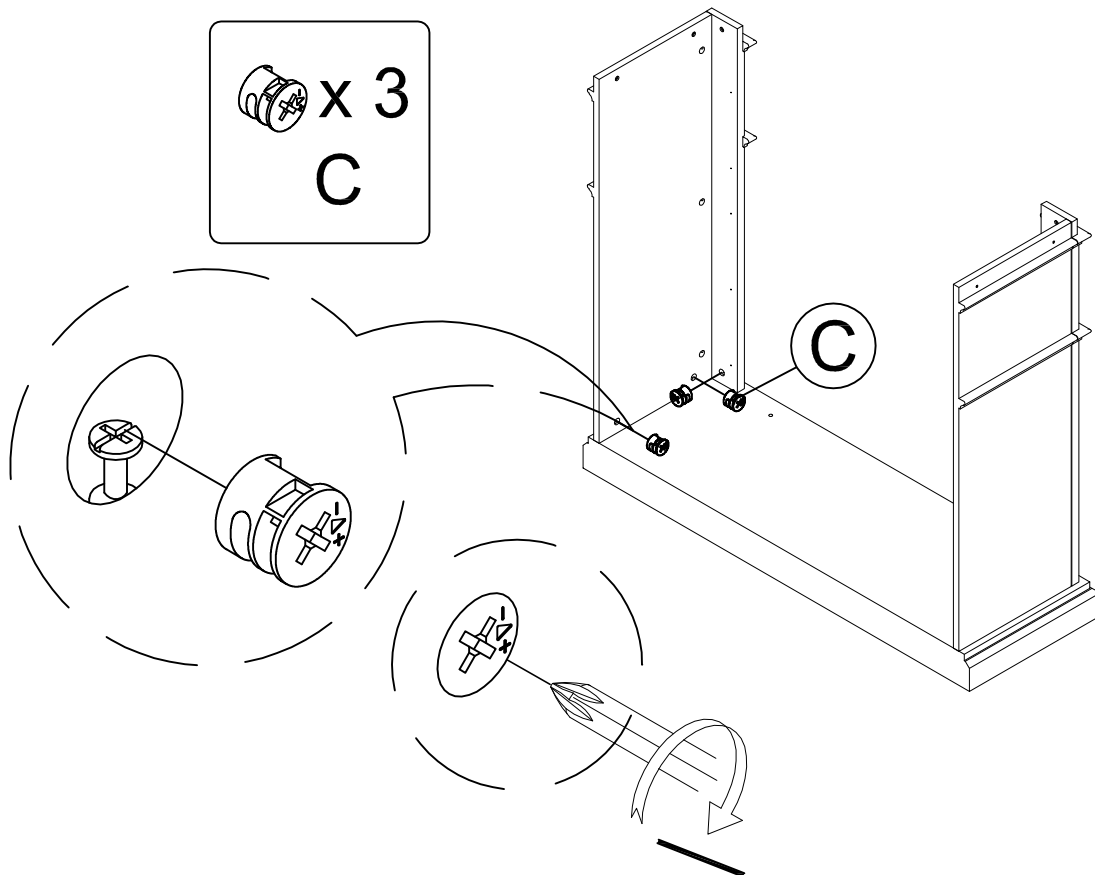


15

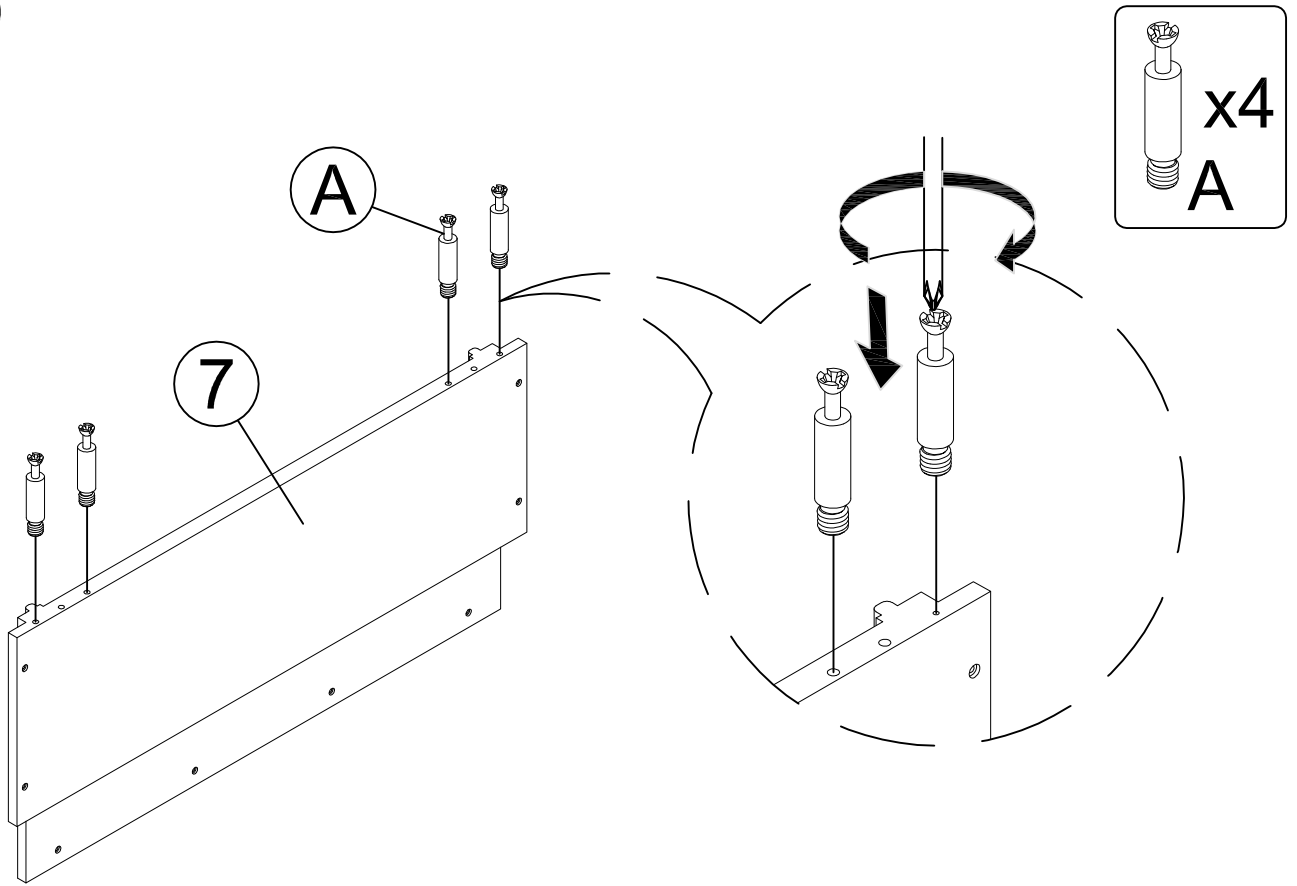


16

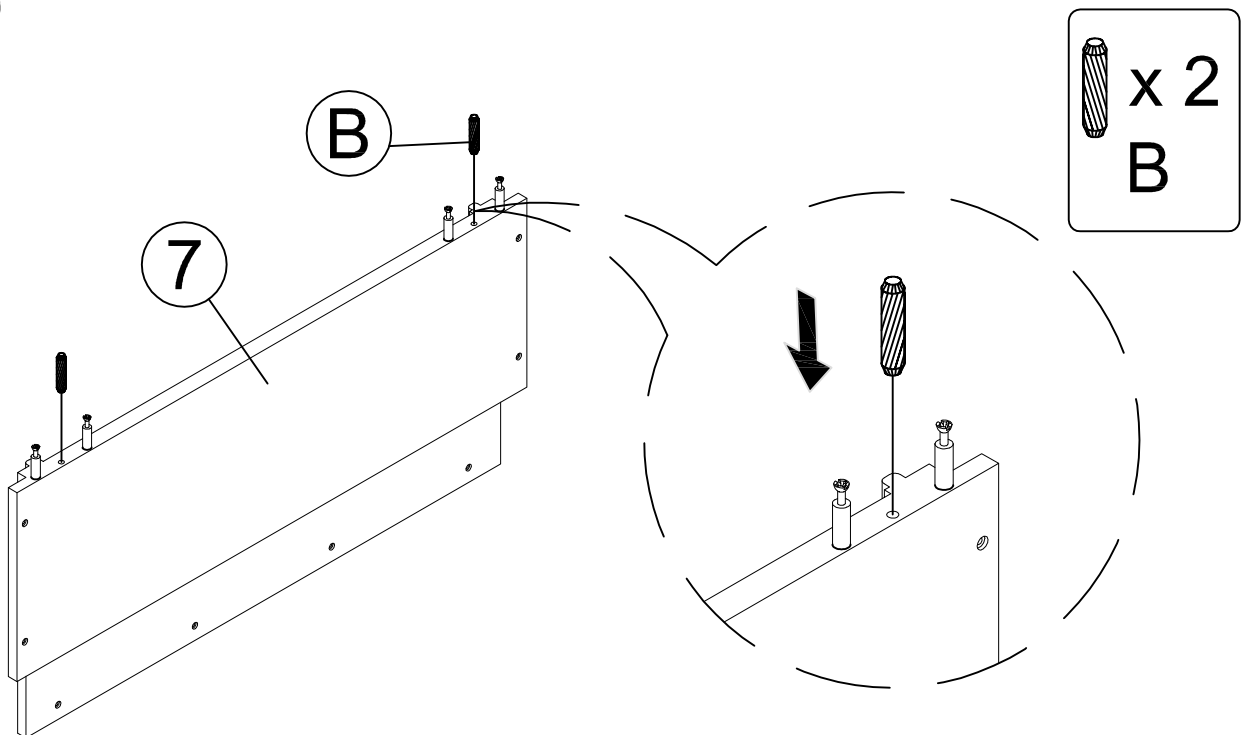


17

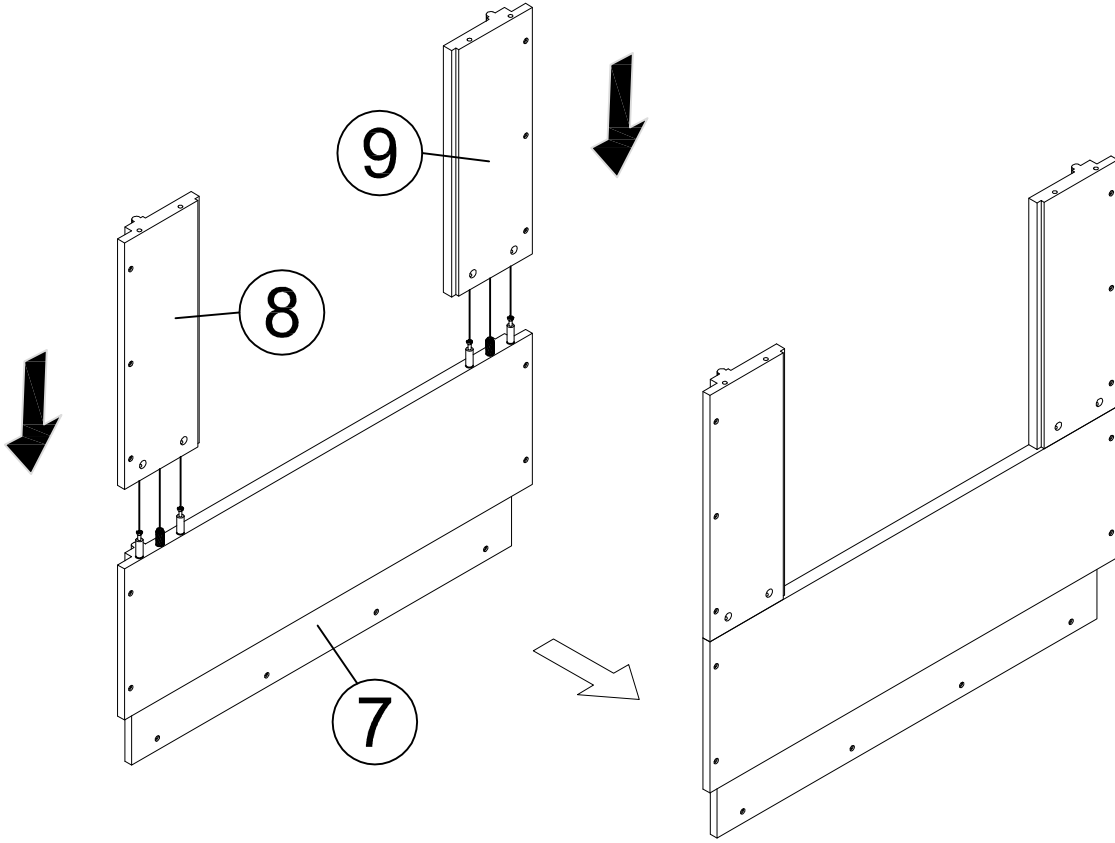


18

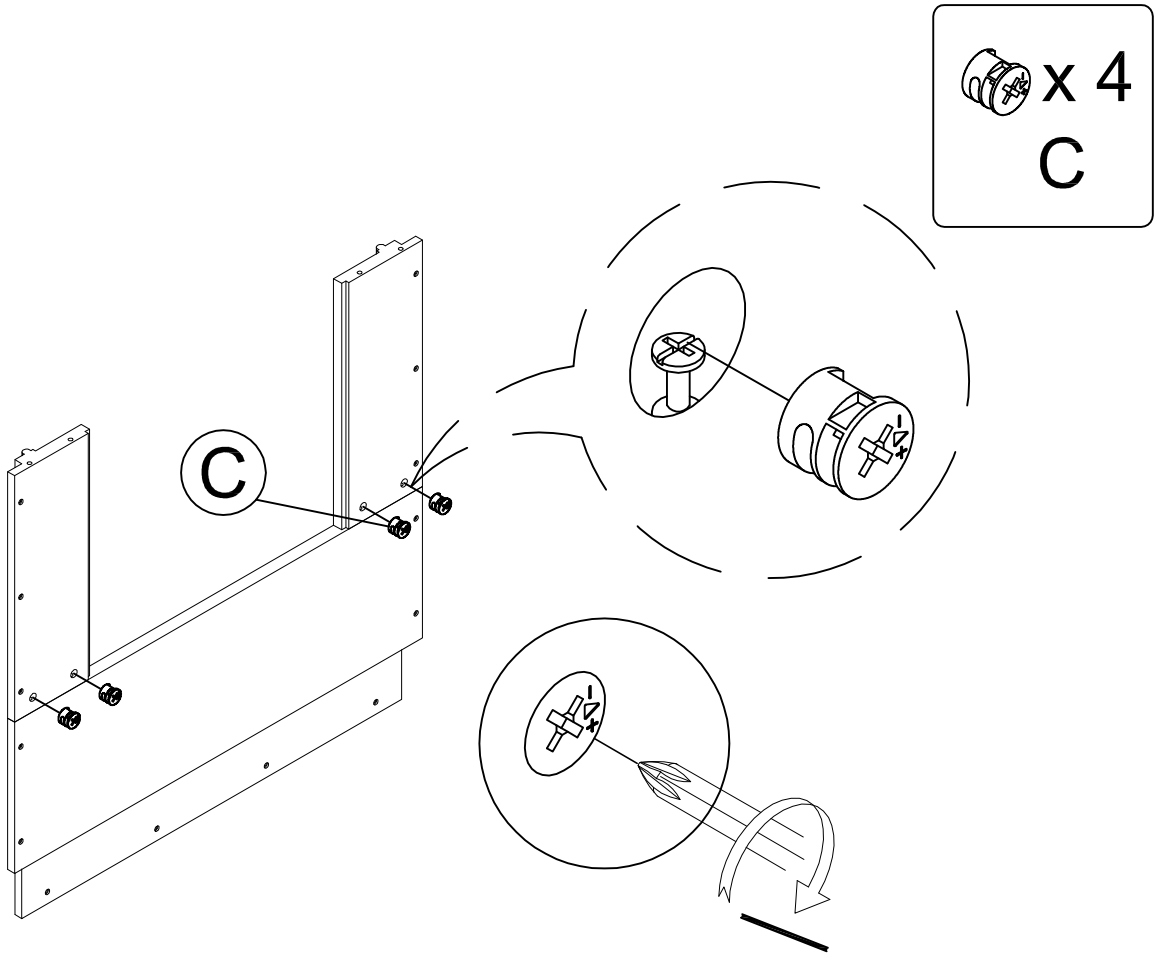


19

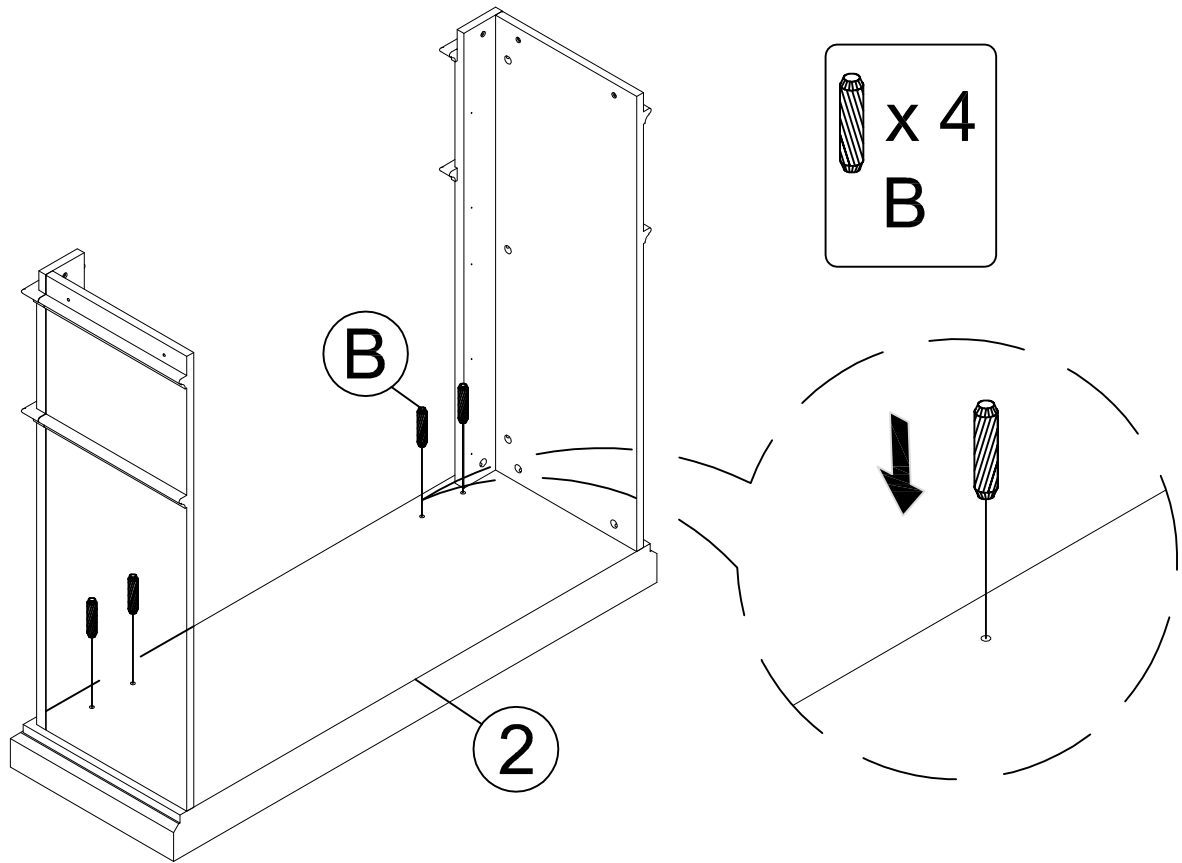


20

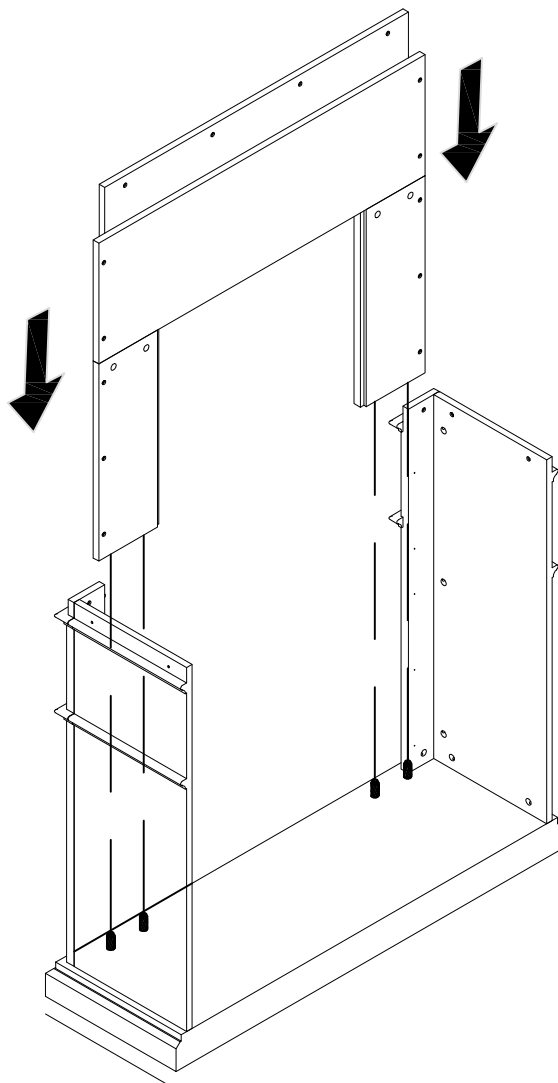


21

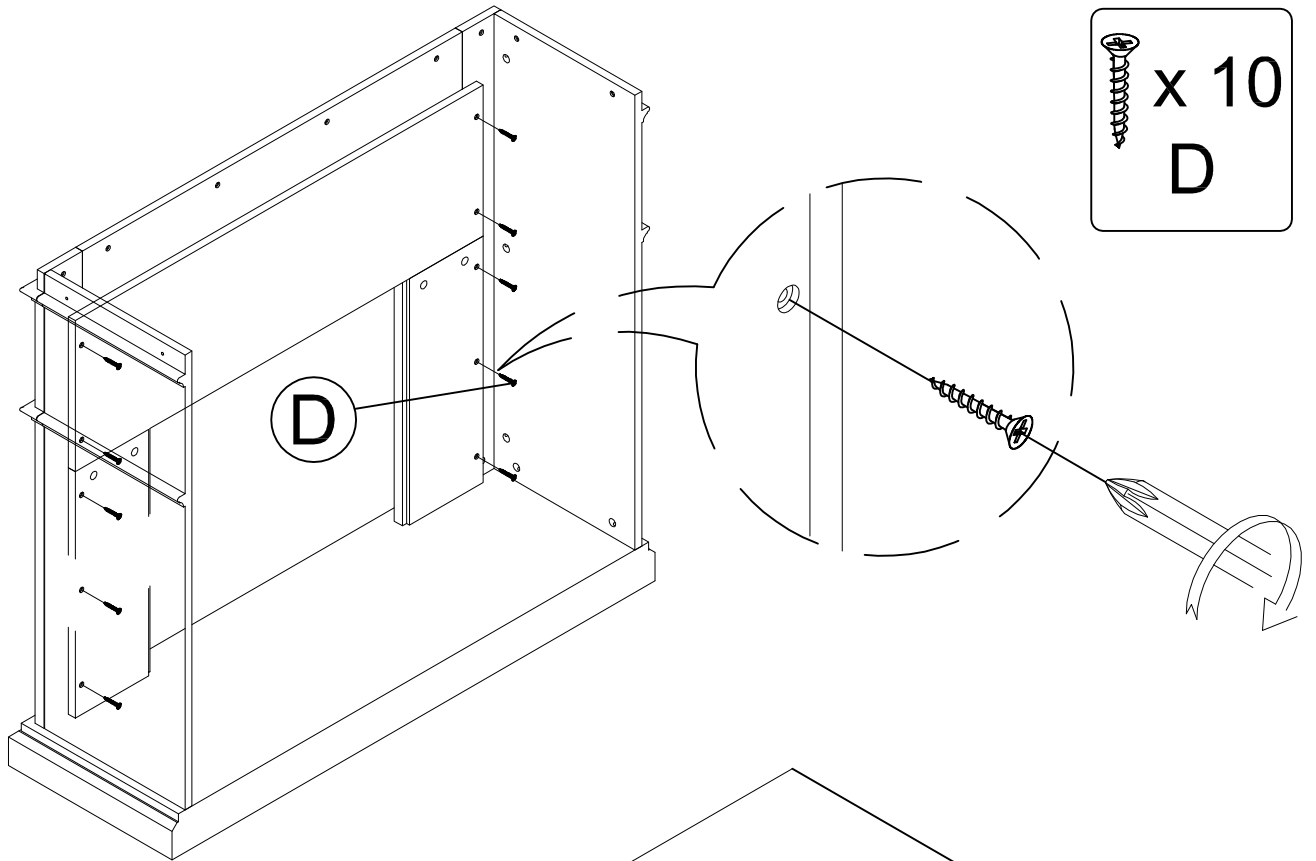


22

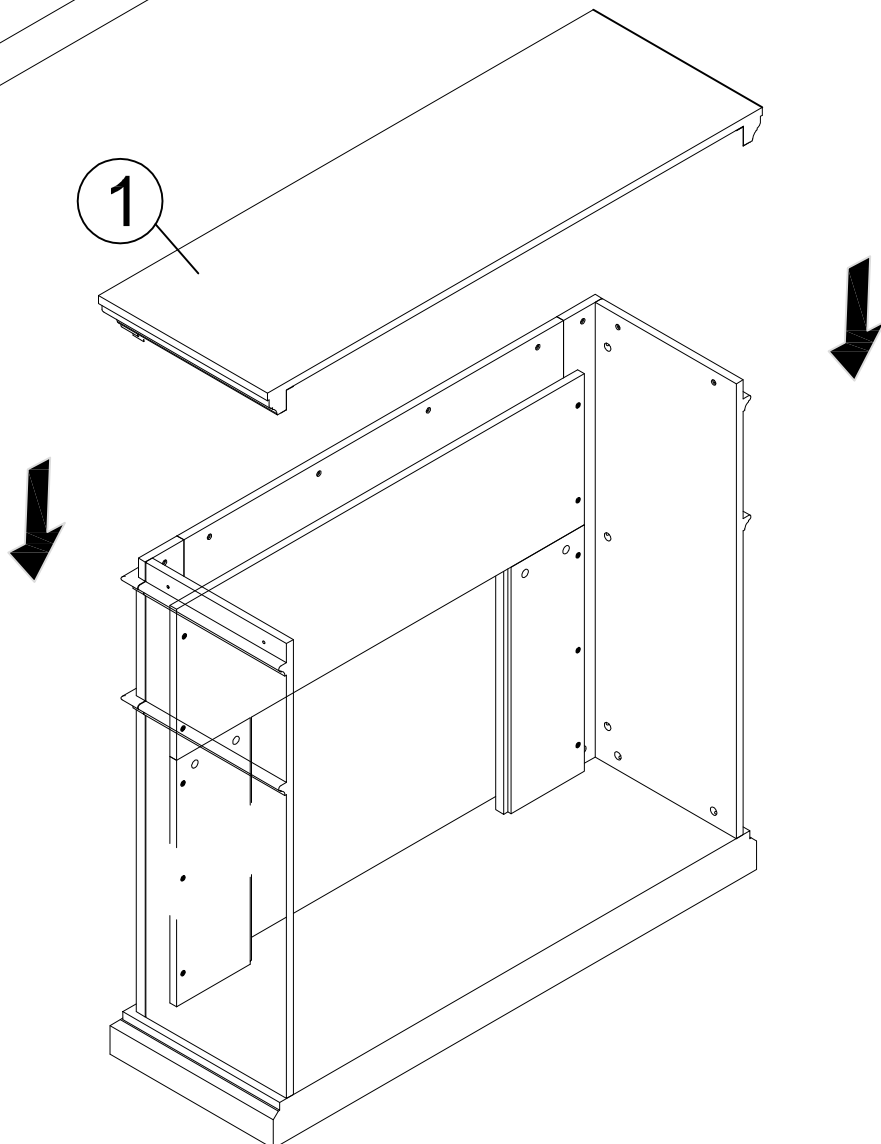


23

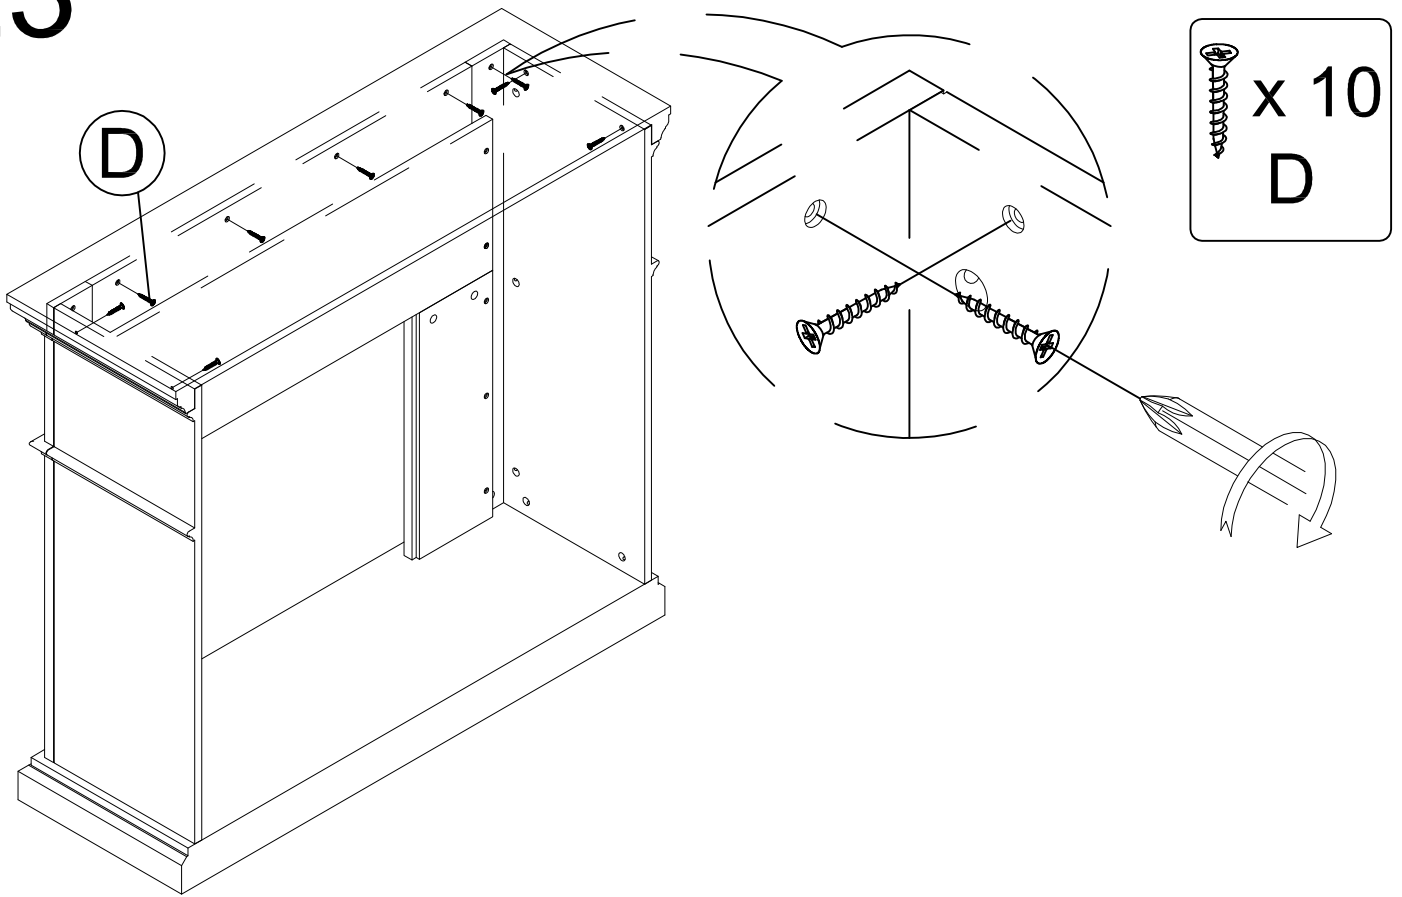

24

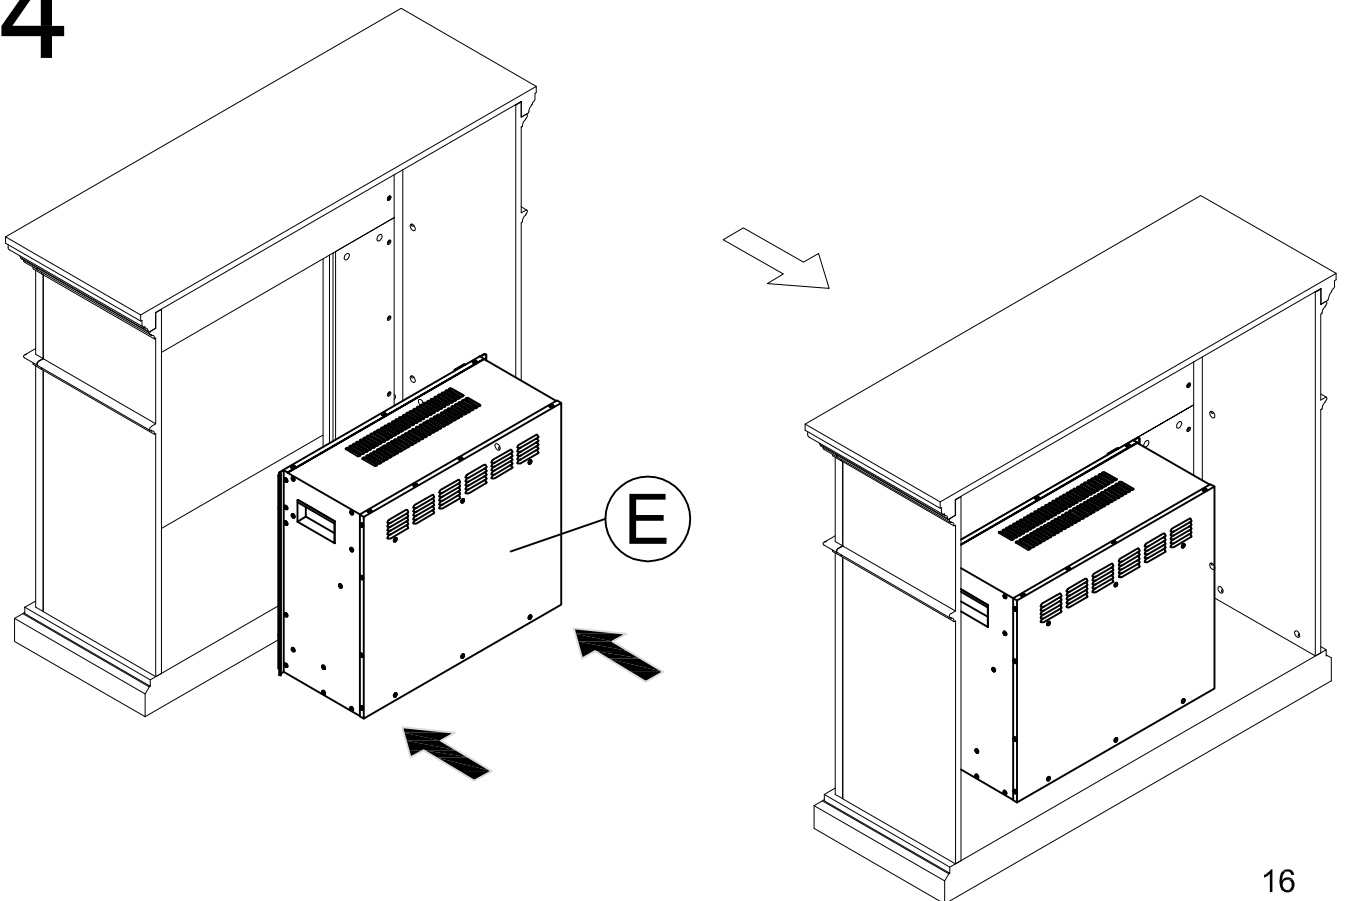

25

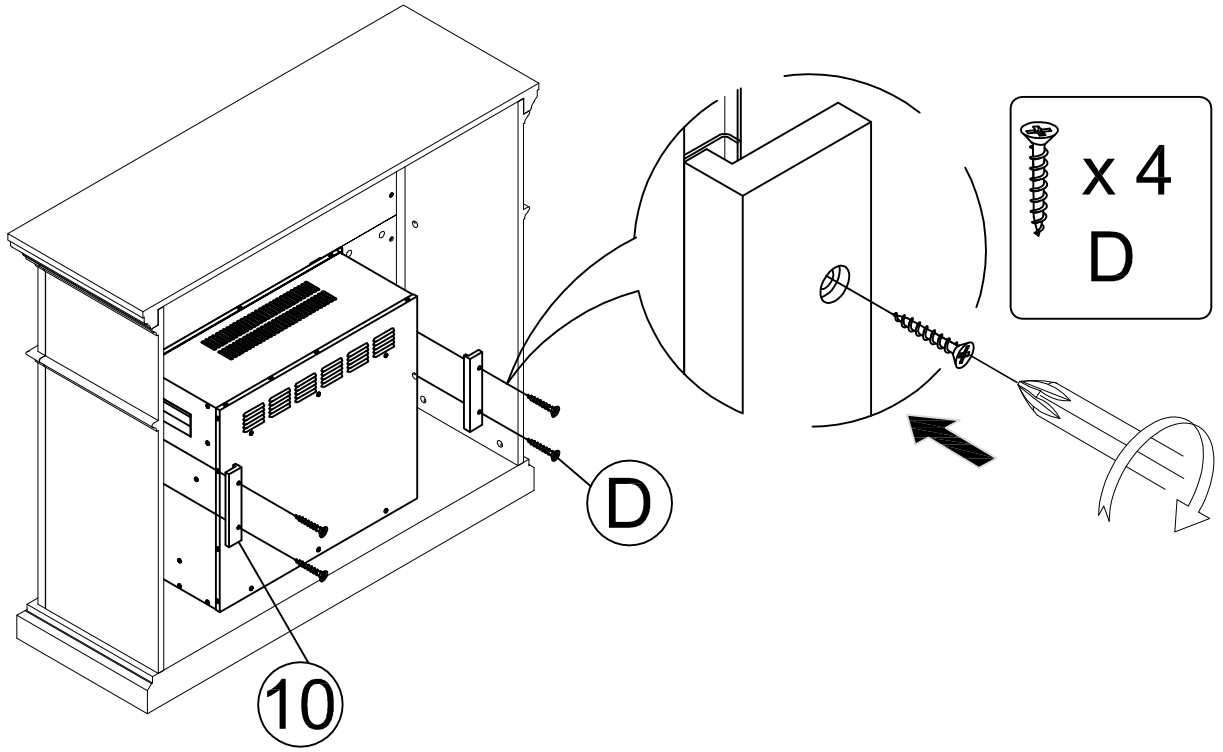

26

