

# EVERBILT™

**Designed to keep doors fully open and helps prevent wall damage.**





## INSTRUCTIONS:

1. Position catch on door in desired location and mark screw holes.
2. Drill 3/32 in pilot holes.
3. Install and tighten screws.
4. Position doorstop on wall and mark screw holes. Make sure desired door bumper location will match up with doorstop when the door is fully open.
5. Drill 7/32 in pilot holes.
6. Insert plastic wall anchors.
7. Install and tighten screws.

**Diseñado para mantener las puertas completamente abiertas y ayudar a prevenir daños en la pared.**

## INSTRUCCIONES:

1. Coloca el cerrojo en la puerta en la posición deseada y marca los orificios para los tornillos.
2. Perfore orificios guía de 3/32 plg (2.4 mm).
3. Instale y ajuste tornillos.
4. Coloque el tope para puerta en la pared y marque los orificios para los tornillos. Asegúrese de que la ubicación deseada del protector para puerta coincida con el tope para la puerta cuando la puerta está completamente abierta.
5. Perfore orificios guía de 7/32 plg (5.6 mm).
6. Inserta los anclajes plásticos de pared.
7. Instale y ajuste los tornillos.

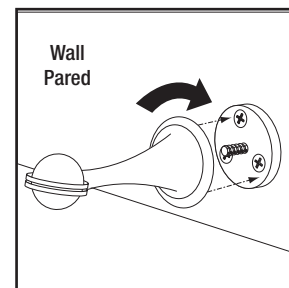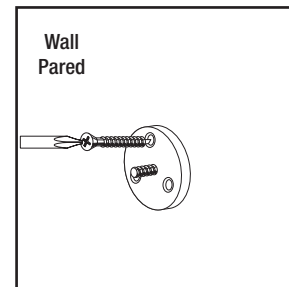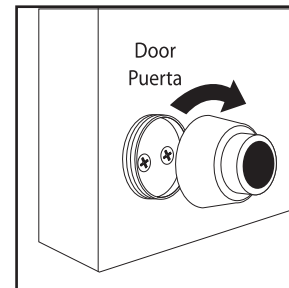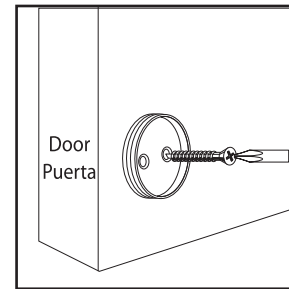

**WARNING:**  
WEAR SAFETY GOGGLES  
USER AND BYSTANDER

**ADVERTENCIA:**  
EL USUARIO Y PERSONAS  
EN LAS CERCANÍAS  
DEBEN USAR GAFAS DE  
SEGURIDAD