



Out-of-Plumb: ▶▶

Your walls are Out-of-Plumb if the side walls of the shower enclosure are not vertically level and lean or bow in any direction.


Plumb vs Out-of-Plumb: ▶▶

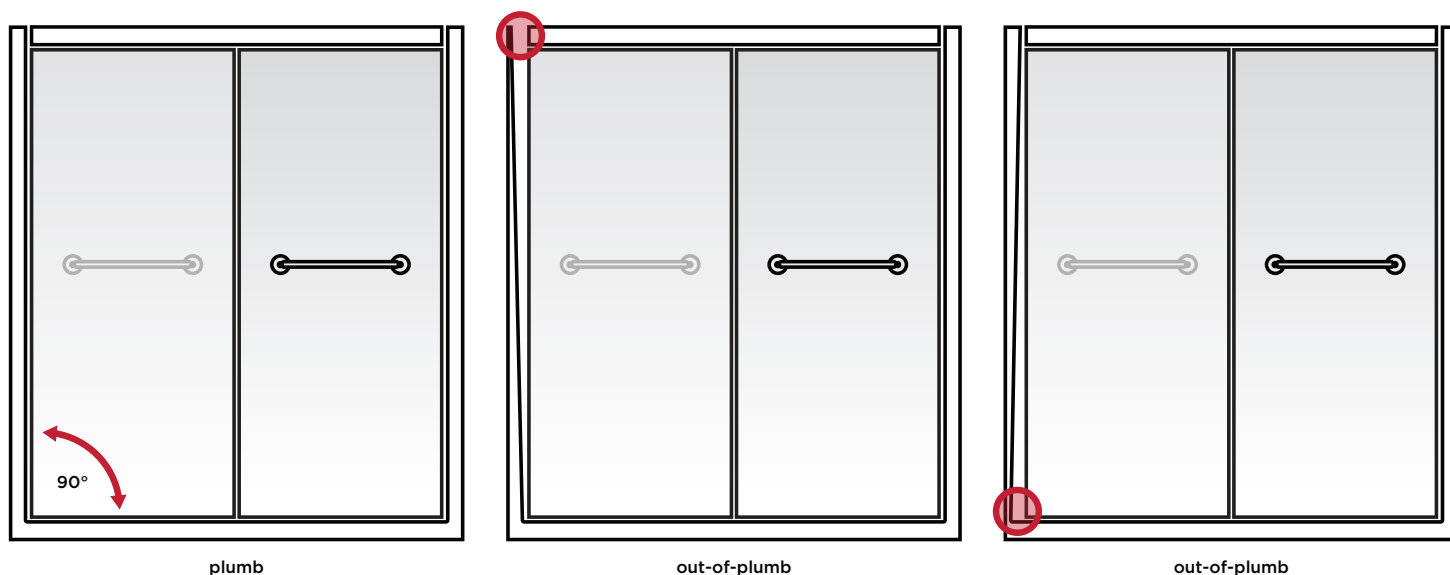

Most **Delta Shower Doors** are designed to accommodate out-of-plumb conditions up to 3/8". If your shower environment is out-of-plumb, the flexible side angle blade seals compress and relax to fill this gap.

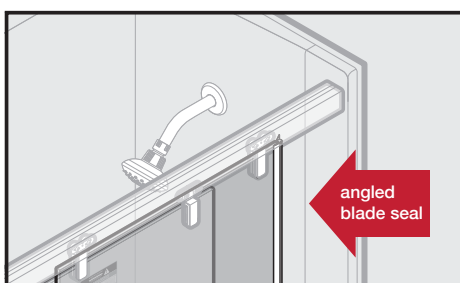

Angled blade seal attached to door

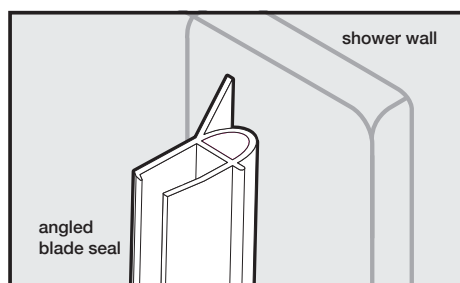

Angled blade seal flexing along out-of-plumb wall to fill gap

