

CLIP-ON SUPERCORNERS™ INSTALLATION GUIDE

Manufactured & Marketed by:

The JARMALOW COMPANY, LLC


218 Federal Hill Road

Hollis, NH 03049

INSTALLATION GUIDE

Step 1: Cut to Length: Measure the height of the corner and cut the Clip-On SuperCorner™ to size.


Step 2: Slide one side of the Clip-On SuperCorner into one of the J-Channels on the existing small corner as shown below.

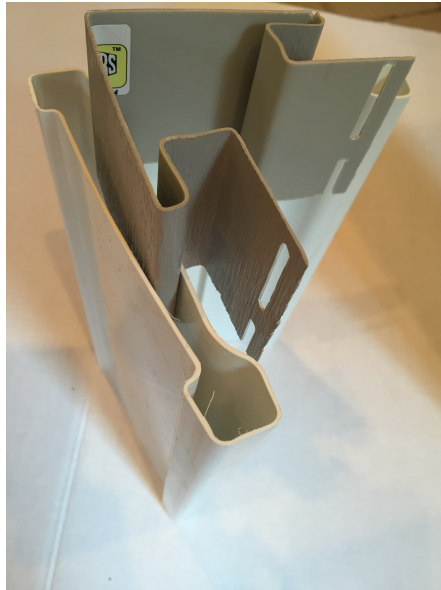

Step 3: (Optional) Cut a small V out of the Clip-On SuperCorners™ every 2-3 feet with sheer scissors, As shown below. This will make for easier installation.



Step 4: Grab the lip of the other Clip-On SuperCorner™ fold and lift it over the edge of the opposite J Channel until it snaps into place. Repeat over and over until the both sides of the Clip-On SuperCorner™ is fit tightly onto the the smaller vinyl corner.

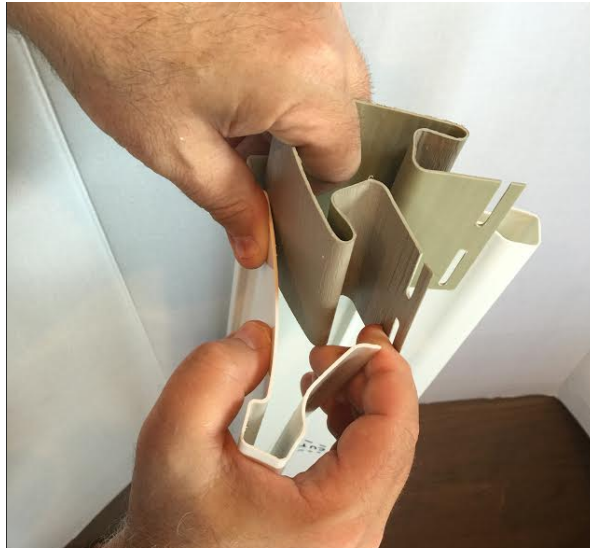

Step 5: Adjust the Clip-On SuperCorners™ as needed.

Step 6: Screw one small setting screw at the bottom or top of the Clip-On SuperCorners™. Choose as side less visible from the front. (Screw not included.)

You can expect your new Clip-On SuperCorners™ to shrink and expand based on extreme temperature variations. One set screw is enough to secure the Clip-On SuperCorner™ from slipping down. More than one set screw will cause the Clip-On SuperCorner™ to buckle as it shrinks or expands.