
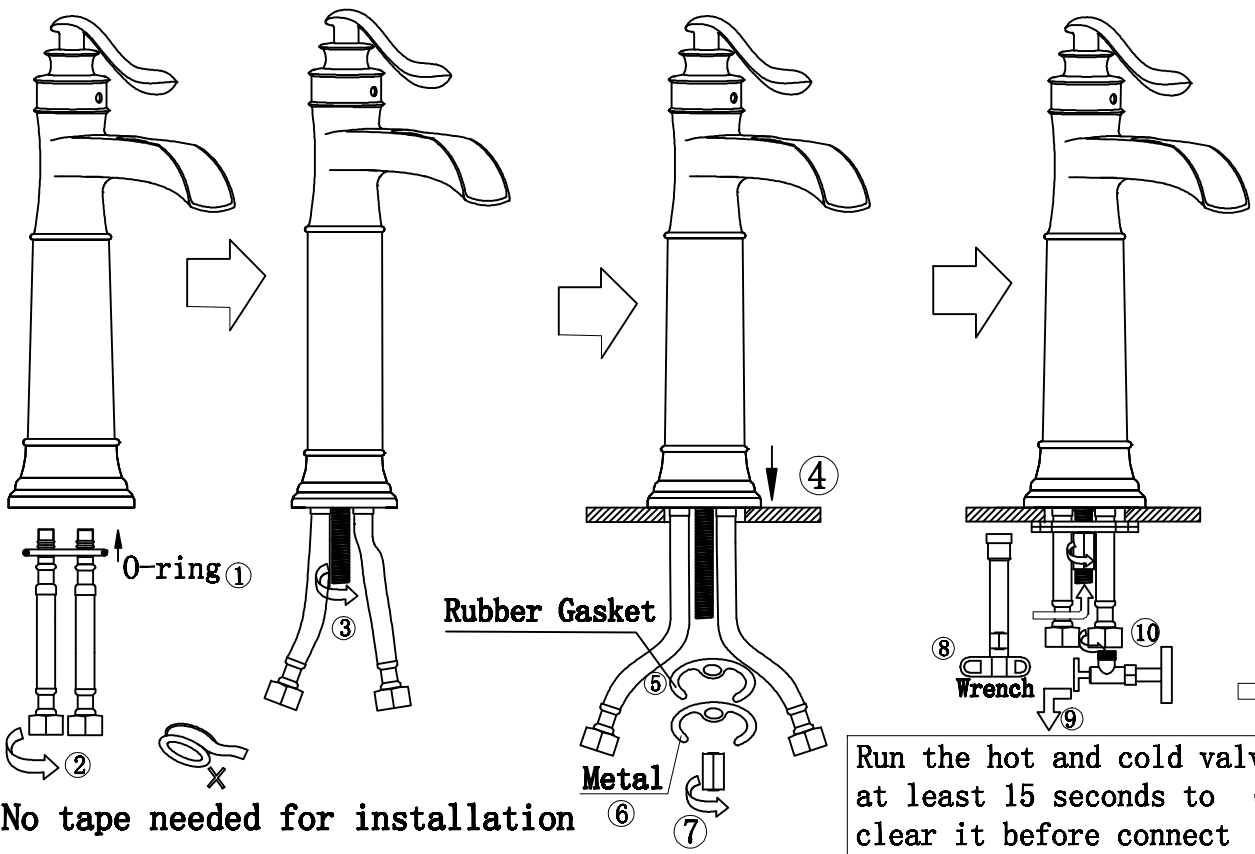



No tape needed for installation

Run the hot and cold valve at least 15 seconds to clear it before connect 

Noise could be significantly reduced by adjusting the valve water flow



No tape needed for installation

Run the hot and cold valve at least 15 seconds to clear it before connect 

Noise could be significantly reduced by adjusting the valve water flow

