


Assembly Instructions For F2400/6

10/13

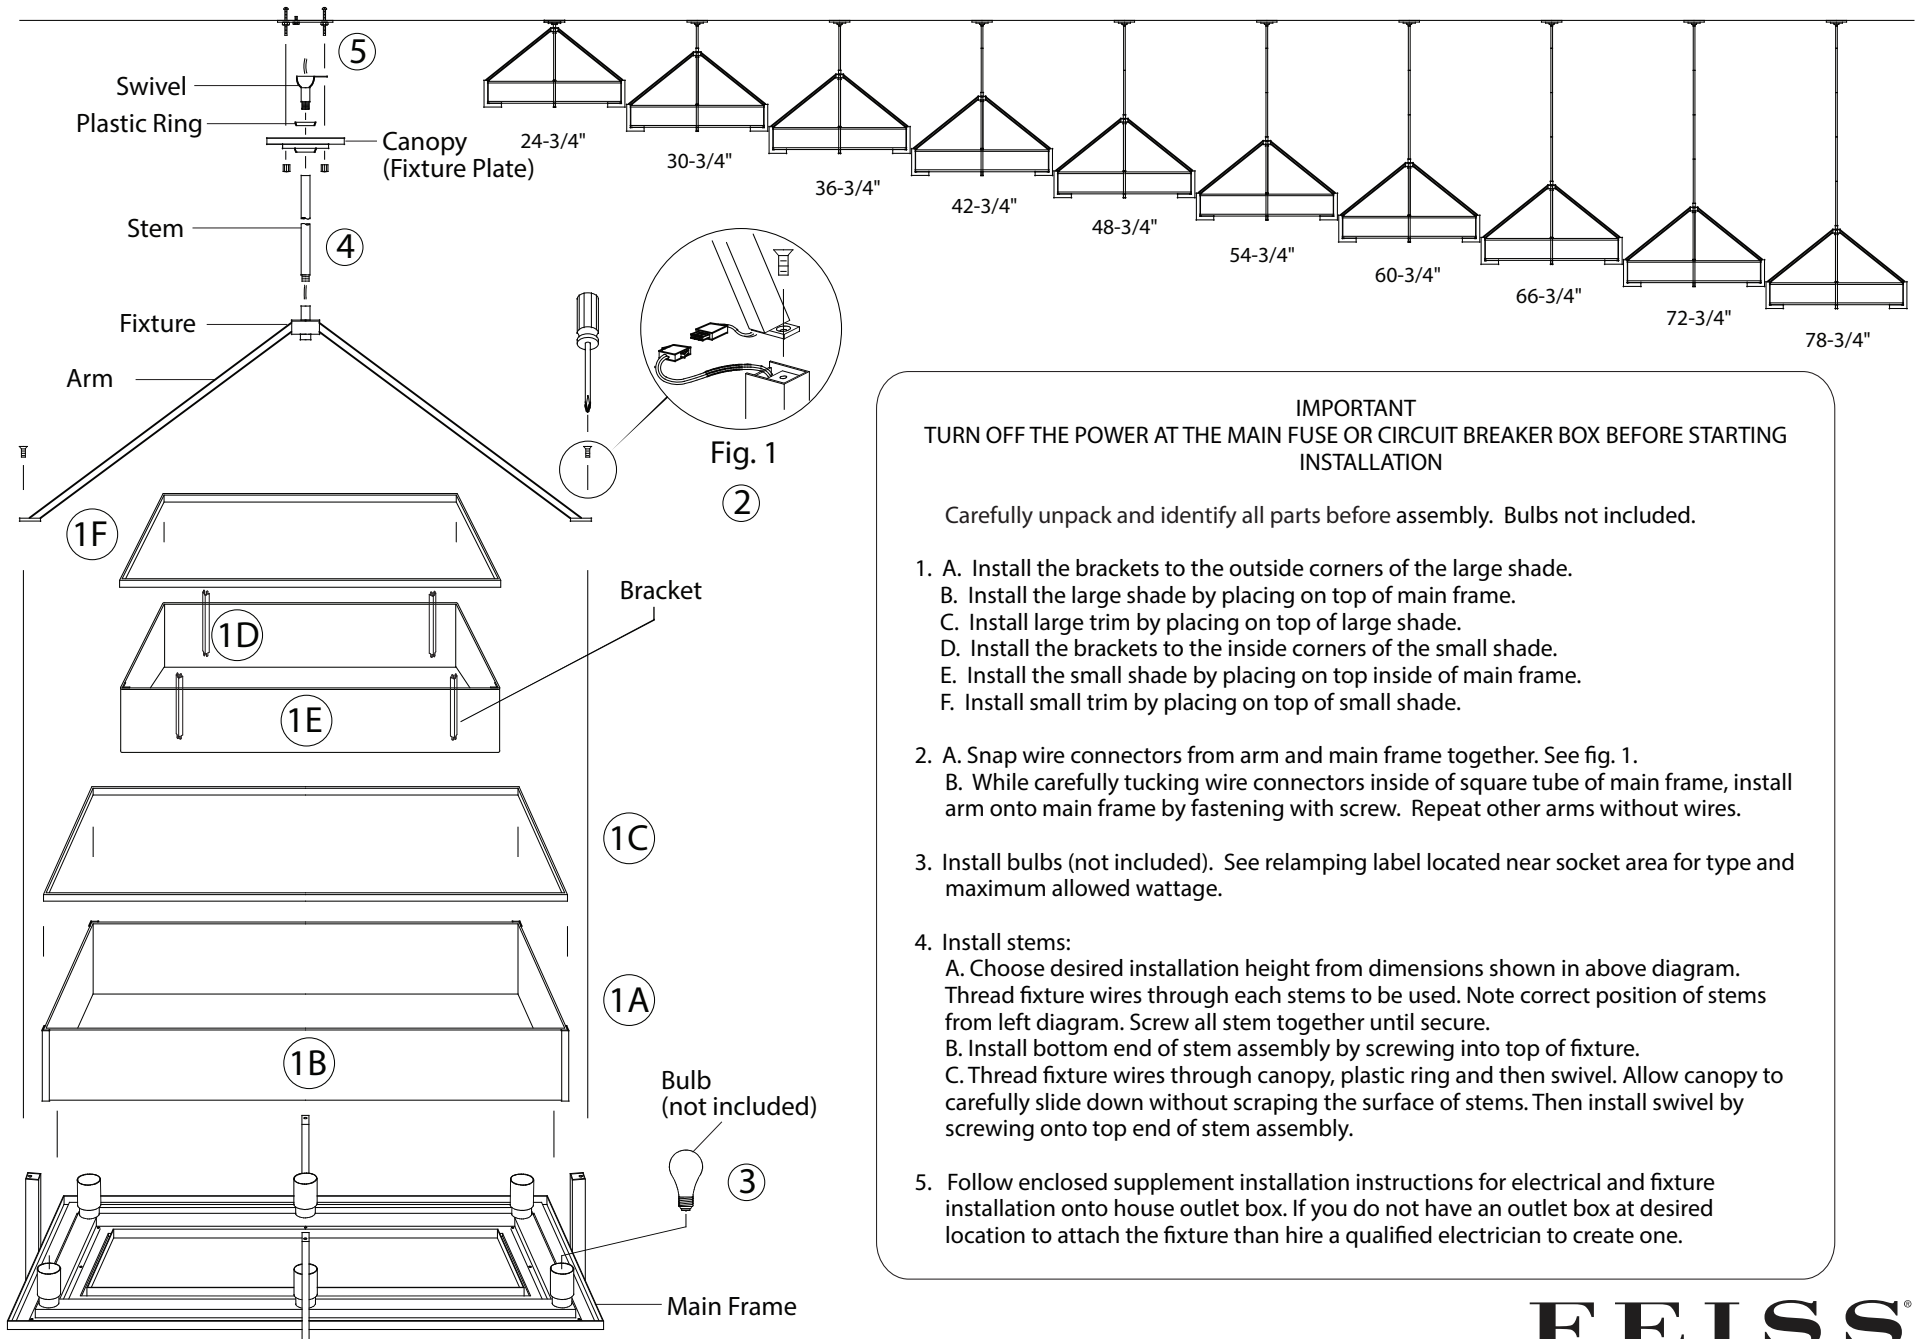

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs not included.

1.
 - A. Install the brackets to the outside corners of the large shade.
 - B. Install the large shade by placing on top of main frame.
 - C. Install large trim by placing on top of large shade.
 - D. Install the brackets to the inside corners of the small shade.
 - E. Install the small shade by placing on top inside of main frame.
 - F. Install small trim by placing on top of small shade.
2.
 - A. Snap wire connectors from arm and main frame together. See fig. 1.
 - B. While carefully tucking wire connectors inside of square tube of main frame, install arm onto main frame by fastening with screw. Repeat other arms without wires.
3. Install bulbs (not included). See relamping label located near socket area for type and maximum allowed wattage.
4. Install stems:
 - A. Choose desired installation height from dimensions shown in above diagram. Thread fixture wires through each stems to be used. Note correct position of stems from left diagram. Screw all stem together until secure.
 - B. Install bottom end of stem assembly by screwing into top of fixture.
 - C. Thread fixture wires through canopy, plastic ring and then swivel. Allow canopy to carefully slide down without scraping the surface of stems. Then install swivel by screwing onto top end of stem assembly.
5. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.

FEISS®

EST. 1955