

Replacement Lockset for elephanttrunk Parcel Drop (5121) Instructions


If you have any questions about how to assemble or use this replacement lock, please call us directly at (800) 464-7491 or contact us at www.architecturalmailboxes.com.

This replacement lockset is suitable for use on the elephanttrunk Parcel Drop (item 6900). After you've attached the lock as described below, you can fine tune the best cam by bending it slightly inward or outward until the engagement is to your liking.

1

Remove the existing lock. If you have access to the rear of the lock, simply remove the cam with a screwdriver and the large nut with a wrench or pliers. Slide the lock off the door and slide the upper and lower bars out of their alignment holes.

If you don't have access to the rear of the lock (e.g., lost keys), drill out the center of the lock with a 1/8" diameter drill bit until the internal mechanism is broken. After the internal mechanism is drilled out, insert a screwdriver into the key way and force the lock open. Remove the lock as described above.

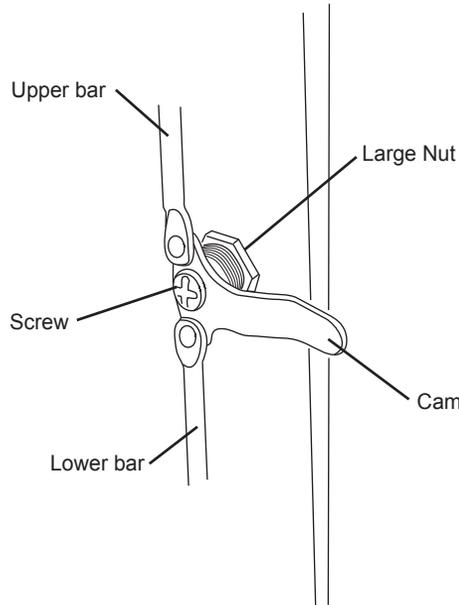

2

Insert the new lock without the cam and bars into the door hole and secure using the large nut.

Attach the cam and bars onto the lock, aligning the upper and lower bars into their alignment holes, making sure the cam is pointing toward the parcel drop body (away from the door hinge).

Secure the cam/bar assembly to the lock using the screw and washer.

Test the lock to see if the cam properly engages the mailbox body. If it doesn't engage as desired, fine tune the cam by bending it inward or outward as necessary.



ARCHITECTURAL
MAILBOXES®

www.architecturalmailboxes.com (800) 464-7491