


Starting at the bottom of 59½" left post (part 2) insert one 20" top/bottom cross rail (part 4) and six 19¼" horizontal slats (part 7). Starting at top, weave one 49" vertical slat (part 6) above and below horizontal slats, inserting end into bottom cross rail. Weave a second 49" vertical slat (part 6) above and below horizontal slat opposite previous slat, inserting end into bottom cross rail. Insert one 20" top/bottom cross rail (part 4) and one 19" bent top (part 5) into holes at top of post, inserting free ends of vertical slats into top cross rail.

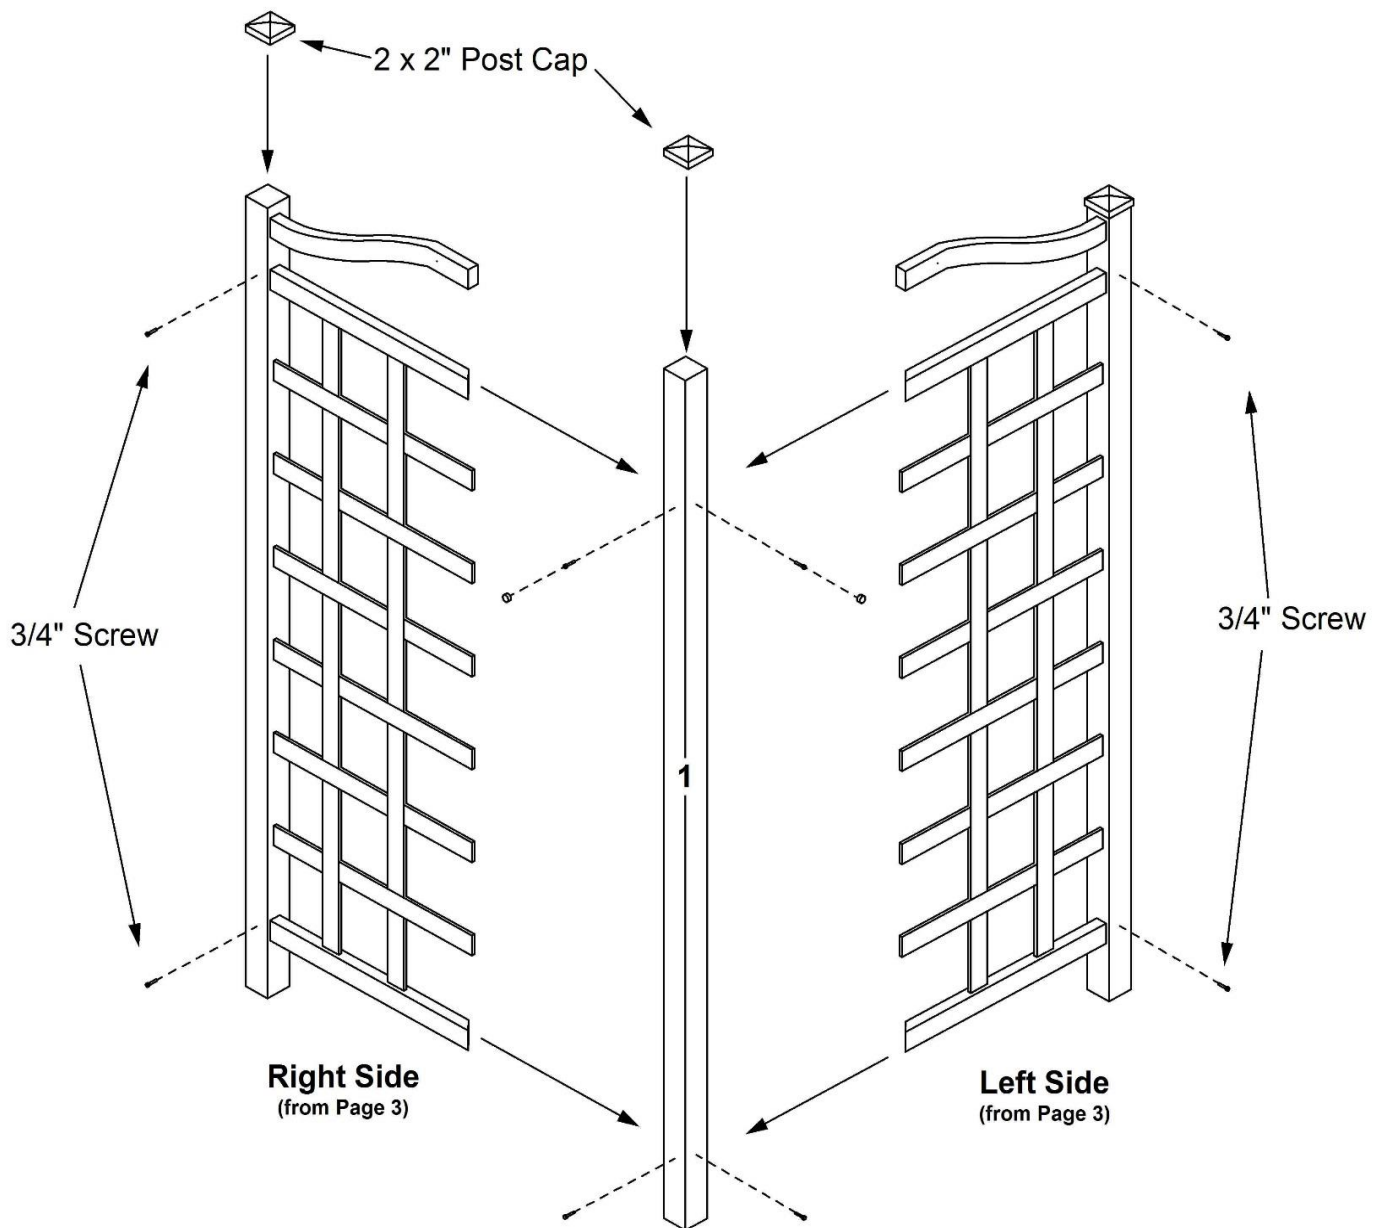

Insert left and right trellis panels (from Page 3) into 65" corner post (part 1). **In order for trellis to look symmetrical, top/bottom cross rails, horizontal slats and bent tops must be fully inserted into 59½" left and right posts.** Using two ¾" screws per outer post and four ¾" screws for corner post, fasten together trellis. Using PVC, super or crazy glue, apply glue to inner corners of each 2" sq. post cap and place on top of each post.

#### INSTALLATION

In desired location set trellis in place and mark where ground anchors will need to be inserted. Using a block of wood to protect ground anchors; pound each anchor into place. (If ground is extremely hard, loosen or soak soil before inserting ground anchors). Set trellis into ground anchors.

If combining with Model# 11187 Corner Slat Planter to make a planter trellis, use a straight blade screwdriver to pop off three 2" sq. post caps and slide trellis over the planter legs.