

www.virtuusa.com


SKU: MD-61

REV3.19.18


Prior to installation, please check the items you have received against the packing list. Report any missing items to your local dealer immediately.


Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.


Professional installation is recommended.

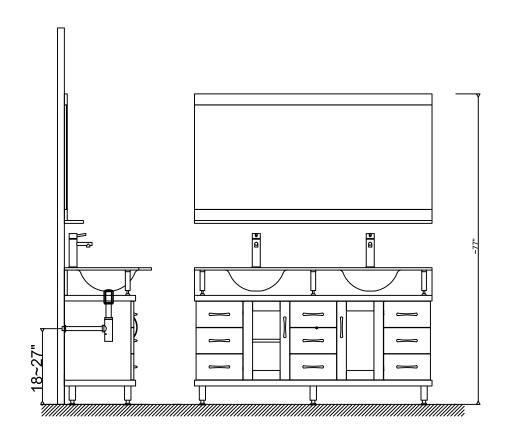

## **PARTS LIST** (may differ depending on purchase)

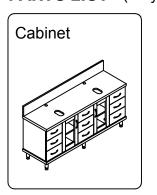

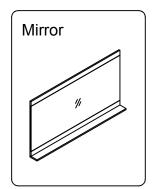

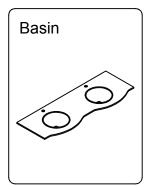





www.virtuusa.com

**SKU: MD-61** REV3.19.18

# **REQUIRED TOOLS**












### DRAWER REMOVAL

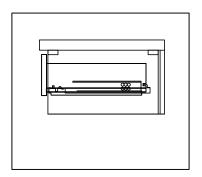

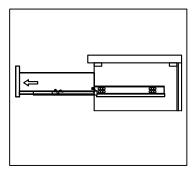

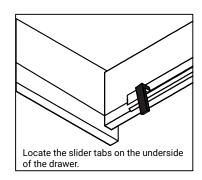


### **REMOVAL**

- 1. Pull tabs toward center
- 2. Lift and pull drawer out


## **RE-INSTALL**

- 1. Align drawer hole with slider stud
- 2. Push tabs back in to secure


## **DOOR ADJUSTMENT**

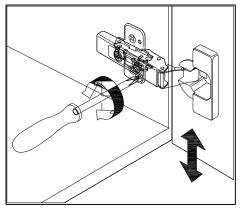

Adjusts the door vertically

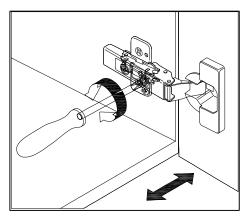

Adjusts the door horizontally

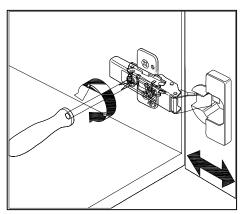


Adjusts the door forward and backwards





www.virtuusa.com


**SKU: MD-61** REV3.19.18

#### **Mirror Installation**

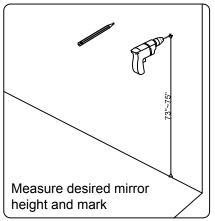


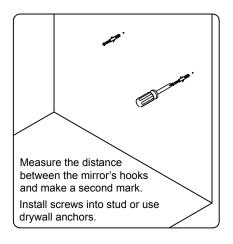


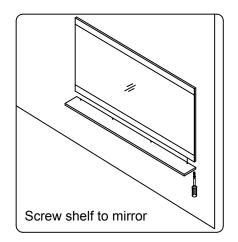

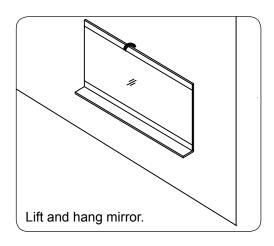

### **Top Installation**

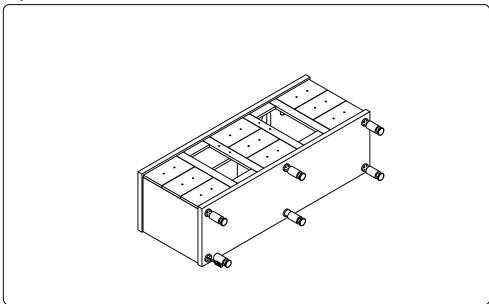

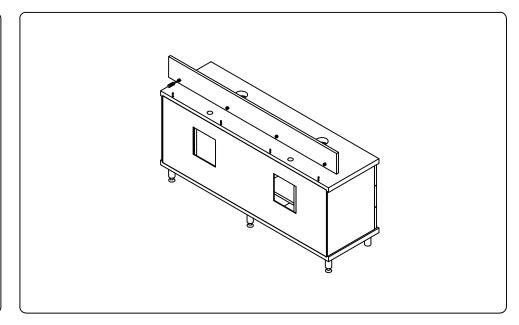



www.virtuusa.com

**SKU: MD-61** REV3.19.18

