

IMPORTANT: READ INSTRUCTIONS BEFORE STARTING INSTALLATION

TO INSTALL:


1. Close movable panel.
2. Mark pin hole in desired location and make sure that the glass will not interfere with installation. **Warning: Do not touch glass with drill bit.**
3. Drill a 1/8" hole through meeting stiles from interior side of door. **Note:** Do not drill through exterior wall of outer stile.
4. Insert pin hole. (Fig. 1)
5. Fasten chain and holder. (Fig. 2 and 3)
6. Allow slack in chain for easy removal of pin from lock position.
7. Use a 1/16" drill bit for screw hole.

IMPORTANTE: LEER ANTES DE INSTALAR

PARA INSTALAR:

1. Cerre el panel desilzante.
2. Marque lugar requerido para el eje deseado y asegúrese de que el vidrio no interfiera en la instalación. **Advertencia: No toque el vidrio con la broca.**
3. Taladre un hueco de 3 mm a través de los montantes adyacentes por el lado interior de la puetra. **Nota:** No taladre a través de la pared del montante exterior.
4. Inserte el eje en el orificio.
5. Fije la cadena y el soporte.
6. Deje un poco de juego en la cadena, para permitir la salida fácil de eje cuando este esté bloqueado.
7. Utilice una broca de 1.5 mm para los orificios de tornillos.

#171- Sliding Glass Door Nite Pin

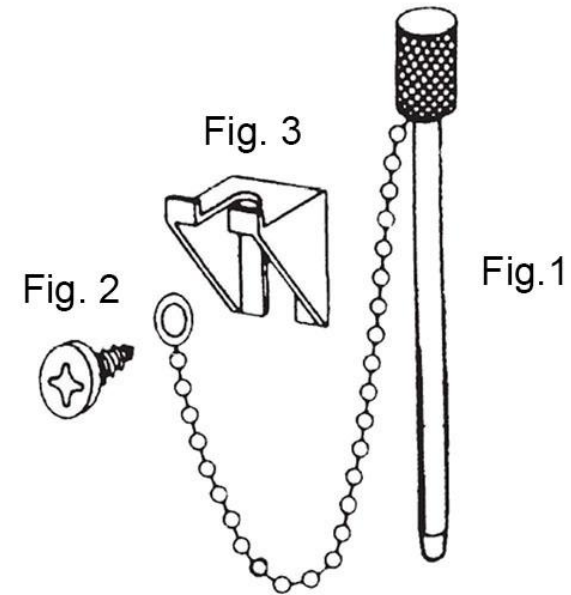

Barton Kramer Inc.

Miami, Florida

