


## INSTALLATION INSTRUCTIONS



**Install clip over subfloor.**

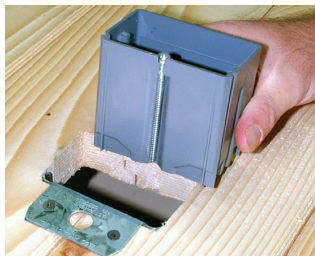

**Screw in to adjust to height of flooring or carpet.**



**Beautiful flush fit every time!**

This floor box is designed to be mounted on a joist or subfloor. It can be installed on the top of the joist or from the bottom if the thickness of the joist is sufficient to allow installation of the box. If the unit is to be installed from the bottom of the joist, check prior to installation to ensure there is sufficient adjustment remaining as this type of installation is non-standard.

The unit can also be installed using the old work (small) bracket that is included. This bracket facilitates the installation of the box in areas where the larger new work bracket cannot be used. The old work bracket edge is hidden by the cover when installed. However, before cutting into the wood, you must ensure that the mounting screws will properly support the bracket/box installation.

For planning purposes ensure that the maximum installed height to the bottom of the cover does not exceed 1-3/4" above the top of the mounting bracket.

The kit is listed as a floor box by Underwriters Laboratories. The kit also has a two (2) hour fire classification. Only covers manufactured for this box can be used with this assembly.

Floor box kit should be installed by a certified electrician.

### Installation – New Work Bracket


**Warning: Turn off AC power source for this floor box**

1. The new work metal bracket may be installed on the floor joist below a 3/4 inch subfloor. When used on a thicker subfloor, we recommend cutting the hole adjacent to the joist to ensure engagement of the mounting screws. Use the box as a template to cut the hole. Use the four (4) #6x1-3/4" self-tapping screws supplied with the kit to mount the bracket.
2. If the new work bracket is installed from the underside of the joist, ensure the alignment with the box and opening before installing the bracket. Use the four (4) #6x1-1/4" self-tapping screws supplied with the kit to mount the bracket.
3. Pull the romex wire through the desired clamp and the box aligned in the bracket slide. Ensure the adjusting screw is aligned on the bracket and rotate the screw clockwise. An electric or pneumatic power screw gun is recommended.
4. Adjust the box flush to 1/2" above floor, leaving sufficient room to complete the installation.
5. Wire the receptacle in accordance with the National Electrical Code. Attach a short length of green or un-insulated grounding wire to ground lug on the receptacle. Connect ground wire from receptacle and green ground wire provided with brass cover to ground wire entering the box using appropriate wire connector.
6. Align the receptacle on the recessed bosses and place the cover on the box with the outlet caps open. Push cover into the box until bottom of cover flange is flush with top of box.
7. Insert the two (2) #6-32x1" flat-head machine screws into the cover holes, ensuring that the screw is aligned with and captures the receptacle. **DO NOT OVER TORQUE.** Tighten the screws to a maximum of 6 to 8 inch pounds. Ensure bottom of cover flange is flush with top of box.
8. Remove the threaded plug on the brass cover that hides the adjusting screw opening and set it aside where it will not be misplaced.
9. Using the adjusting screw, adjust the assembly so cover flange is flush with floor. Do not pre-load the cover against the floor covering. Place the threaded plug you previously set aside in the adjusting screw opening and tighten.
10. Turn the coin slot lock in the center of the cover in either direction to lock the outlet caps.

### Installation – Old Work Bracket

**Warning: Turn off AC power source for this floor box**

1. Ensure there is sufficient depth of the floor covering to install the old work bracket. If not, the bracket must be installed adjacent to a joist where the screws will engage the joist/flooring for support.
2. Use the box as a template and cut an opening in the floor cover.
3. Place the bracket on the side of the opening where it is to be mounted with the two tabs up and resting on the surface. (Be careful not to drop the bracket into the opening.)
4. Install the bracket using the two (2) #6 square drive trim head screws provided in the kit. The screws are installed at an angle which may result in a slight protrusion of the screw heads but will not interfere with the box installation.
5. Use the New Work Bracket Installation Instructions beginning with Step 3.

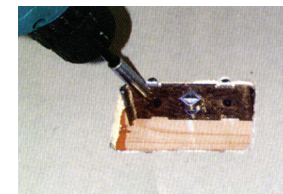

**Old work bracket installation for tight locations or cut-in situations**

### MAINTENANCE

To ensure continued service, it is recommended that the sealing surfaces of the caps and cover be kept free of debris.

**NOTE:** Ground brass cover using green grounding screw and ground wire provided.