


UNDERMOUNT ASSEMBLY

Steps to Complete Your Undermount Sink Project

- **For layout**, use the actual basin as your template. Place it upside down on counter and mark the countertop by tracing edge of the sink. Allow clearance for faucet and other accessories.
- **Measure *inside* edge** of lip and mark counter accordingly.
- **Cut countertop** on inside line. Before applying silicone, place the sink under the cut-out to ensure a nice fit.
- **Apply silicone** around hole on underside of countertop, and position sink accordingly. Mounting clips may be used for extra support if desired.
- **Carefully** remove any excess silicone.
- **Install the drain** according to specs when the sink has fully set.
- **When cleaning** do not use abrasive cleaners.

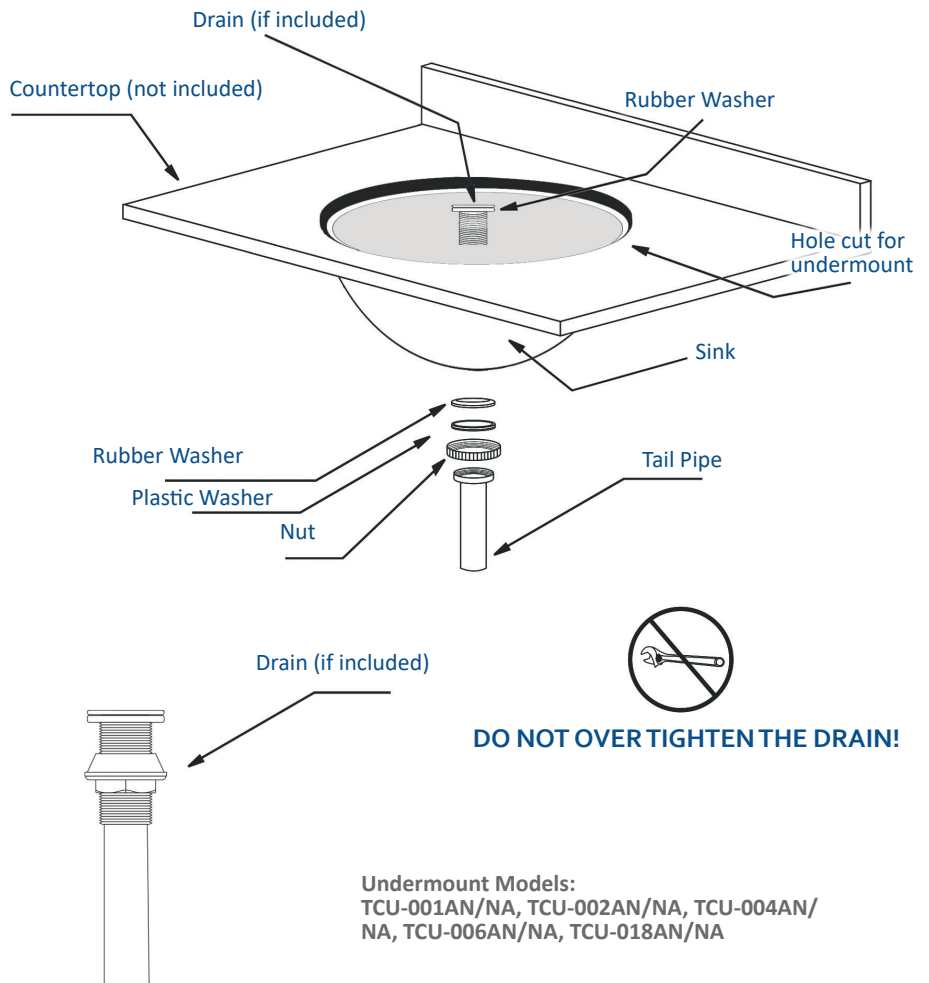

TROUBLESHOOTING TIPS - UNDERMOUNT

Issue	Reason	Solution
Sink seems to be sagging / seperating from countertop	Silicon didn't set long enough before using; mounting clips not used	Reseal, set for 24hrs; add clips or brackets to secure the sink
Does not completely drain	Drain is too high, wrong seal used	Make sure correct seal is used and is below bevel
Finish is changing color or is shiny	Abrasive cleaners, soaps or other factors constantly in contact with it.	Stop using abrasives. Finish will heal over time.

Please Note:

- Review and abide by all building and plumbing codes.
- Novatto sinks need to be installed by a professional.
- Some counters require different cutting methods; seek the details of your chosen countertop material.
- Check to make sure the sink is sealed watertight.
- Use non-abrasive cleaners when cleaning up.
- Allow adequate room for faucet and backsplash when laying out the sink