



ASSEMBLY INSTRUCTIONS (CONTINUED)

STEP 4

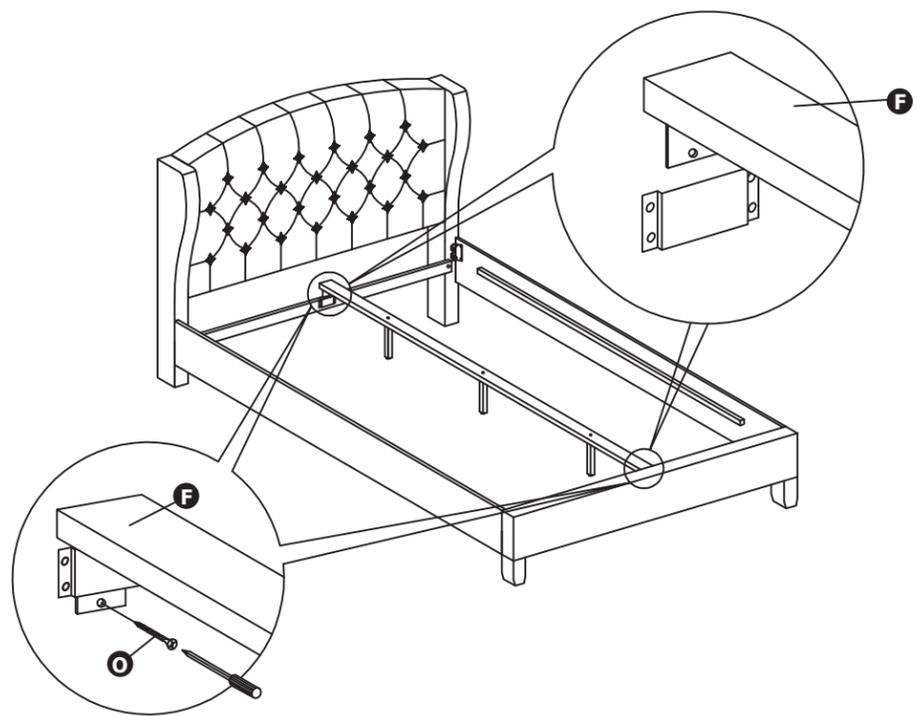

Insert the Center Rail (Part F) into the brackets on the Headboard and Footboard. Using a screwdriver, secure the center rail using two 16mm Screws (Part O).


STEP 5

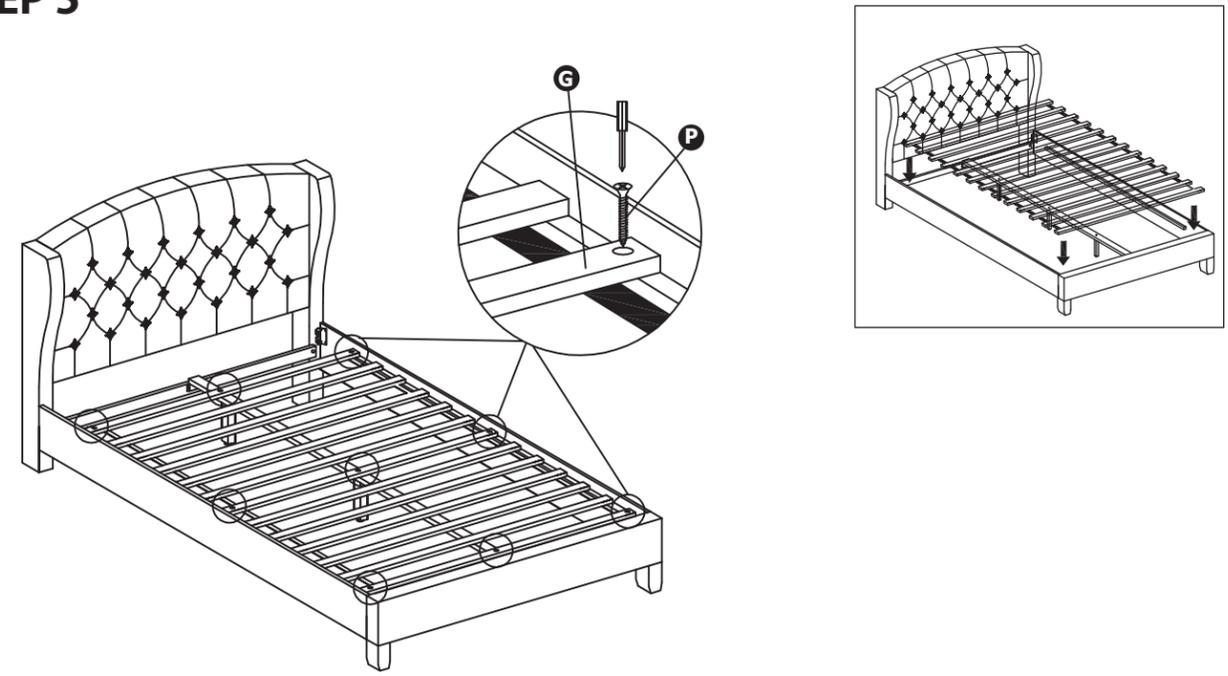

Roll out the Wood Slat System (Part G) and secure it in place using nine 32mm Screws (Part P). Use the pre-drilled holes and a screwdriver.

Platform Bed Assembly Instructions

Contains One Bed and Hardware

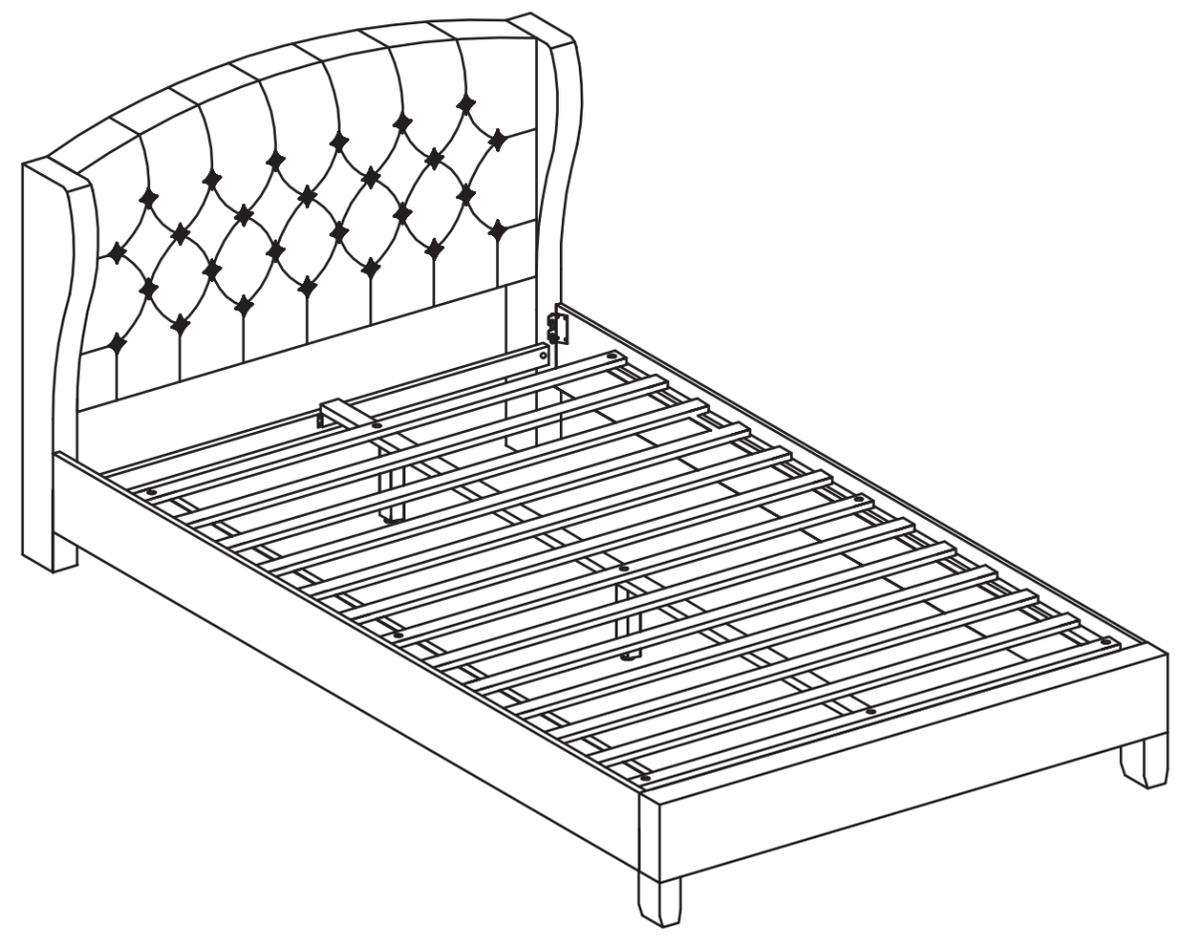

IMPORTANT NOTE:


Carefully remove all the parts from the box. Arrange on a flat surface and verify you have all of the following parts and hardware.

TOOLS REQUIRED:


Phillips Screwdriver

PARTS LIST


A. Headboard Top (1 pc)

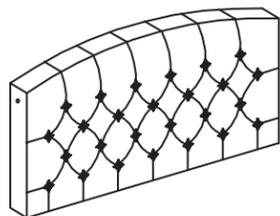


B. Footboard (1 pc)

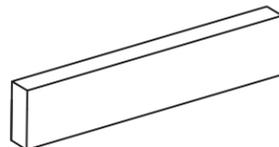

C. Side Rail (2 pcs)

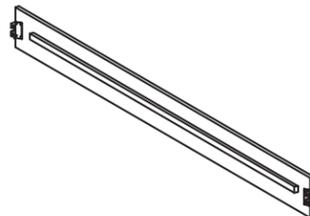


D. Side Wing (2 pcs)

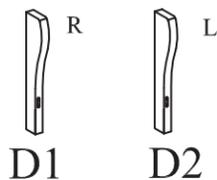


E. Footboard Leg (2 pcs)



F. Center Rail (1 pc)

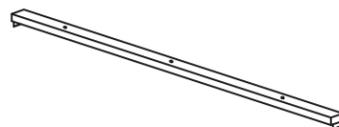

G. Wood Slat System (1 pc)

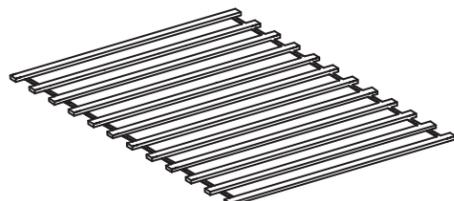

H. Center Leg (3 pcs)




I. Support Bar (1 pc)



HARDWARE LIST

J. 40mm Bolt (9 pcs)



K. Spring Washer (4 pcs)



L. Flat Washer (4 pcs)



M. Small Hex Key (1 pc)



N. Large Hex Key (1 pc)



O. 16mm Screw (2 pcs)




P. 32mm Screw (9 pcs)




ASSEMBLY INSTRUCTIONS

STEP 1

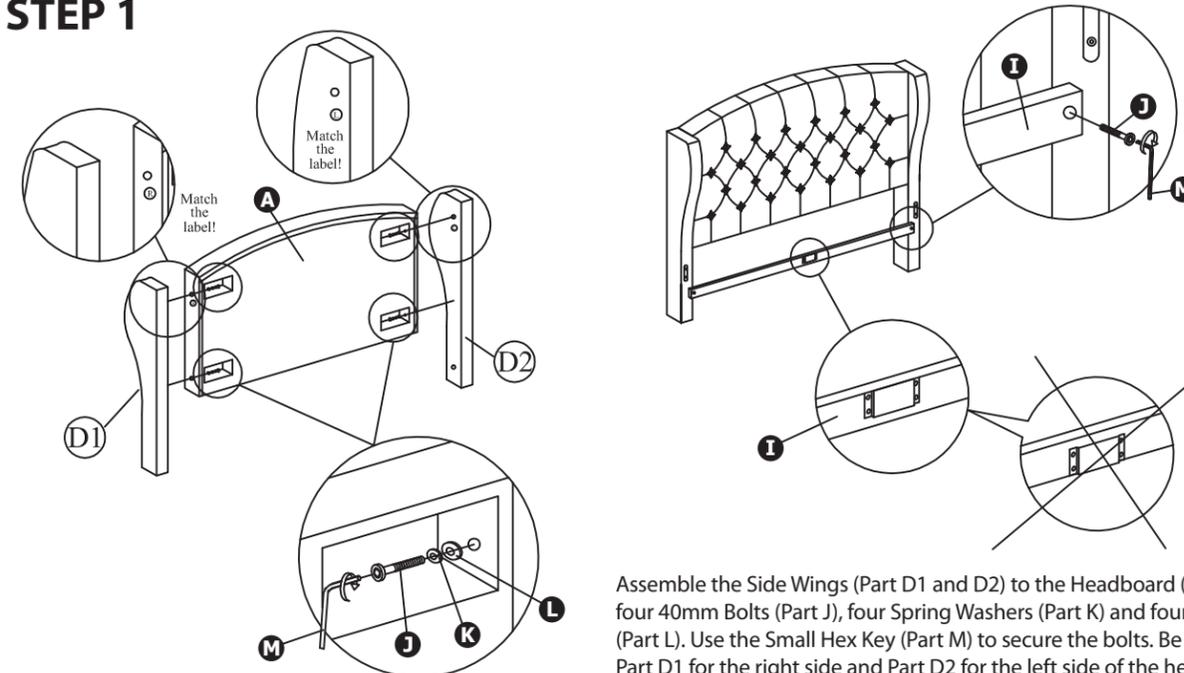


Assemble the Side Wings (Part D1 and D2) to the Headboard (Part A) using four 40mm Bolts (Part J), four Spring Washers (Part K) and four Flat Washers (Part L). Use the Small Hex Key (Part M) to secure the bolts. Be sure to use Part D1 for the right side and Part D2 for the left side of the headboard. Next secure the Support Bar (Part I) to the Side Wings (Part D) using two 40mm Bolts (Part J). Use the Small Hex Key (Part M) to secure the bolts.

STEP 2

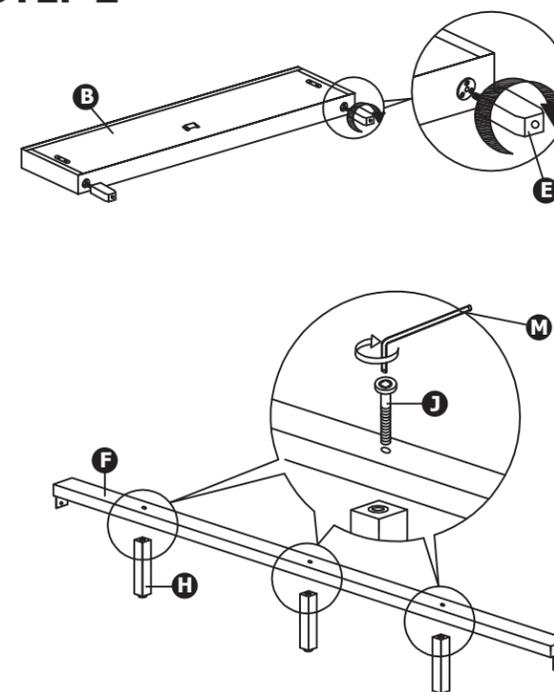

Screw the Footboard Legs (Part E) into the Footboard (Part B). Screw the Center Legs (Part H) into the Center Rail (Part F) using three 40mm Bolts (Part J). Secure the bolts using Small Hex Key (Part M).

STEP 3

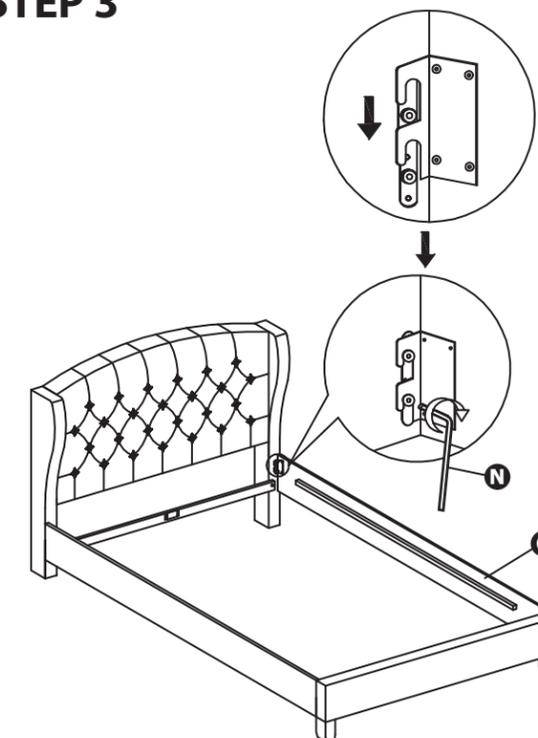

Attach the siderails (Part C) to the Headboard (Part A) and the Footboard (Part B) by hanging the siderails onto the pre-attached bolts on the Headboard and Footboard. Tighten the bolts using Large Hex Key (Part N).