

WYNDHAM Collection

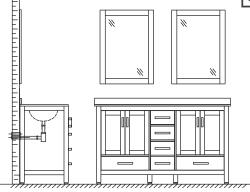



- Prior to installation please check received items against the "Packing List". Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- $\bullet Professional installation recommended.$

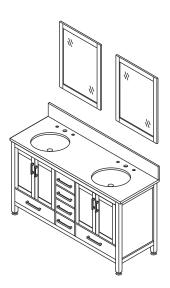

PACKING LIST

(Not all components may be included, depending upon your purchase)

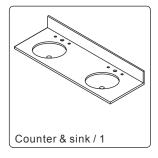


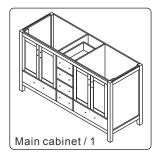







HOW TO ADJUST HINGES (if required)








REQUIRED TOOLS NOT IN BOX













Tape measure

Pencil I



Screwdriver Adju

stable Wrench


Spirit Level


Silicone sealant


WC-1414-80 Installation Guide

WYNDHAM Collection


INSTALLATION INSTRUCTIONS

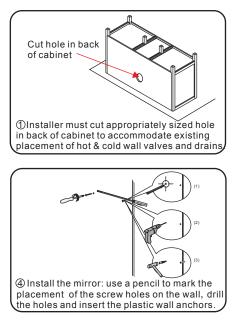

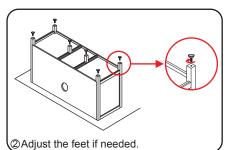



⑤ Install the screws into the wall anchors, leaving enough of the screw exposed to hang the mirror - approx 1/4" - 1/2".

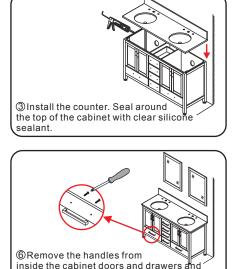

reinstall on the outside.Do not over-tighten

when reattaching.

WC-1414-80 Installation Guide

