

### **INSTALLATION INSTRUCTIONS**

www.virtuusa.com


**SKU:** MS-565

REV3.19.18


Prior to installation, please check the items you have received against the packing list. Report any missing items to your local dealer immediately.


Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.


Professional installation is recommended.

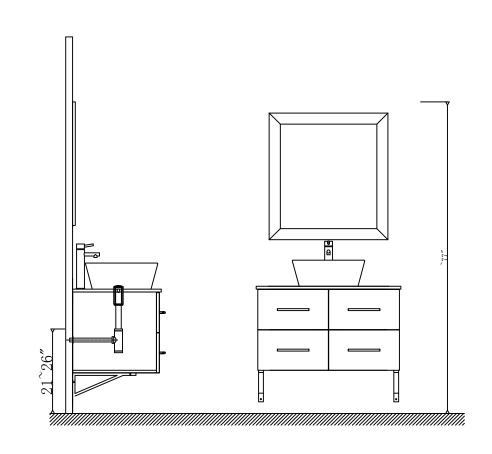


# PARTS LIST (may differ depending on purchase)

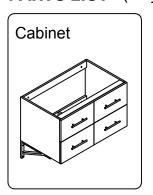

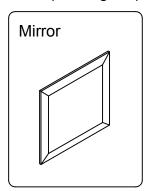

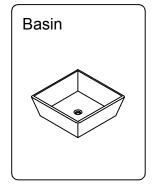

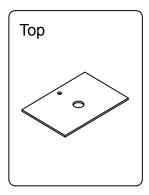



#### **INSTALLATION INSTRUCTIONS**


www.virtuusa.com


**SKU: MS-565** REV3.19.18


## **REQUIRED TOOLS**



### DRAWER REMOVAL

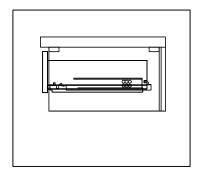

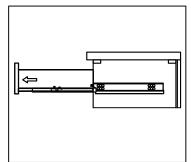

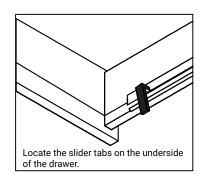

### **REMOVAL**


- 1. Pull tabs toward center
- 2. Lift and pull drawer out


# **RE-INSTALL**

- 1. Align drawer hole with slider stud
- 2. Push tabs back in to secure

## **MIRROR INSTALLATION**



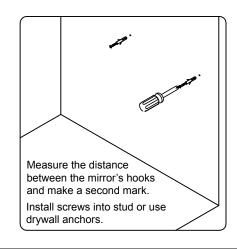

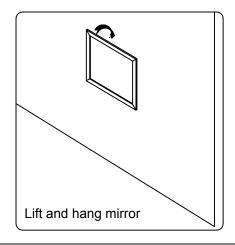




# **INSTALLATION INSTRUCTIONS**


www.virtuusa.com


**SKU:** MS-565

REV3.19.18

#### **Cabinet Installation**

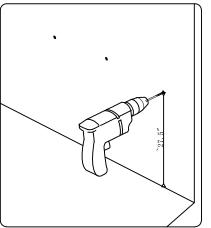

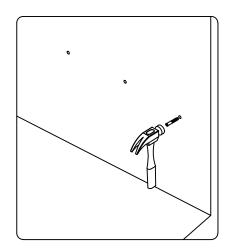

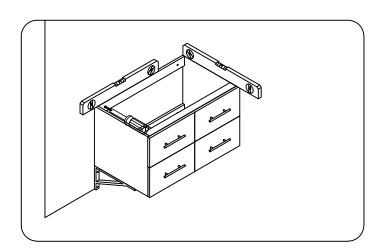

### **Top Installation**

