



## Installation Guidelines :

Install compacted aggregate base. Consult your paver supplier for proper width and depth for the specific paver application. Wearing protective eye-wear is recommended when installing ProFlex™ Paver Edging.


Determine proper positioning for the edging. ProFlex™ Paver Edging is ready to use for straight sections, or clip spines where needed to make the edging flexible. The edging should be installed directly on top of compacted aggregate base prior to screeding sand and setting pavers.

Diagram 1 illustrates an installation with the anchoring tabs underneath the pavers. Diagram 2 illustrates an installation with the anchoring tabs adjacent to the edge of the pavers. Either is acceptable, however; Diagram 2 is more widely used.

A minimum of (4) ProFlex™ anchoring spikes per 6 ft. piece of edging are recommended, but any landscape spike with a 3/8" maximum diameter will be suitable. Secure edging by driving anchoring spikes at a slight angle through tabs into compacted base. Position spikes at each end of the edging and a minimum of every 18" apart.

Backfill perimeter with topsoil. Seed, sod or install groundcover, as specified. ProFlex™ Edging should not be visible after installation.

**Diagram 1**

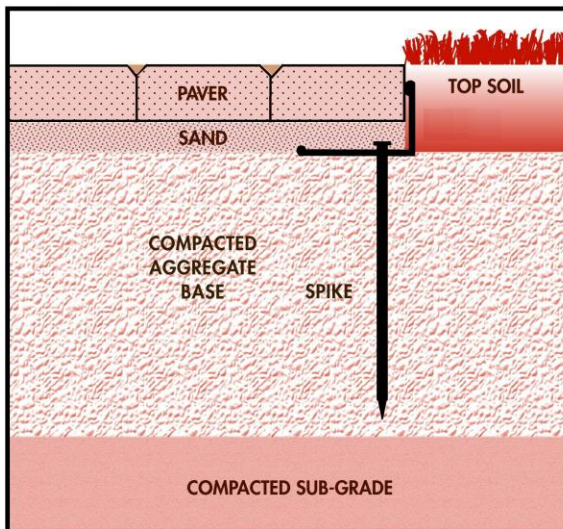

**Diagram 2**

