

Assembly Instructions: 3218-3LP & 3219-3LP (Dixon)

IMPORTANT:


- ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL.
- SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!
- USE ONLY THE SPECIFIED BULBS. DO NOT EXCEED THE MAXIMUM WATTAGE!

For Customer Service, please contact the place of purchase.

PREPARING FOR INSTALLATION

Remove all of the contents from the carton. See the important notes above. Shut off the power at the circuit breaker and completely remove the old fixture from the ceiling, including the old mounting strap.

1. Unscrew nuts (G) from canopy (F) to free mounting strap (B2) and place aside for future use. Place mounting straps (B1) and (B2) over the junction box and pull the house wires down through the center. Attach mounting strap (B2) to mounting strap (B1) and the junction box using mounting screws (R) and a screwdriver.

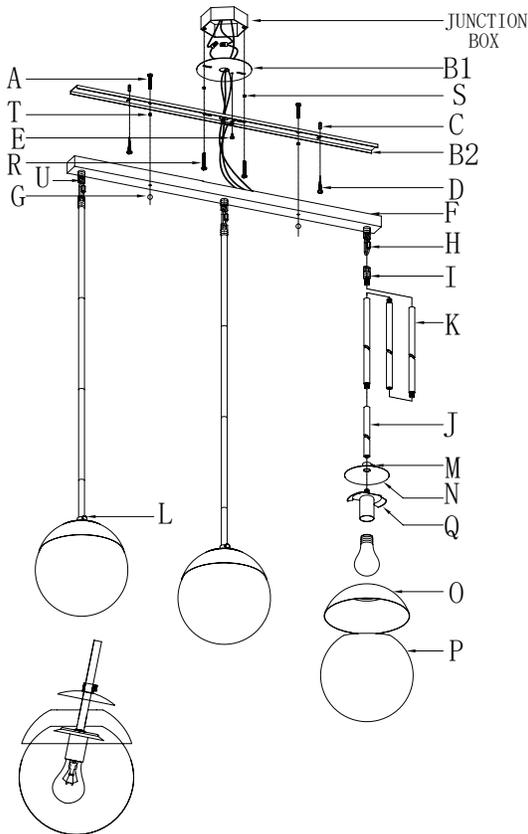

ASSEMBLING THE FIXTURE

3. By measuring, determine the correct number of rods (J) and (K) needed for proper hanging height.

To lengthen, add additional rods. If additional rods are needed, contact the place of purchase to order.

To shorten, add at least 8 to 10 inches of wire to the desired length and trim the wires. Slide any excess rods off the fixture's wires to discard.

4. All of the rods have threads at the bottom. Some of the rods have rod connectors (I) attached. Use these rods as the top rods that will connect to the canopy. Determine how many rods you will use and remove the threads from the rod that will sit closest to the orb. Twist the wires of one of the lamp bodies together. Push and pull the wires through the rods. Pull the wires taut through the rods before threading the rods together. Thread bottom rod (J) or (K) onto post (M) positioned above each socket.

5. Thread the wires through rod connectors (I). Unlock and attach canopy connectors (H) to rod connectors (I) and canopy loops (U). Twist to lock the canopy connectors. Pull the fixture's wires through the top of canopy (F).


CONNECTING THE WIRES

6. Have an assistant support the weight of the fixture while completing the wiring. Cut a 6" piece off of each of the fixture's hot wires and place aside. Remove about a half inch of the plastic covers from all of the hot wires. Match and twist all of the fixture's hot (black or smooth) wires together. Take one of the 6" pieces of hot wires placed aside and remove about a half inch of the wire's plastic cover from each side. Match and twist one of the exposed sides to the other hot wires. Make sure all twists are in the same direction. Use electrical tape and twist on a wire connector to secure the connection. Leave one end of the 6" wire free to connect to the house's hot wire. Repeat the above steps for the neutral and ground wires.

Attach the 6" fixture's wires to the house wires. Connect black to black (or smooth); white to white (or ribbed); ground to ground (green or copper). Twist the ends of the wire pairs together, and then twist on a wire connector. Make sure all twists are in the same direction. If there is no ground wire (green or copper) coming from the junction box, locate ground screw (E) on the mounting strap and wrap the fixture's ground wire around the green ground screw (E). Use a screwdriver to secure ground screw (E) onto the mounting bracket. Tuck all of the wires neatly into the junction box.

How to Identify the Fixture's Wires

Hot	Neutral	Ground
Smooth	Ribbed	Bare Metal, Green, or Green Inner Thread
Black	White	
Black Inner Thread	White Inner Thread	

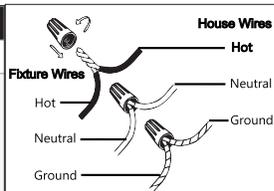

FINISHING THE INSTALLATION

7. Raise canopy (F) to the ceiling. Place canopy (F) outside of mounting strap (B2). Thread nuts (G) onto the exposed threads of screws (A).

8. Install light bulbs (not provided) in accordance with the fixture's specifications. Do not exceed the maximum recommended wattage.

9. For each of the orbs, loosen bolt (L) and raise lid (N) to the highest position. Tilt the lamp and rods slightly, and then pass the lamp through decorative cap (O) and into glass shade (P). Then, place decorative cap (O) and lid (N) on top of glass shade (P). Move the lamp and rods into a vertical position. Check that everything is level and secure the assembly by retightening bolt (L).

Your installation is complete. Turn on the power and test the fixture.

CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture.