









**Basic Tools Required**




Tape Measure &  
Pencil Level  
Phillips Screwdriver  
Drill with ¼" bit  
Ladder

**Note:** Make sure that the Door Canopy you purchased exceeds the door width.


**General Comments**

- Wash your hands before installation and be sure they are clean when handling the fabric.
- Always be careful with the fabric during installation. Drills, screwdrivers and other items can puncture the fabric.
- This and other customer installation damage is not covered by the warranty.
- A second person to assist in holding the door canopy up when installing your canopy is RECOMMENDED.

Included in canopy kit						
Item	Part Number	Description	Canopy Traditional & Classic Designs			
			4ft	6ft	8ft	
A	1200145	Head Rod Clamps	2	3	4	
B	1200144	Hinge w/bolt attached	2	2	2	
C	1200148	Eye End	2	2	2	
D	1200093	Screws #10 (1 ½")	8	10	12	
E	1200147	Elbow	2	2	2	
F	1200720	Internal Connectors	4	6	8	
G	1410012	Canopy instructions Sheet	1	1	1	CANOPY INSTRUCTION
H	N/A	Canopy Fabric Cover	1	1	1	
I	1300222	Head Rod Bar (Inside Threaded Pipe with Black Cap on end)	2	2	2	


J	1300225	Side Arms (Inside / Outside Threaded Pipe)	4	4	4	
K	1300225	Front Bar (Inside/outside Threaded Pipe)	2	2	2	
L	1300223	Center Bar (Inside Threaded Pipe Both Ends)	0	2	4	

## ASSEMBLY DRAWING

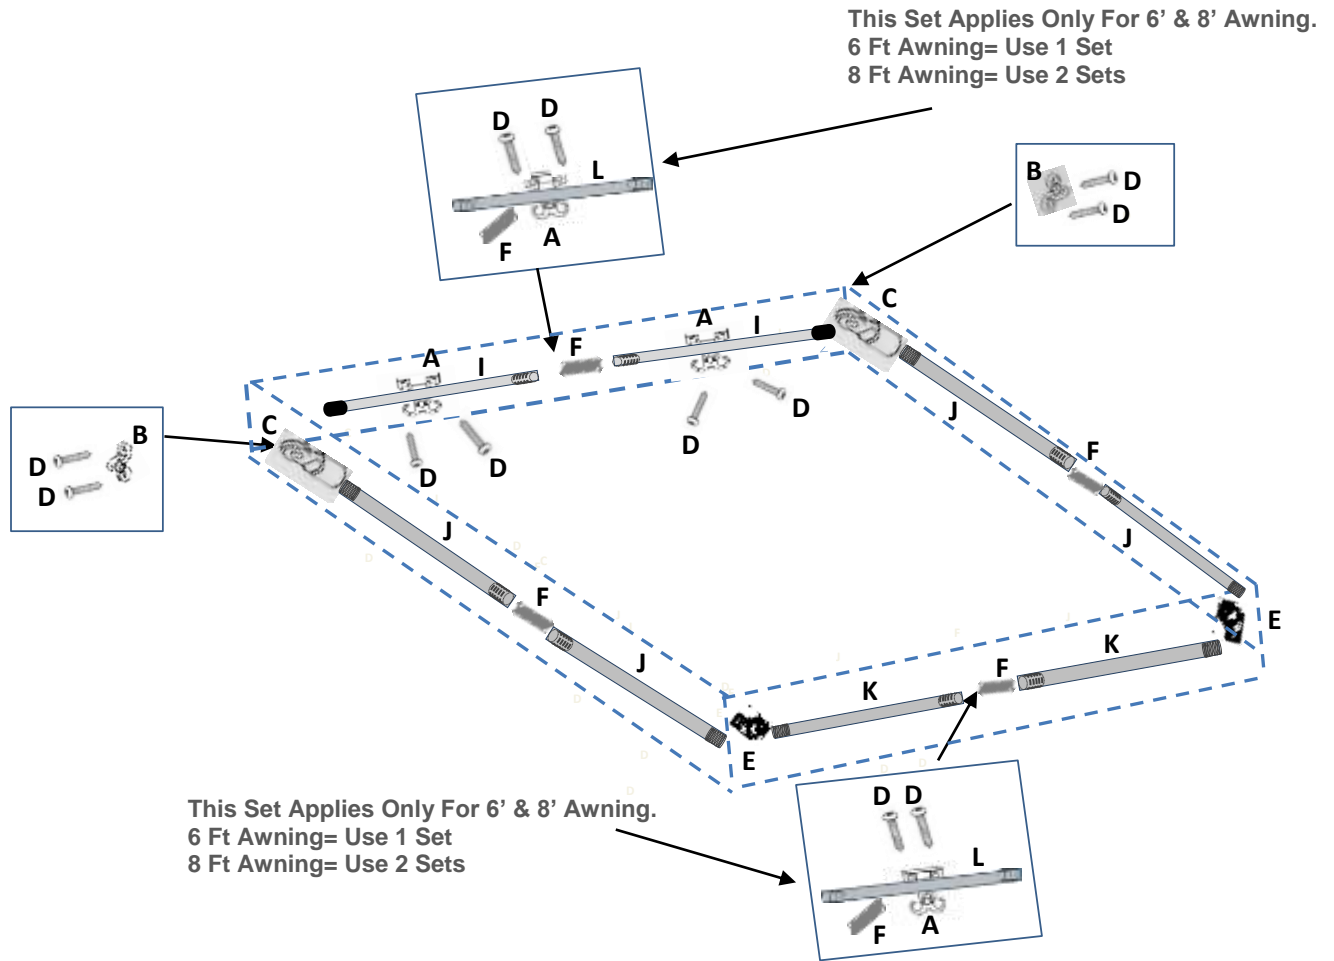

## Traditional & Classic Door Canopy Assembly and Mounting

1. Installing the head rod clamps, spacing evenly starting 6" from each end of the door
  - a) Drill pilot or anchor holes for each head rod clamp.
  - b) Fasten both head rod clamps to the wall, use a level to ensure clamps will be level with each other and centered above door or opening.

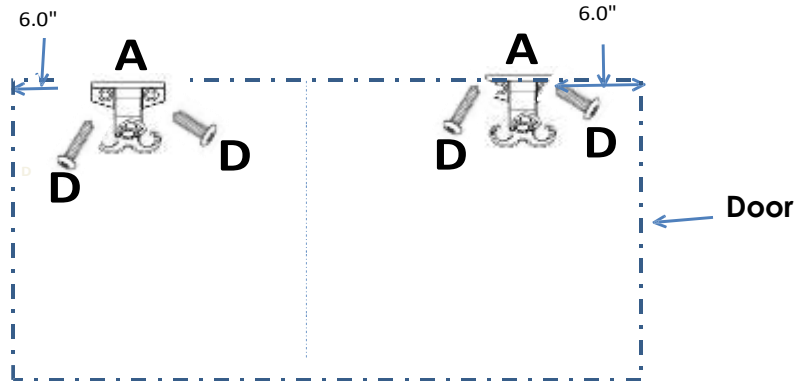

1. Assemble the Head Rod bar using the internal connector.




- a) Slide the Head Rod bar into the head rod pocket (see below).

2. Attach the Head Rod bar into the Head Rod clamps (already mounted on wall) and tighten the wing nuts.



3. Assemble the Front bar using the internal connector.




- a) Slide the front bar into the front bar pocket. (located near the valance of awning)

4. Add the elbows to the ends of front bar.




5. Screw the Eye end onto the Arm (repeat on other arm).

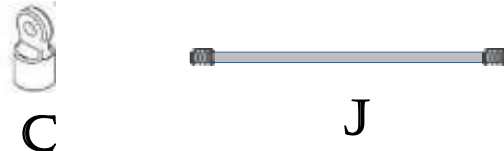

- a) Slide the Arms into the side pocket of door canopy.
- b) Screw into the elbows on front bar.

6. Straighten the front bar; making sure the door canopy is level and straight.
7. Screw both camelback hinges into the wall.
8. Remove middle screw on the hinge and attach the Arms (eye end attached to the hinge). Tighten screw in slot.

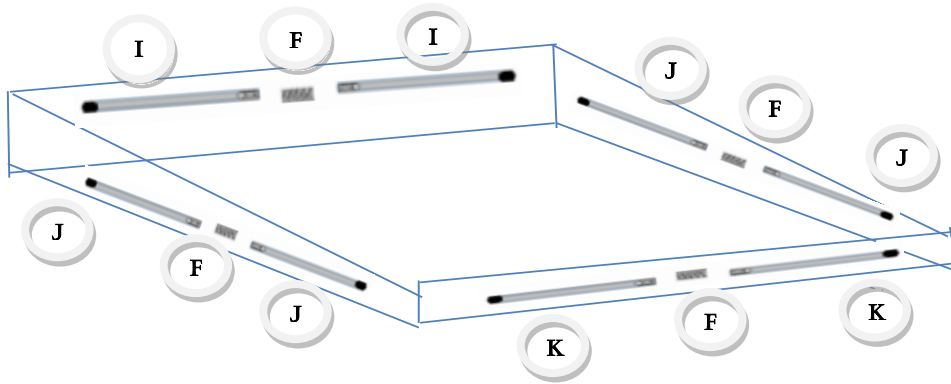

### Product Care and Maintenance

We use only quality fabrics in the manufacturing of our products, but fabrics do have a few limitations; therefore proper care of your canopy is important to extend its life.

- Clean canopy fabric with a mild soap solution as needed (every 3 months), rinse thoroughly with water and allow to air dry (never put fabrics in your dryer).
- Keep the underside of your door canopy clean by brushing with a household broom.
- Remove door canopy during extremely windy avoid damage.
- Treating your door canopy with a marine grade fabric cleaner and fabric guard will help increase its life.
- It's advisable to remove your canopy in the winter to increase its life expectancy.
- Store canopy in a dry area.
- **DO NOT** store in a non-breathable plastic bag.

### THE DON'T'S

- Don't spray insect repellent over fabric, some solutions may cause staining.
- Don't permit leaves, twigs, and pine needles to accumulate and remain on the door canopy.
- Don't drag on abrasive surfaces.
- Don't wash with abrasive cleaners or bleaches for cleaning.

**Customer satisfaction and end user satisfaction is a number one concern and priority.**

**Door Canopy in a Box®**

- **Fabric** - 1 Year Limited Warranty against manufacturer's defects in the fabric or sewing
- **Frame** - Hardware 1 Year Warranty

**Fabric** – 1 Year Limited Warranty against manufacturer's defects in the fabric or sewing

- Up to 3 months from the date of purchase full replacement of item includes shipping cover only
- Over 3 months and under 6 months from the date of purchase customer pays 50% of new item cover only
- Over 6 months and under 1 year from the date of purchase customer pays 75% of new item cover only

**Frame** - 1 Year Warranty

**PURCHASE INFORMATION:**

NAME OF STORE OR ONLINE ESTABLISHMENT ITEM WAS PURCHASED FROM:

ADDRESS OR WEBSITE OF PLACE OF PURCHASE:

PHONE NUMBER OF PLACE OF PURCHASE:

**PLEASE KEEP THE ABOVE INFORMATION WITH ORIGINAL RECEIPT AND PACKING SLIP.**