


TELESCOPIC POLE

To extend the telescopic pole:

1. Grab the middle section and turn the smallest pole a quarter turn. Extend pole to desired length.
2. If you require additional reach, grab the outer section and turn the middle pole a quarter turn.

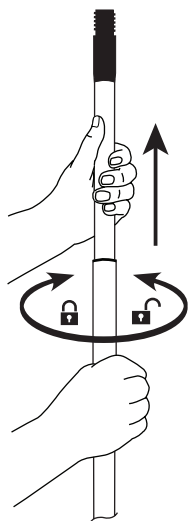

NOTE: The telescopic pole locks in both clockwise (installing bulbs) and counterclockwise (removing bulbs) directions.

This helpful feature means that the pole will respond to your needs as you use it with only a quarter turn.

UNIVERSAL BULB CHANGING KIT INSTRUCTIONS

⚠ Read warning on back of this booklet


HOW IT WORKS:

- **Separate cups prior to starting. Only use one attachment at a time.**
- All of the non-scratch cups (B, C, D and E) snap on and off of the handle by pressing both blue locking buttons.
- The broken bulb changer is built into the handle (A). Press the small black buttons to remove the blue piece from the handle.
- All of the pieces will store as one unit by snapping sections together as shown.
- The 11 foot pole has a locking cone, so each attachment stays securely locked. The telescopic pole also locks in both directions, so it works when you are installing or extracting a bulb.



⚠ WARNING

Hazard of electrical shock or burn. Bulb changer conducts electricity. Turn power off. Allow bulb to cool before changing. Wear eye protection to protect from possible falling glass or debris. Be certain to use the correct attachment for the type of bulb you are changing.

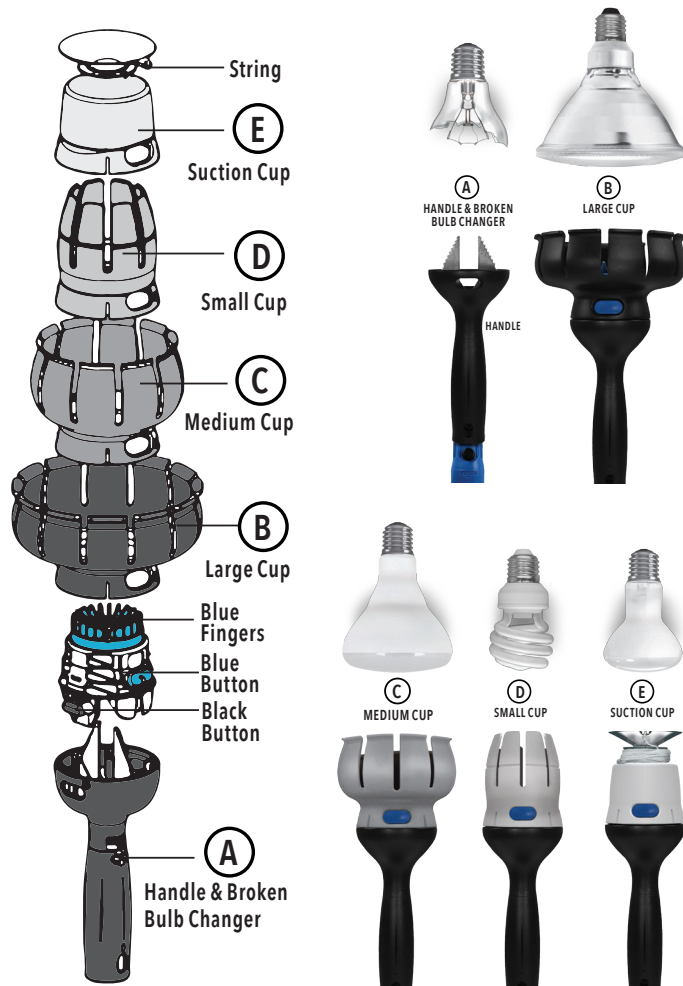

LIFETIME PRODUCT GUARANTEE
PRODUIT GARANTIE À VIE
GARANTÍA DEL PRODUCTO DE POR VIDA

If you are not completely satisfied with this product, please contact us at:

Unger Industrial, LLC
425 Asylum St. Bridgeport, CT 06610
1-800-833-6100
www.ungerpro.com

Item No. 977000 REV 1

UNIVERSAL BULB CHANGING KIT

INSTRUCTIONS

Change attachments by **pressing the two blue buttons** to remove cup and pressing desired cup in place until you hear the cup lock in place.

Only use one attachment at a time

Black handle locks onto blue pole cone with a click.



FOR SMALLER & ROUNDER BULBS

Guide cup over the edge of the bulb. Apply a slight force to allow the flexible fingers to grip the bulb.



SMALL CUP



FOR SMOOTH BULBS

STRING



Unwrap string. Wipe suction cup so that it is clean. Apply to center of bulb.

After bulb is installed, pull string to break the suction. Do not pull pole straight down.



SUCTION CUP

FOR MEDIUM BULBS

Guide cup over the edge of the bulb. Apply a slight force to allow the flexible fingers to grip the bulb.



MEDIUM CUP



FOR BROKEN BULBS

Remove the blue fingers by releasing the small black buttons.

The metal fingers grip inside the broken bulb. Apply a slight force to loosen and extract broken bulb while turning.



HANDLE

FOR LARGER BULBS

Guide cup over the edge of the bulb. Apply a slight force to allow the flexible fingers to grip the bulb.



LARGE CUP

