


## THE STRENGTH OF BEAUTY



## RESIDENTIAL GRADE FENCE INSTALLATION MANUAL GIVE THIS MANUAL TO THE HOMEOWNER UPON COMPLETION DT3327-20

**CAUTION:** This manual is for **residential** fence only. All fence and gates **must** be installed to conform with B.O.C.A. Specifications and/or local building code regulations.

**Note:** Local municipalities may require a setback from property line to fence line, otherwise, it is recommended to be 2" inside the property line. It is important to find out all the requirements before installing your fence.

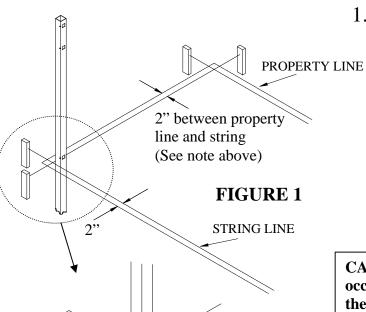

1/8" between


post and string

## 1. Layout and Planning

- 1.1. First stake out the area and run strings around as shown in Figure 1.
- 1.2. Start by installing the gate posts. See your gate installation manual for proper gate post spacing.
- 1.3. Proceed to dig post holes. Post center to center measurement will be 6'- 3/4" when everything is level and tight. See Figure 2 (on next page) for post hole depth.

CAUTION: In areas where ground frost occurs extend the concrete footing below the frost line.

NOTE: Local municipalities may require different hole depths than those shown below. You must verify that these depths meet all local building codes.

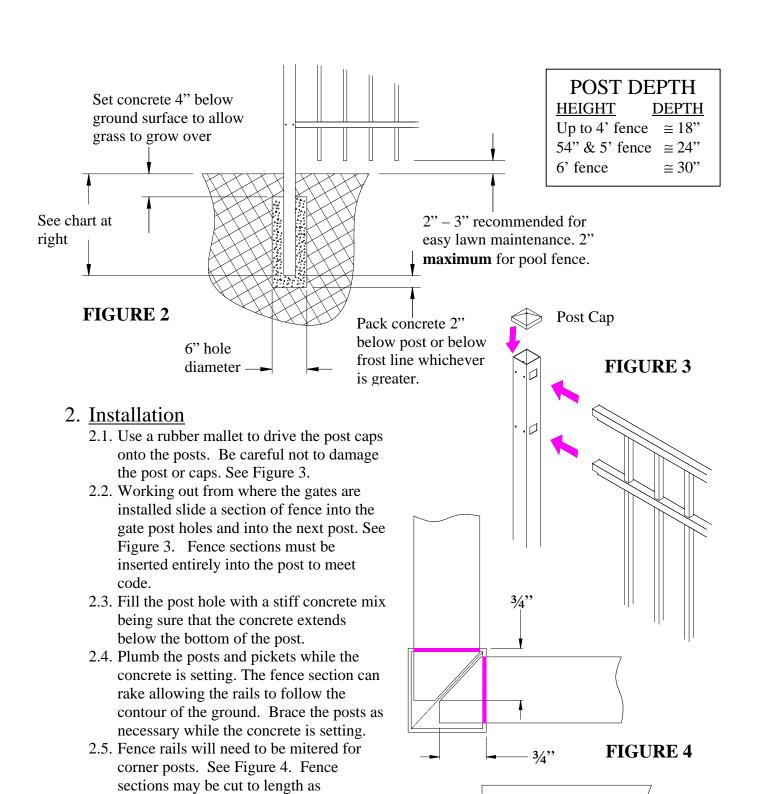


to be notched as shown in Figure 5.

2.6. Additional hardware is available to attach posts and rails to walls.

necessary. Cut fence sections will need

2.7. After concrete has set fasten the posts to the fence with #8 x 1" self-drilling self-tapping screws provided. Be careful not to over-tighten because screw heads may break off or the threads may strip out.



DELGARD FENCE COMPANY 8600 RIVER ROAD DELAIR, NJ 08110-3398 USA