erod motorized drapery hardware

CENTER OPEN CONFIGURATION

BEFORE INSTALLATION, UNPACK BOX AND LAY OUT CONTENTS:

A		X 1	**erod™**
B		X 4	**Mounting Plate**
C		X 4	**"L" Support**
D		X 2	**Center Bracket Clamp**
E		X 1	**Motor Assembly**
F		X 1	**Remote Control**
G		X 8	**Mounting Screw**
H		X 1	**Wall Adapter w/ 12 ft Cord**
I		X 1	**Remote Sensor (attached to motor)**
J		X 2	**Rotating Side Bracket (attached to rod)**
K		X 4	**Bracket Set Screw**
L		X 10	**Cord Guides**
M		X 1	**Rod Set Screw**
O		X 28	**Clips**

Care Instructions: Clean with a soft cloth. Do not use abrasive cleaning agents, solvents, or polishes as they may damage the finish.

Estimated Assembly Time: Approximately 60 minutes

Tools Needed (not included): Drill with $1/16$ in drill bit, Needle nose pliers, Phillips screwdriver, Level (recommended)

How to Measure: To determine the appropriate drapery rod length, use a metal measuring tape to gauge the outside width of the window to be covered. Align ends of erod™ to outer edges of window.
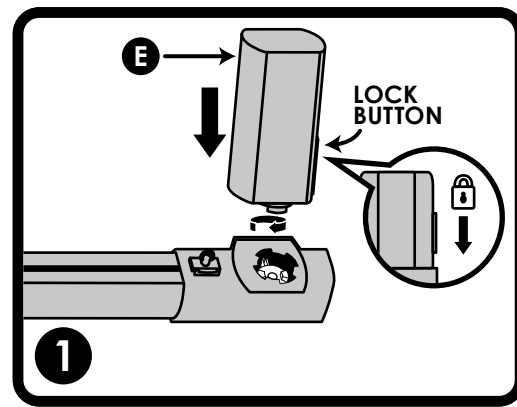

1 Lay erod™ on a flat surface with keyed slot facing upward. Insert motor assembly into keyed slot on rod end. Twist until gears are engaged and motor is seated into erod™ (lock button should align with stationary clip on end of rod). Slide lock button towards rod to lock motor assembly into place.
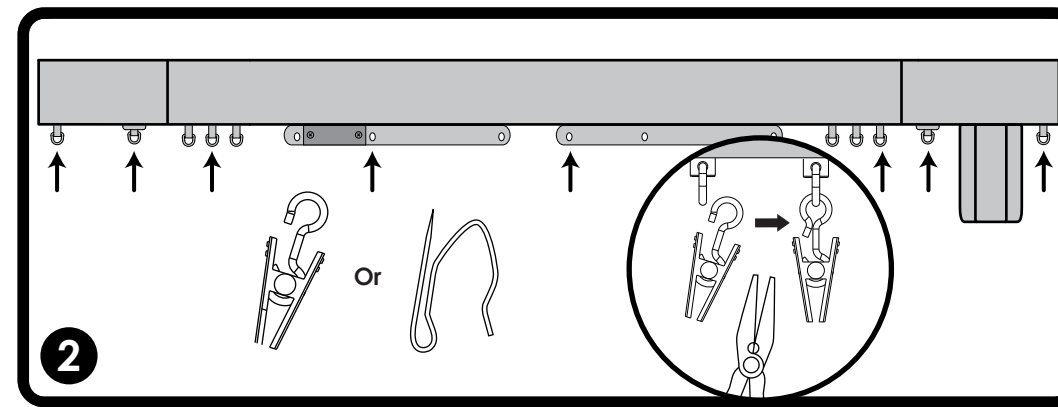
2 **Clips (included) or pin hooks (not included) can be used with erod™ to hang drapery.** Attach clips or pin hooks to erod™ on all loops and all holes on both carriers. Pinch closed with needle nose pliers.

Find closest electrical outlet to window to determine which side of window to orient motor. **Rod can be flipped to orient motor to left or right side to be closest to outlet.** (Battery Power Kit sold separately for use without wall adaptor.)
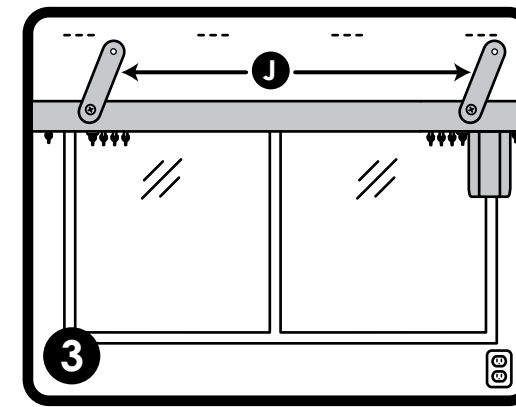
3 Extend rotating side brackets on erod™ toward wall. Align ends of erod™ to outer edges of window. Using level and rotating side brackets, mark desired side and center mounting plate locations.

**Make sure to locate wall studs to attach brackets.**
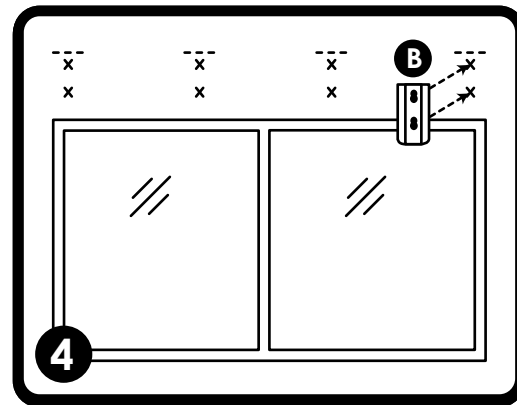
4 Align top of mounting plates to marked positions and mark hole positions. Make sure all 4 mounting plates are at the same horizontal level. (NOTE: Some installations require special attachment methods and anchors. Consult a professional to purchase parts for correct mounting methods.)
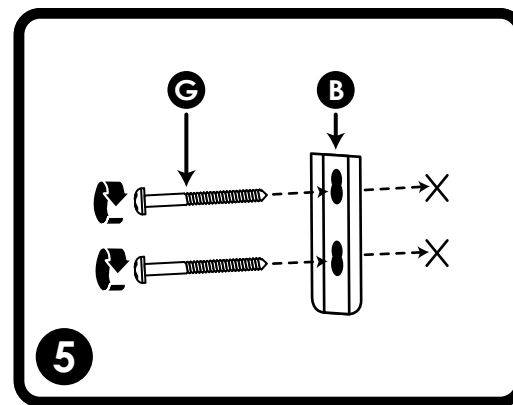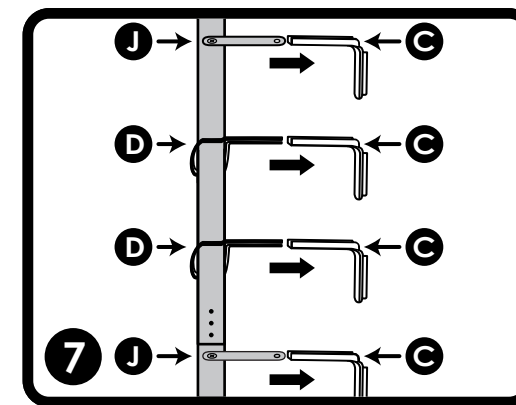
5 Drill pilot holes with $1/16$ inch drill bit. Attach mounting plates to wall using screws provided.

Current brackets are designed for wall-stud installations and for a maximum of 20 lbs of drapery panels. Please consult a professional for alternate installations. Additional brackets are available for purchase.
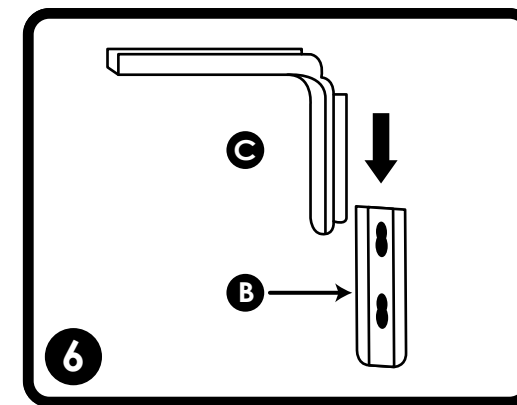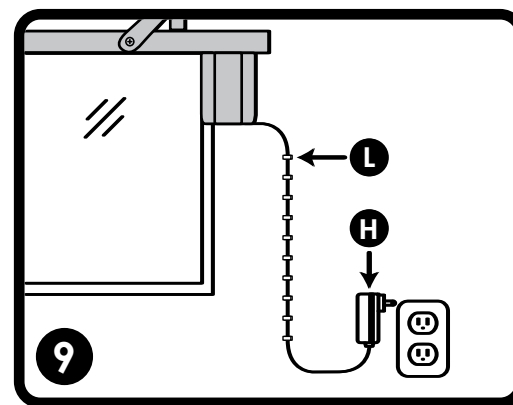
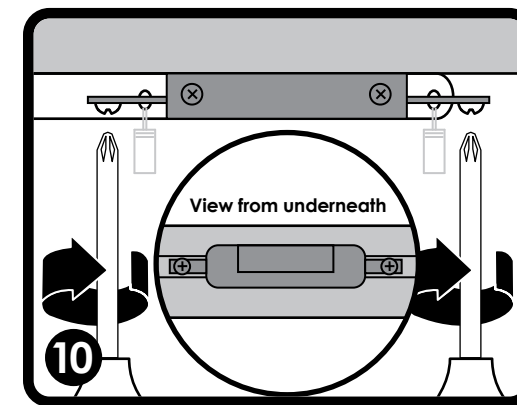**6** Slide "L" supports onto mounting plates.

7 Place center bracket clamps near middle of erod™. Insert all four brackets into "L" supports on wall. Pinch center clamps tight onto rod and lock into place with top set screw.
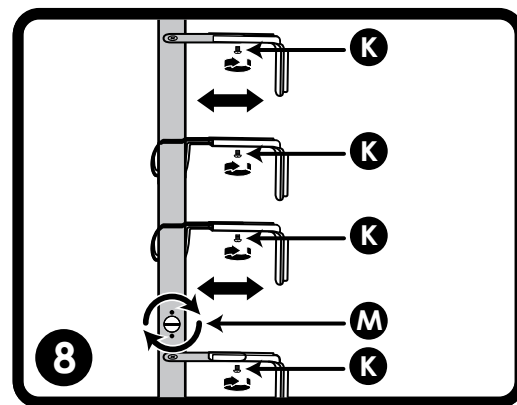
8 Determine the projection of the erod™ from the wall, then insert and tighten bracket set screws on bottom of all 4 brackets to secure. Place rod set screw in middle hole (of the three on top of rod). Use a coin to tighten rod set screw.

9 Plug wall adaptor into electrical outlet. Use cord guides to secure cord to wall.

FOR QUESTIONS OR CONCERNS, CALL CUSTOMER SERVICE AT 1-877-695-8268, 8 AM-5 PM, PST, MONDAY-FRIDAY.

10 To set center drapery position, Press < I > button to open erod™, to its outermost position (only one carrier will move). Slide loose carrier to outermost position (away from the motor). Tighten screws on underside of carrier to lock in place. Press > I < button and close erod™ to its center position. The center drapery position on your erod™ is now set.
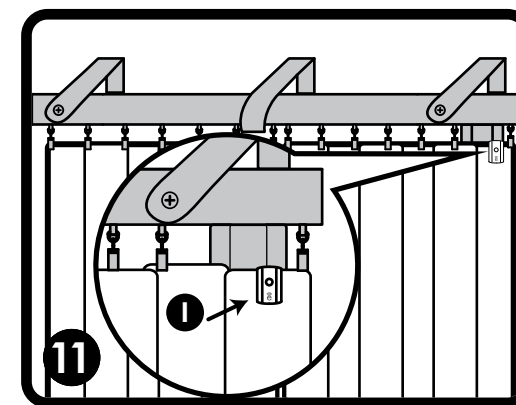
11 In the closed position, start from each end of erod™, attach drapery panel(s) using clips (or hang drapes with pins). Work your way towards the center of rod, distributing clips evenly as you go. Overlap panels for privacy. **(Additional roller clips sold separately.)** Clip remote sensor to front of panel (hiding cord behind drapery).