

NuvōMed™

Floor Standing Air Purifier with HEPA & Active Carbon Filter



ITEM: FSP-1/0804

INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY

AND RETAIN FOR FUTURE USE

Getting Started

- Remove the product from the box.
- Remove any packaging from the product.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

Package Contents

- Floor Standing Air Purifier with HEPA & Active Carbon Filter
- Instruction Manual

Key Features

- Floor Standing Air-Purifier with HEPA & Active Carbon Filter
- Built-in Ionizer
- High-grade HEPA Filter eliminates mold, dust, allergens & bacteria
- Honeycomb activated carbon filter-rapid absorption of odor, decomposition of formaldehyde, benzene, ammonia & second-hand smoke
- Anti-bacterial Filter: removes fine particulates, mites, microbe & other bacteria
- Super quiet & energy saving motor: 18dB ~ 55dB - does not disturb your sleep
- Clean air delivery rate (CADR) of 160m³/h
- 3 Speed Air Control - Sleep Mode - Timer function
- Coverage area up to 450 Sq. Ft.
- Filters included: Cold Catalyst Filter - Anti-Bacterial Filter - Honeycomb Carbon Activated Filter - High Grade HEPA Filter
- Big LED display control panel

Safety

Read this user manual carefully before you use the appliance, and save it for future reference.

To reduce the risk of electric shock, this equipment has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact qualified personnel to install the proper outlet. Do not alter the plug in any way.

Danger

- Do not let water or any other liquid or flammable detergent enter the appliance to avoid electric shock and/or a fire hazard.
- Do not clean the appliance with water, any other liquid, or a (flammable) detergent to avoid electric shock and/or a fire hazard.
- Do not spray any flammable materials such as insecticides or fragrance around the appliance.

Warning

- Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect the appliance.
- Do not use the appliance if the plug, the power cord, or the appliance itself is damaged.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Child shall not play with the appliance. Cleaning and maintenance shall not be made by children without supervision.
- Do not block the air inlet and outlet, e.g. by placing items on the air outlet or in front of the air inlet.
- Make sure that foreign objects do not fall into the appliance through the air outlet.


Caution

- This appliance is not a substitute for proper ventilation, regular vacuum cleaning, or use of an extractor hood or fan while cooking.
- If the power socket used to power the appliance has poor connections, the plug of the appliance becomes hot. Make sure that you plug the appliance into a properly connected power socket.
- Always place and use the appliance on a dry, stable, level, and horizontal surface.
- Leave at least 20cm free space behind and on both sides of the appliance and leave at least 30cm free space above the appliance.
- Do not place anything on top of the appliance.
- Do not sit or stand on the appliance. Sitting or standing on the appliance may lead to potential injury.
- Do not place the appliance directly below an air conditioner to prevent condensation from dripping onto the appliance.

- Make sure all filters are properly installed before you switch on the appliance.
- Only use the original Nuvomed filters specially intended for this appliance. Do not use any other filters.
- Combustion of the filter may cause irreversible human hazard and/or jeopardize other lives. Do not use the filter as fuel or for similar purpose.
- Avoid knocking against the appliance (the air inlet and outlet in particular) with hard objects.
- Always lift or move the appliance by the handle on top of the appliance.
- Do not insert your fingers or objects into the air outlet or the air inlet to prevent physical injury or malfunctioning of the appliance.
- Do not use this appliance when you have used indoor smoke-type insect repellents or in places with oily residues, burning incense, or chemical fumes.
- Do not use the appliance near gas appliances, heating devices or fireplaces.
- Always unplug the appliance after use and before cleaning or carrying out other maintenance.
- Do not use the appliance in a room with major temperature changes, as this may cause condensation inside the appliance.
- To prevent interference, place the appliance at least 2 meters away from electrical appliances that use airborne radio waves such as TVs, radios, and radio-controlled clocks.
- The appliance is only intended for household use under normal operating conditions.
- Do not use the appliance in wet surroundings or in surroundings with high ambient temperatures, such as the bathroom, toilet, or kitchen.
- The appliance does not remove carbon monoxide (CO) or radon (Rn). It cannot be used as a safety device in case of accidents with combustion processes and hazardous chemicals.
- If you need to move the appliance, disconnect the appliance from the power supply first.
- When moving the appliance, do it slowly and do not push it rapidly.
- Do not move the appliance by pulling its power cord

 The appliance must be placed on a flat firm surface.

Description of Parts

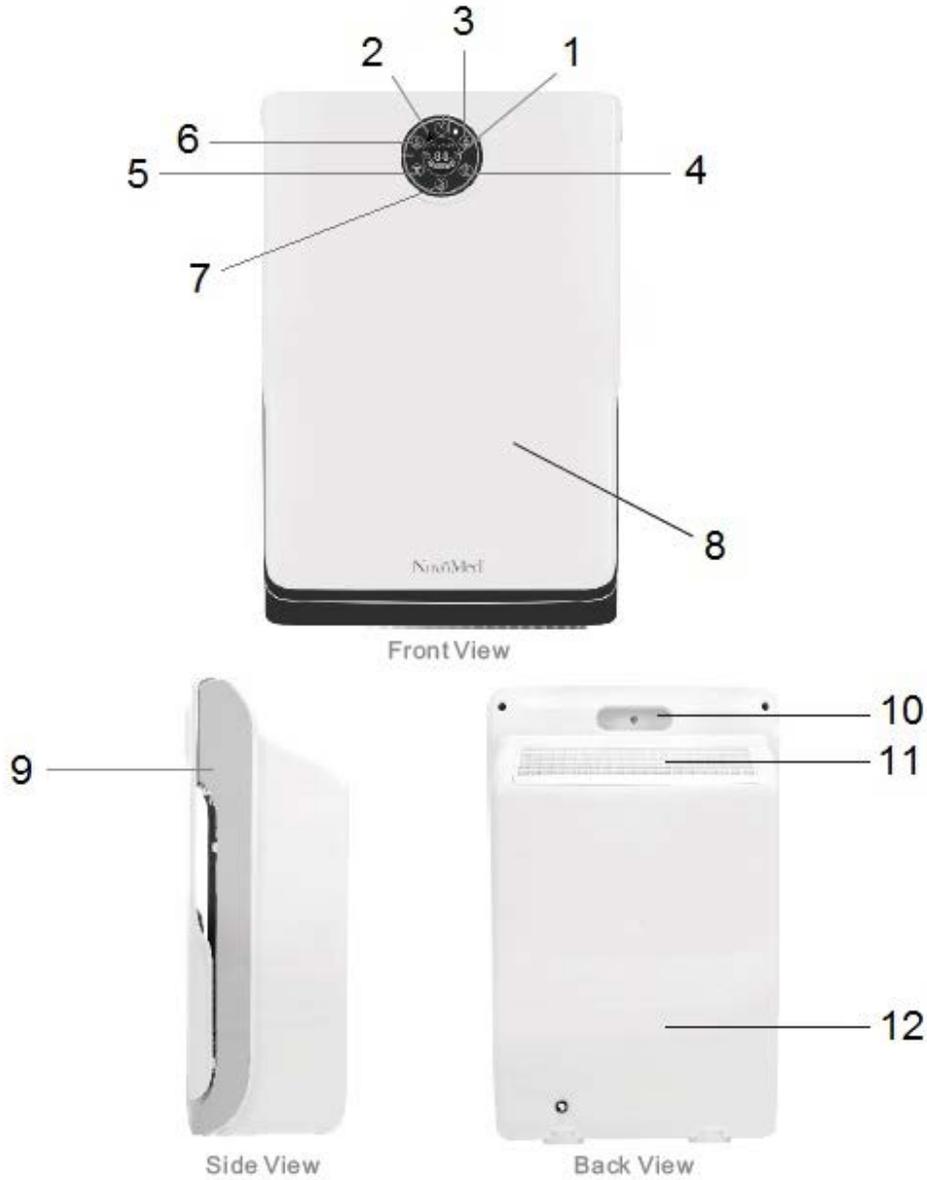

1	Display Board	7	Sleep Mode
2	Control Panel	8	Front Panel
3	On/Off	9	Air Purifier Front Case
4	Timer	10	Handle
5	Wind Speed	11	Air Outlet
6	Ionizer	12	Air Purifier Rear Case

INSTRUCTIONS FOR USE

Installation

Step	Description
	Pull the front panel and lift upward.
	Turn the safety brackets to access filters. Remove both filters.
	Remove all concealing bags.
	Place Antimicrobial and HEPA Compound Filters back into the inner side of the product. Note: Please ensure the tab side is facing you.
	Place Cold Catalyst and Activated Carbon Compound Filters back into the inner side of the produce. Note: Please ensure the tab side is facing you.
	Make sure the filters are installed in correct order and position. Turn the safety brackets to hold the filters in place.
	To install the front panel, align the panel's top to the top of the air purifier, so that interlocks engage in the grooves of the air purifier. Once top of the panel is latched, gently align the rest of the panel against the air purifier as well. Built-in magnets will pull the panel in, and hold it securely.

Operation

1. Connect the power supply.
2. Set your desired function(s) according to following functional description –

Screen display	Operation
	Press the power button to turn on/off the unit. When turning on the unit for function, the digital screen will show the last operating functions used.
	With every press of the timer button, you can adjust the timer starting from 1 to 12 hours. The air purifier will turn off automatically, after the selected duration has passed.
	With the speed control button you can adjust speed from low to medium to high. Selected speed will display on the digital screen.
	Upon pressing the sleep button, the air purifier will automatically set to low speed. The speed and sleep buttons are inversely programmed - when one is turned on, the other gets turned off.
	Press the ionizer button to turn on the ionizer. The icon will display on the screen when it is turned on.

Cleaning & maintaining your Air Purifier

 Always make sure the appliance is turned off and unplugged before cleaning.

1. In order to extend the filter life, the filters should be exposed to sunlight periodically in order to release the harmful gas and odor, and at the same time, to kill bacteria.
2. Do not place the filter close to high temperature to avoid disfiguration or fire.
3. Only use the original Nuvomed filters specially intended for this appliance. Do not use any other filters.
4. To change the filter, please remove the old HEPA Filter from the appliance and insert the new filter.

HEPA Filter replacement

Replace the HEPA filter every 6 - 9 months of usage.

To buy new HEPA Filter, please visit www.nuvomed.us

Cleaning the surface of the housing

1. Turn off the appliance and unplug the unit from power supply.
2. Use a soft cloth to clean the surface of the housing.

Troubleshooting

Problem	Possible Cause	Solution
Unit does not power on	The unit is not properly connected to power source.	Check if the power cord is correctly connected to the power source.
	The unit is not turned on.	Turn on the unit.
Outlet airflow is significantly weak	The filters are dirty.	The filters need to be cleaned or replaced. You can shake slightly the filters to remove the dust and lint etc on it.
	The filter packaging is not removed.	Please remove the filter concealing bag.

Product Specifications:

Input Voltage: AC 120V~

Frequency: 60Hz

Rated Power: 40W

Unit Size: 13.0 L x 6.8 D x 19.8 H inch

Unit Weight: 10 Lb 2 Oz

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in

a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

LIMITED WARRANTY

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of thirty (30) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 30 days warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or

replacement product will be in warranty for the balance of the 30 days warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Nuvomed Inc. Customer Service at info@nuvomed.us or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.