





Installation  
Manual &  
Operating  
Instructions



WARNING

Do Not over-tighten plumbing connections.

Over-tightening plumbing connections can damage parts and cause leaks.

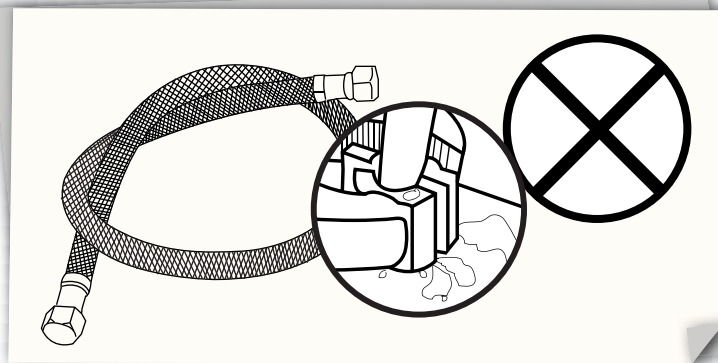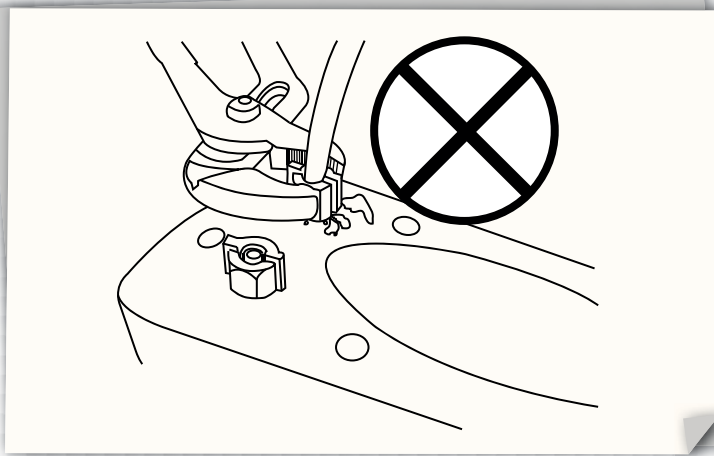

# CONTENTS

|                                     |       |
|-------------------------------------|-------|
| Functions and Characteristics ..... | 4     |
| Parts list .....                    | 5     |
| Configuration .....                 | 6     |
| Final Assembly .....                | 7     |
| Installation Instruction .....      | 8 - 9 |
| Operation .....                     | 10    |
| Maintenance .....                   | 11    |
| Warranty .....                      | 12    |
| Contact                             |       |


● ● ● ● ● ➤ Read this manual carefully and install properly

● ● ● ● ● ➤ This product should be installed accordingly to the manual

● ● ● ● ● ➤ Keep this manual for future reference


## Functions and Characteristics

- Ambient temperature bidet model
- Ingenious splash guard
- Continuous Controlled Water Stream
- No electricity or battery required
- Connects directly to fresh water line
- Built-in cold water by-pass
- Adjustable pressure Control
- Quality silver brass parts
- Brass T valve
- Retractable nozzle for better hygiene
- Splash Guarded Nozzle
- P.S.P.C (Positive Stepping Pressure Control)
- Double sided body panel


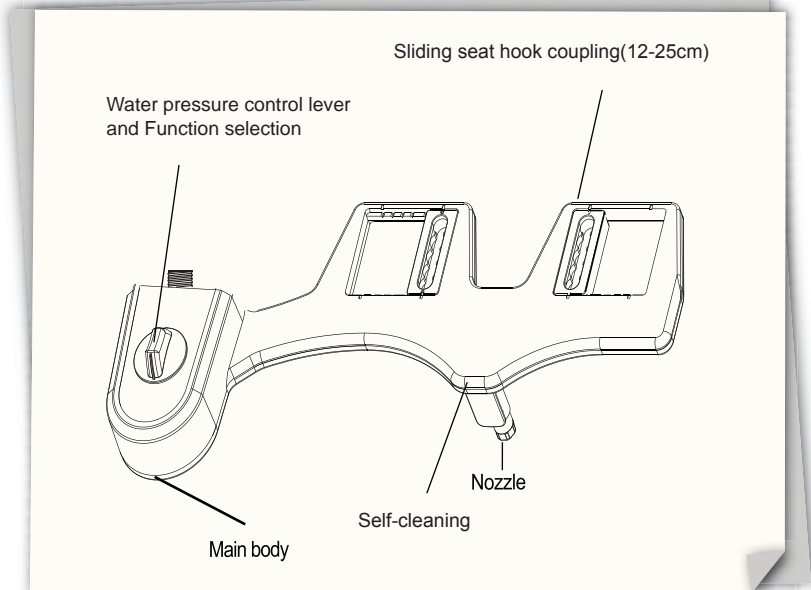


## Parts List



| Name               | Quantity |
|--------------------|----------|
| Bidet              | 1        |
| 7/8" T Adapter     | 1        |
| Braided Metal Hose | 1        |
| Protective O rings | 2        |
| Owner's Manual     | 1        |

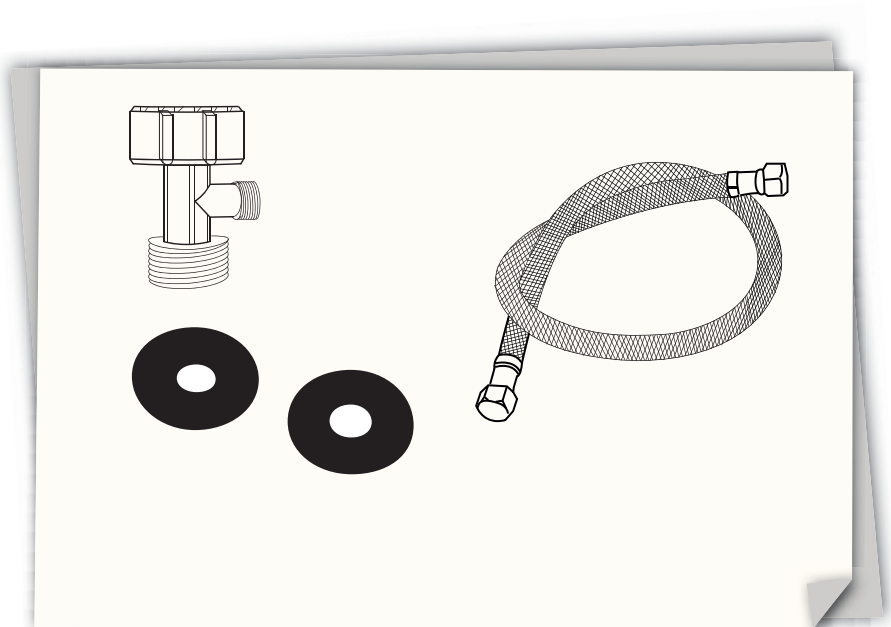

# Configuration

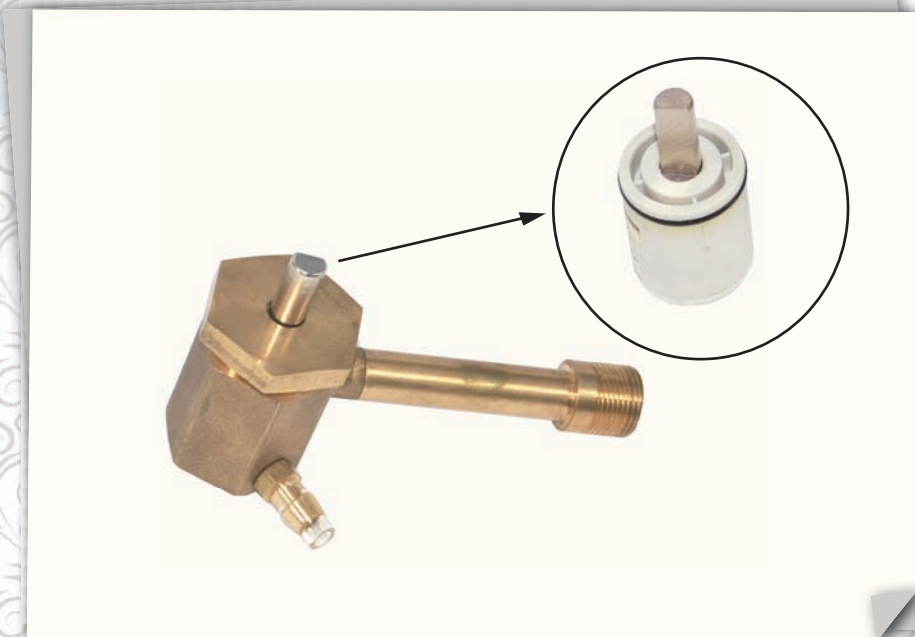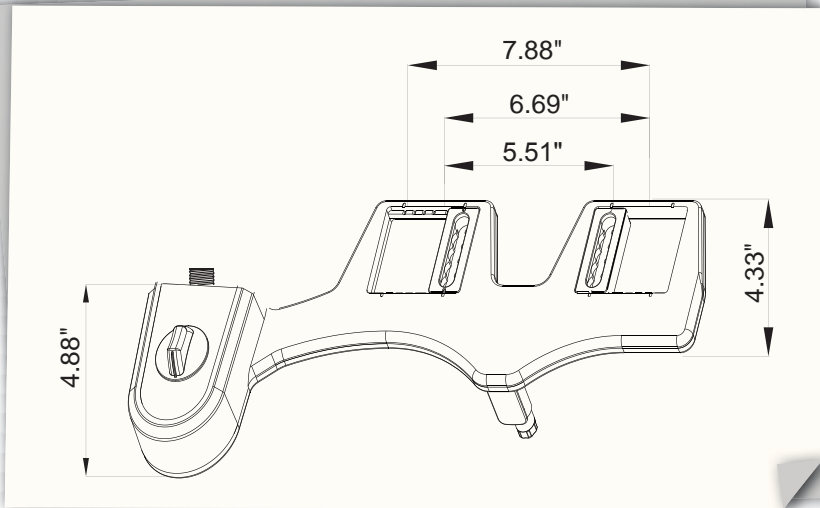

Tighten connections while checking for leaks. Do not over tighten.

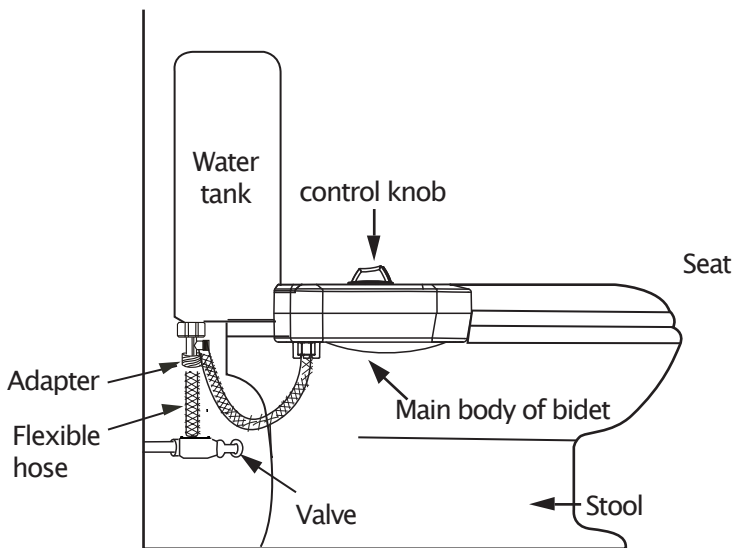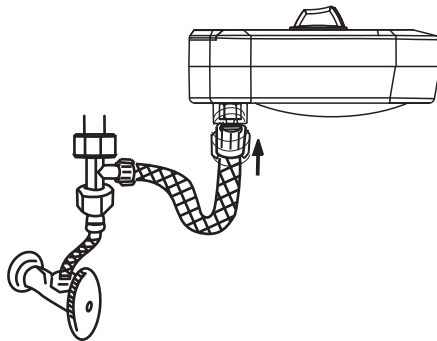


# Installation Instructions

## 1. CAUTION

Do Not over tighten any connections.  
Over tightening connections and adaptor can  
cause damage to the parts.

## 2. PROCEDURES OF ASSEMBLY

1

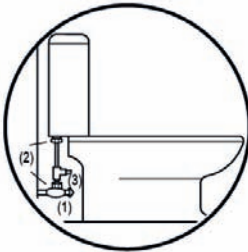

Shut water supply off by turning  
it to the right and disassemble the  
water hose.  
Flush toilet to drain water inside of  
toilet water tank before  
disassembling the water hose.




# BIO BIDET A3

2




Remove existing seat and lid.  
Release the bolts on both sides of  
the existing toilet seat.

3

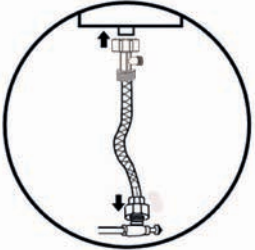


Connect supplied universal 7/8" T  
valve to the fill valve underneath of  
toilet water tank and connect water  
supply hose between universal 7/8"  
and shut off valve

4

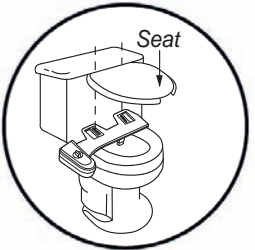

Mount bidet and toilet seat/lid over  
toilet mounting holes.  
Supplied rubber O-rings should be  
placed under the bidet mounting  
bracket to protect and secure the  
bidet on the toilet.

5

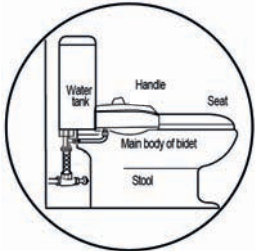

Connect water supply hose  
between bidet inlet and universal  
T valve

## Operation

Using BIO BIDET A3

To use the posterior wash begin turning the dial clockwise from the OFF position.



Pressure can be controlled by how far the dial is turned. To increase the water pressure continue to turn the dial further, in order to reduce water pressure turn the dial back towards the center. The visual markings around the dial will help depict the amount of pressure selected.

It is recommended that women lean forward slightly for the spray to reach all areas during the feminine wash cycle.

Self-Cleaning




The self cleaning operation is accessed by turning the dial in the counterclockwise direction. This will flush out and allow water to flow over the nozzle.

## Maintenance

To clean the nozzle, gently pull down on the head of the nozzle and use a toothbrush or soft cloth and mild detergent to clean the nozzle.

Do not use any harsh, abrasive products to clean A3, which may damage the surface of the product.

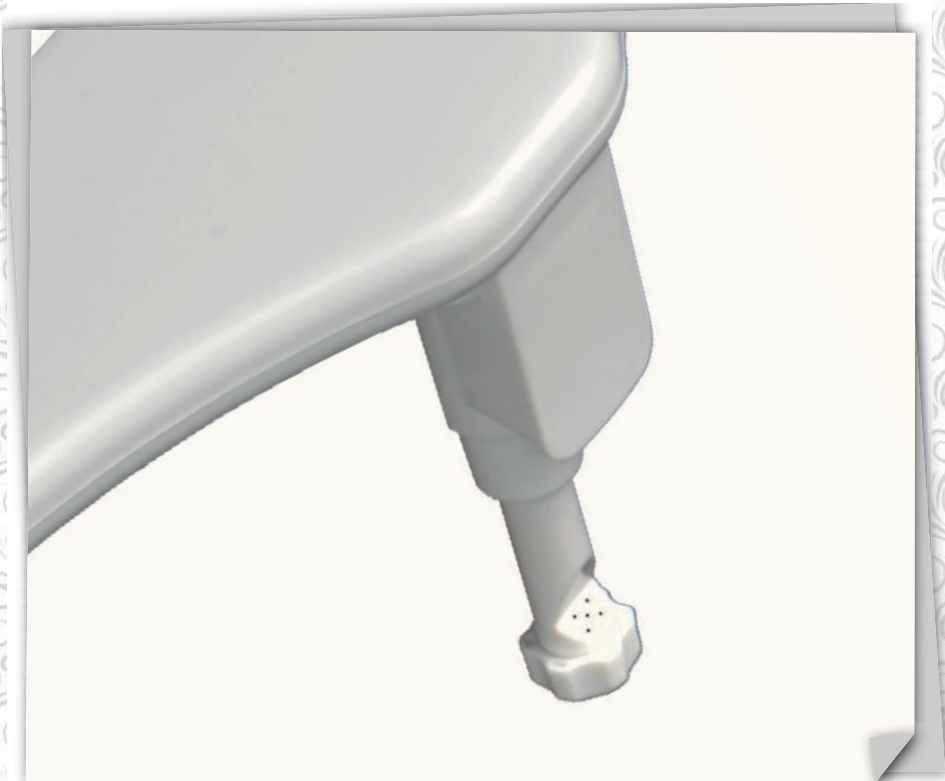

## Warranty

Your Bio-Bidet,

Is warranted against defects in materials or workmanship for one (1) year from the Date of original purchase. Defective parts or a defective product returned to BBC innovation will be repaired with new or comparable rebuilt parts or exchanged for a Refurbished Bio-Bidet as determined by BBC innovation in their sole discretion.

This limited warranty given by BBC innovation covers all defects encountered in normal use of Bio-Bidet, and do not apply in the following cases:

1. Loss of or damage to Bio-Bidet due to abuse, misuse, tampering, mishandling, improper packaging by you, alteration and follow operating instructions.
2. Use of parts or supplies (other than those by BBC innovation's dealers) that cause damage to Bio-Bidet.
3. Replacement of discolored or stained parts caused by chlorine, bleach, ammonia and other chemicals, cleaning supplies, oxidation, normal wear and tear.
4. Damage to or malfunction of the unit as a result of improper and negligent installation.

5. Any and all damages to plumbing, walls, floors, ceiling and personal properties resulting from water leaks or breakage. The product must be used at the user's own risk. Therefore, the owner hereby releases the manufacturer and distributor from any and all claims for damages where the above condition exists.

No implied warranty, including any implied warranty of merchantability or fitness or a particular purpose, applies to BBC innovation bidet after the applicable period of the express limited warranty stated above, and no other express warranty or guarantee, except as mentioned above, given by any person or entity with respect to Bio-Bidet shall bind Bio Bidet, (Some States and provinces do not allow limitations on how long an implied warranty, so the above limitation may not apply to you) Bio Bidet shall not be liable for revenues or profits, inconvenience, expense for substitute equipment or service, or any other special, incidental or consequential damages caused by the use or misuse of, or inability to use, Bio-Bidet, regardless of the possibility and foresee-ability of such damages. In no event shall recovery of any kind against Bio Bidet be greater in amount than the purchase price of the product and causing the alleged damage. Without limiting the foregoing, you assume all risk and liability for loss, damage or injury to you and your property and to others and their property arising out of use or misuse of, or inability to use, the Bio-Bidet not caused directly by the negligence or Bio Bidet This limited warranty shall not extend to anyone other than the original purchaser of the Bio-Bidet

Thank **y**ou

Technical support / Customer Service

Bio Bidet  
204 Berg ST Algonquin, IL 60102

T : 847.458.2334  
U.S Toll Free : 877.339.5214

[support@biobidet.com](mailto:support@biobidet.com)  
[www.biobidet.com](http://www.biobidet.com)