

Vault Door Installation

WARNINGS

- Door is extremely heavy and could severely injure or kill if dropped or allowed to fall prior to installation.

Tools/Material Included

- Vault Door
- 5/16" x 3" Lag Screws (10 included)
- 1/2" Drive Socket
- Socket Wrench


Tools/Material Needed

- Plastic Shims
 - 4' or longer level
 - Square
 - Drill
 - 1/4" Drill Bit
 - Pry Bar (optional)
 - Two 2x4 boards 6" wider than door (optional)
-
- Open packaging and inspect contents
 - Check Rough Opening (RO)
 - Measure width and height of RO


- should be approximately 1" wider and $\frac{3}{4}$ " taller than the door

o Check level, plumb, and square of RO

- Measure the diagonal opening of the door, the A and B measurement should be within $\frac{1}{4}$ ".

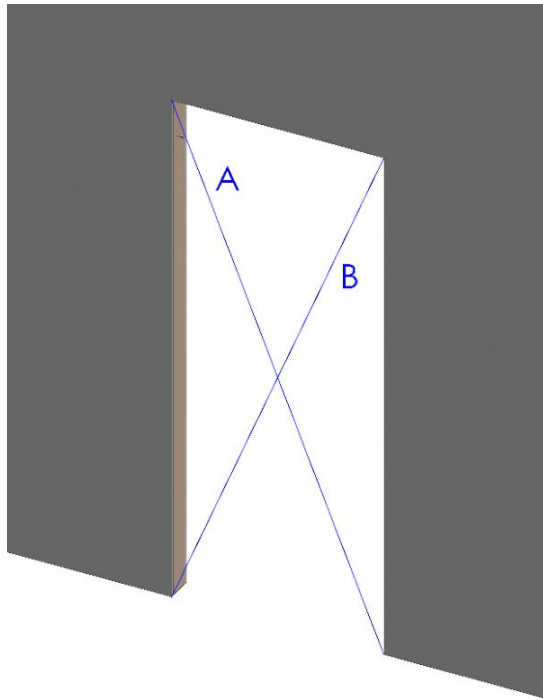

- Using a level, verify the sides of the RO are plumb.
- Using a level or square, verify the bottom and top of the RO are level

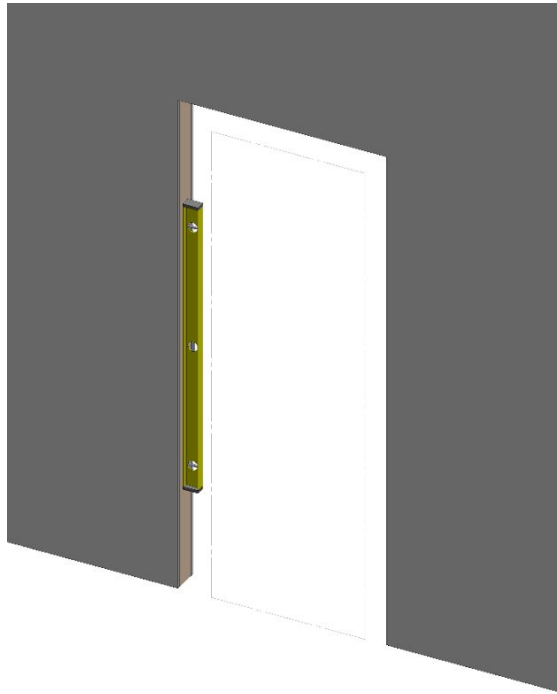

- o NOTE: If the RO is not the correct size or out of plumb, a competent contractor may be needed to correct the RO.
- Install Vault Door
 - o NOTE: Review the supplemental instructions for your particular lock style (digital or mechanical) to become familiar with the operation prior to installing the door. The digital lock will need a battery installed before continuing to the next step.
 - o Place two 2x4 boards in front of the doorway.
 - o Place door, trim side down, onto the boards in front of the doorway. Place the bottom of the door approximately 1”

from the bottom of the doorway. The door should be centered in the doorway.



- o NOTE: It is helpful to have all tools and hardware (lag screws, drill with ¼” drill bit, and socket) ready for installation. Having a few helpers on the outside and inside of doorway can also help position the heavy door safely.

- o WARNING: The Vault Door is very heavy and could severely injure individuals if dropped prior to installation. Blocks, clamps, or helping hands may be needed to hold the door in position until the door is securely fastened to the wall.

- o With assistance, lift the top of the door and place the door into RO. Slide the door up against the wall.



- o Verify the door is centered into the RO and the bottom of the door is level. Shims may be need to level the door.
- o Using the default code, open the door approximately 45 degrees.
- o Using a level, check that the interior door opening is level and plumb.



- o Locate the 10 mounting holes in the side of the frame.
- o Place shims between the door frame and RO near a mounting hole.
- o Predrill a 1/4" pilot hole in the center of a mounting hole in the frame.
- o Install the 5/16" lag screw.
- o Repeat for the remaining mounting holes, verify often that the door opening remains level and plumb.
- o Apply interior trim to cover the gap between the frame and RO (not included).

IMPORTANT!


Keep for Your Records.

Do not store this booklet and information in your vault.

Date of receipt of vault _____

Vault serial number _____

(Located on plate on the bottom of door frame)

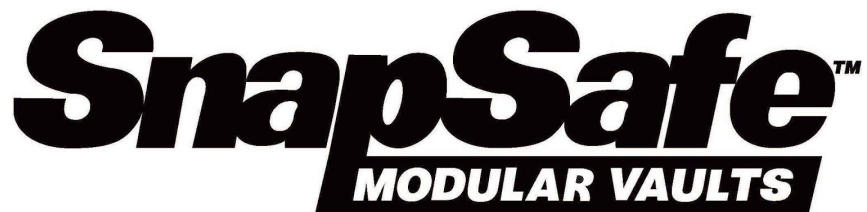

**Customer Service: 3721 Doubleton Drive Stuart, FL 34997
1-877-214-4470 | Email: info@snapsafe.com**