



installation

Click Panel Dimensions 12" x 36" approx. (300mm x 900mm)
Click Square Dimensions 12" x 12" approx. (300mm x 300mm)

Structure:

Total Thickness 9.8mm
Surface 2mm Marmoleum®
Base Material 6.8mm HDF
Backing 1mm cork
Carton Contents 7 panels for 20.3 sq. ft. (1.89m²)
. 7 squares for 6.7 sq. ft. (0.63 m²)

general installation guidelines

Marmoleum® Click Cinch Loc has a top layer of Marmoleum®, which is made from predominantly harvestable natural raw materials and is processed according to an environmentally friendly procedure. Its main ingredient is natural linseed oil, which is mixed with wood flour, rosin and limestone. Marmoleum® receives its color from ecologically responsible pigments. Pressed onto a jute fabric under high pressure, an extremely durable and environmentally friendly flooring is produced. As Marmoleum® is made from natural raw materials, slight color and structural differences are possible between the production batches, samples and the goods to be delivered.

IMPORTANT: The Marmoleum® Click Cinch Loc boxes should be stored flat, and unopened, for approx. 2-3 days (approx. 6 days in winter) in the center of the room in which they are to be installed.

- Tools and Materials Required: Hammer, straight back hand saw, keyhole saw or jigsaw, tape measure, pencil, fitting wedges, 3/8" spacers, angle or adjustable bevel, and foam underlayment or a moisture barrier (for concrete subfloors).
- The ambient room temperature should be at least 68° F (20° C) and the ambient relative humidity between 50% - 60%. To maintain the long term value of Marmoleum® Click Cinch Loc, we recommend the use of a humidifier to avoid extreme drying out during the heating season. All Marmoleum® Click Cinch Loc panels and squares should be inspected for manufacturing defects and damage prior to installation.
- Marmoleum® Click Cinch Loc can be installed on any clean, dry, structurally sound subfloor. The subfloor must be flat to within 3/32" in 6' (2.0mm in 2 meters). For concrete subfloors, internal relative humidity should not exceed 75% (tested in accordance with the latest version of ASTM F 2170) and moisture vapor emissions must not exceed 3 pounds per 1,000 square feet in 24 hours (tested in accordance with the latest version of ASTM F 1869).
- When installing over a concrete subfloor or any subfloor with underfloor heating, always cover the subfloor with a vapor barrier. The edges of the vapor barrier should extend up the walls at least 2" with a minimum overlap of 8" at the seams.

IMPORTANT: Please note that a minimum gap of 3/8" (10mm) is required for expansion on all sides between the floor construction and the wall. This distance must also be provided at all columns, heating pipes, steel door

frames, etc.

Here are some other things to keep in mind before starting the installation: For any areas that are longer or wider than 26', an expansion joint that is a minimum of 3/8" should be inserted. This can be covered with a "T" shaped molding. Expansion joints should also be used in doorways connecting passageways or polygonal-shaped rooms. As a general rule, adjacent rooms must be separated with an expansion joint. Use an overlap reducer to transition to adjacent, lower lying areas or floor coverings. An overlap end profile is ideal for clean finishes of the flooring in front of higher, adjacent sills, tiles or other raised floors.

An adequate gap must also be provided at door frames or wooden door frames cut short. To do this, place a loose panel against the door frame with the Marmoleum® side facing downward, and saw the frame off along the panel.

Transition moldings can be purchased at a local home improvement or hardware store.

· Marmoleum® Click Cinch Loc is resistant to water, but it is not waterproof. It is important to minimize any opportunity for damage by cleaning spills immediately. It is also very important to take measures during the installation that will prevent water or moisture from getting underneath the Marmoleum® Click Cinch Loc.

If a floor drain or sump pump is present, it is there for a reason. DO NOT INSTALL Marmoleum® Click Cinch Loc on that level.

All expansion spaces located in wet areas, such as areas where sinks, dishwashers, refrigerators, toilets, showers, bath tubs are located should be sealed with 100% mildew-resistant silicone. To seal the area, apply a thin bead of silicone where the bottom of the Marmoleum® Click Cinch Loc and subfloor meet. DO NOT fill the entire expansion space with silicone. Spills should not remain on the surface of Marmoleum® Click Cinch Loc longer than 30 minutes.

· For additional information, contact Forbo's Product Support and Education Services.

installation

Marmoleum® Click Cinch Loc is installed without any need for glue by placing the tongue into the groove as well as the groove into the tongue; however it is easier to work so that you are placing the tongue into the groove. The GROOVE is the prominent visible locking piece on two sides of the material, shown on the right and bottom in Figure 1. The TONGUE is semi-hidden on the other two sides of the material, shown on the left and top in Figure 1.

1. Inspect each piece for damage prior to installation.



2. Start by measuring the room and determining the starting point in the room. It is recommended to install the material perpendicular to the incoming light from the main window. This will help minimize the appearance of the seams throughout the room.

3. Lay out several pieces with the groove side facing right.

4. To ensure that all pieces are clicked together at exact 90° angles, install a temporary piece along the front wall (parallel with the material). Click the tongue of the first piece into the groove of the temporary piece, allowing the temporary piece to sit halfway on the first piece. See Figure 2. The temporary piece in the figure is the top piece.




NOTE: The pieces must be perfectly aligned with one another. Any variation in alignment from piece to piece can create gaps between one row and the next.

5. Place the tongue of the second piece into the groove of the temporary board at a 45° angle. See Figure 3.

6. Slide it gently to the left. Lower it into the groove of the first piece and press it into place. You should hear a clicking sound when it locks into place.

7. Move the temporary board so it now sits halfway on the second piece. See Figure 4.

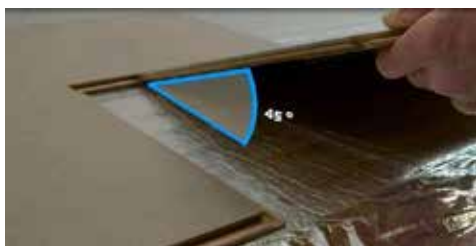

8. Continue these steps until the end of the row.

9. Before laying the final piece, remove the temporary board and place spacers that are 3/8" wide along the length of the front wall as well as the left side wall.

10. Slide the entire first row so it is touching the spacers. Measure

the distance from the edge of the last piece to the wall. Subtract 3/8" and cut the final piece to fit. Be sure to cut the piece so that the cut edge will be touching the wall when it's installed.

NOTE: If using a hand saw, the Marmoleum® side must be facing upwards. If using a power saw, the direction of the blade must cut into the Marmoleum® side of the board (Marmoleum® side facing downwards).

11. Move the row away from the wall and with the use of a temporary board, install the final piece to the row.

12. Carefully slide the row back to the wall and place a 3/8" spacer at the right side wall.

13. When installing Marmoleum® Click Cinch Loc panels, the joints of these pieces must be staggered a minimum of 12". It may be necessary to cut the first piece of the row to create this stagger. This same stagger can be created by mixing both panels and squares throughout the installation. Marmoleum® Click Cinch Loc squares can be installed with all 4 corners touching, or in a checkerboard pattern.

14. Start installing the second row to the first row as outlined above in Steps 5 – 7. The first row is used in place of the temporary piece.

15. The remainder of the room is installed following these steps. If there are any other fixed objects in the room, such as cabinets, pipes, etc., it is important to leave a minimum of 3/8" spacer where the flooring meets these objects.

16. For the final row, be sure to leave a minimum of 3/8" spacer at all walls. The bottom groove that will be against the wall can be sawed off if necessary.

17. For areas where there are door moldings or other obstructions that the material must slide under, remove the groove from the previous row. Then, instead of clicking the final row into place, it will be slid into place. These areas must be secured using wood glue where the tongue and groove would meet.

18. After the final row is in place, molding, such as a quarter round, is installed to cover the expansion perimeter around the room.

19. If for any reason you need to disassemble the floor, gently remove the final row and take the pieces apart starting from the last board on the right.

20. The floor can be walked on immediately after installation.





caring for your floor

Marmoleum® Click Cinch Loc has a strong, durable protective top layer – Topshield™2. This innovation from Forbo ensures a highly effective shield against dirt and scuff marks. Marmoleum® with Topshield™2 is ready for use immediately following installation and does not require the application of additional protective coats of finish. With Topshield™2, your Marmoleum® floor will maintain its beautiful appearance with simple cleaning. Dry dusting is a fast and easy way to keep your floor free from loose dirt. Remove spots with a mop or cloth dampened with diluted Forbo Neutral pH Cleaner. Avoid excessive use of water on the floor, and make sure chair and furniture legs are covered with felt protectors. An entrance mat will protect the floor from dirt.



Initial Care Following Installation

1. Remove all surface soil, debris, sand and grit by sweeping, vacuuming or dust mopping.
2. Mix 1/2 – 1 ounce of Forbo Neutral pH Cleaner per 1 gallon of unheated tap water.
3. Apply the solution to the floor. Do NOT flood the floor. The solution can be applied with a mop and bucket.
4. Pick up soil and excess solution with a clean mop. Rinse mops frequently and change the solution as needed.
5. Rinse the entire floor surface with a clean mop using clean, cool water. Pick up rinse water with a clean, dry mop or towel.
6. Allow the floor to dry thoroughly before allowing traffic.

Routine Floor Care Procedures

1. Remove all surface soil, debris, sand and grit by sweeping, vacuuming or dust mopping.
2. Mix 1/2 – 1 ounce of Forbo Neutral pH Cleaner per 1 gallon of unheated tap water.
3. Apply the solution to the floor. Do NOT flood the floor. The solution can be applied with a mop and bucket.
4. For ingrained dirt, a non-abrasive scrubbing sponge may be required.
5. Pick up soil and excess solution with a clean mop. Rinse mops frequently and change the solution as needed.
6. Rinse the entire floor surface with a clean mop using clean, cool water. Pick up rinse water with a clean, dry mop or towel.
7. Allow the floor to dry thoroughly before allowing traffic.

Spots & Spills

The vast majority of spills can be cleaned off your Marmoleum® satisfactorily. If there are spills or pet “accidents”:

1. Act quickly.
2. Scrape or blot as much as possible.
3. Mop the floor with a solution of Forbo Neutral pH Cleaner.
4. Damp mop with clean water.
5. If necessary, repeat steps 3 and 4. If the stain persists, as it may with glue, varnish, paint, ink, tar, cosmetics, shoe polish, some wines, coffee and some other substances, you may need to allow the solution to sit or “dwell” on the floor for several minutes. Rub the stained area with a green nylon kitchen pad then rinse the area with clean water. Repeat if necessary.

If the stain persists, contact Forbo Product Support & Education Services before trying any other procedures.

For further information on restoration, please contact Forbo’s Product Support & Education Services at +1-800-842-7839.



933858 barbados, 933872 volcanic ash