



## Freestanding Floor Mount Bathtub Filler

Model Number:

FTF01-TB

FTF01-TC


Features:

- Brass and Zinc Alloy Construction
- Single Hole Installation
- Drip Free 40 mm Ceramic Cartridge
- Hand shower flow rate 1.8 gpm at 80 psi
- Tub spout flow rate 3.7 gpm at 20 psi
- Rough-in kit included

- Complies with:

IAPMO / UPC / cUPC

ADA

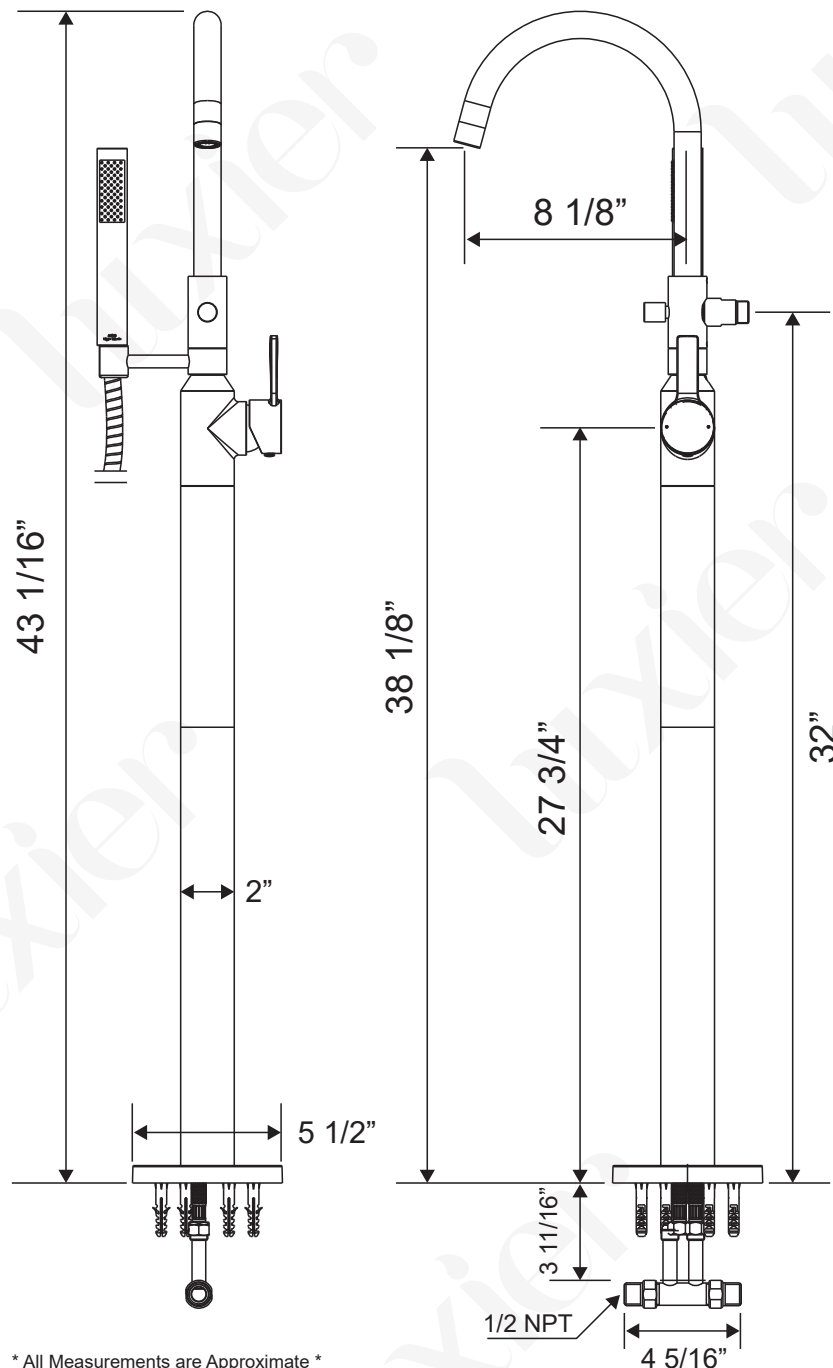

\* All Measurements are Approximate \*



Thank you for purchasing Luxier products. Please read the information below and keep this installation guide for future reference. If you require assistance, please contact our customer service department at 1-877-711-8828, Monday - Friday 9AM - 5PM Pacific Time or by email at [support@luxierusa.com](mailto:support@luxierusa.com).

### Limited Lifetime Warranty (For USA Only)

The manufacturer warrants this product to be leak and drip free during daily normal household use for as long as it is owned by the original purchaser of this product. Please keep a copy of the original invoice as proof of purchase.

Should a malfunction occur within the warranty period, Luxier USA will, as its option, (1) repair or replace the defective part(s) or product at no charge; (2) issue a refund of the purchase price paid for the product (Valid within 30 days from the date of purchase); or (3) issue a credit to be applied against the purchase of a new Luxier product. Shipping/delivery charges may apply and are in Luxier USA's sole discretion.

This limited warranty shall not apply to goods which have been subject to accident, negligence, improper installation, product abuse, product misuse, or use of cleaners containing abrasives, alcohol or other organic solvents, whether performed by a contractor, service company, or yourself, are excluded from this warranty.

Our responsibility under this warranty is limited to only to replacement parts and no other costs. Luxier USA will not be responsible for labor charges and/or damage incurred by installation, repair or replacement, nor for any indirect incidental or consequential damages, losses, injury or costs of any nature relating to this faucet. Except as provided by law, this warranty is in lieu of and excludes all other warranties, conditions, and guarantees, whether expressed or implied, statutory or otherwise, including without restriction those merchantability of fitness for use.

This limited warranty is non-transferable. This limited warranty only applies to products purchased and installed in the United States. This limited warranty covers the original consumer purchase only and does not include business, commercial or industrial use of this product. To obtain service under the Limited Warranty, please contact Luxier USA at [support@luxierusa.com](mailto:support@luxierusa.com). The Luxier USA Customer Care Department will determine whether to repair or replace your product, issue a refund, or issue a credit.

## Important Points

- This installation guide is subject to change without notice, please contact us to request the most updated version of this installation guide.
- This is a general installation guideline, actual installation may vary. Consult a professional if necessary.
- Read and understand this instructions completely before installation.
- Please follow all local building and plumbing codes.
- Product drawings in this installation guide is for illustration purpose only. Actual product may vary depends on model.
- Always take extra precautions and wear appropriate safety equipment when installing this product.
- Wrap all threaded connections, except the aerator in the spout, with Teflon (TPFE) tape. Always wrap in a counterclockwise direction.
- When installing your new faucet, first hand tighten the water supply hoses then use a wrench to give the compression nuts an additional (1/4) turn. Do not over tighten the compression nuts as it will reduce the integrity of the sealed connection.

## You may also need the following tools


1. Safety Glasses	5. Adjustable / Pipe Wrench
2. Teflon (PTFE) Tape	6. Screwdriver
3. Plumber's Putty and Caulking	7. Electric Drill
4. Pipe Cutter	

## Maintenance Guide


Please follow the cleaning material manufacturer's instructions. Damage caused by improper treatment will not be covered by product warranty. In addition, pay attention to the following points:

- Regular cleaning can prevent mineral build up on faucet spout.
- Carefully read the cleaner product label to ensure the cleaner is safe for use on the material.
- Test the cleaner on a small area before using on the entire surface.
- Use a mild detergent such as liquid dishwashing soap and warm water for cleaning.
- Do not use abrasive / harsh chemical when cleaning the fixture as they will damage and dull the finish.
- When using spray cleaners, spray first onto a soft cloth or sponge. Never spray directly onto the faucet as droplets can enter openings and gaps and cause damage.
- After cleaning, rinse thoroughly with clean water to remove any cleaner residue.


# Installation

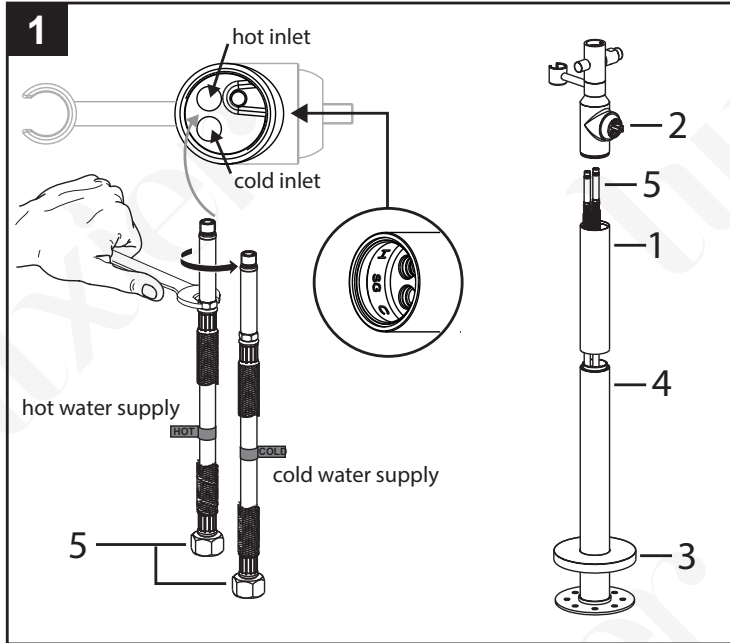

1. Connect hot and cold SUPPLY HOSES (5) into the manifold using an adjustable wrench. Make sure the connections are tight, use PTFE tape if needed. Insert the RISER TUBE (1) over hot and cold SUPPLY HOSES (5). Connect the RISER TUBE (1) into base of the VALVE BODY (2) and tighten fully. Slide the FLOOR MOUNTING FLANGE (3) onto the RISER TUBE with the flange (4). Thread RISER TUBE (4) into the bottom of RISER TUBE (1) and fully tighten.

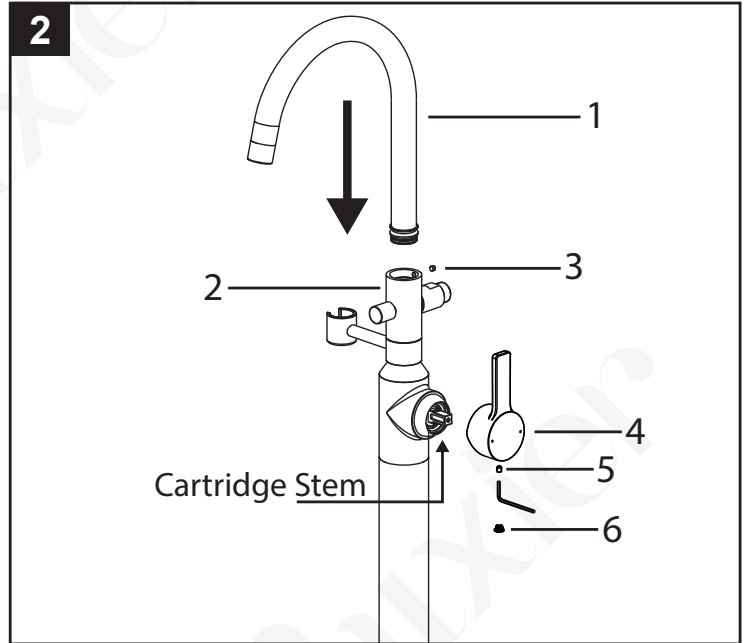


Install SPOUT (1) into faucet body (2) tighten Setscrew (3) with the supplied small hex wrench supplied. Insert Handle (4) on the cartridge stem, tighten the Setscrew (5) and install Cap (6) to the Handle (4) .

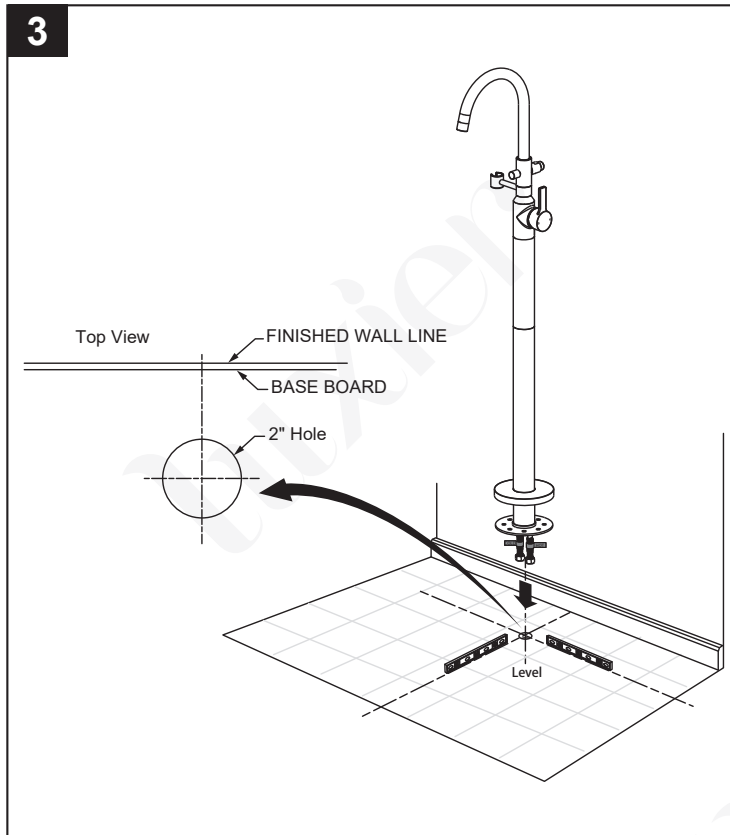

3. Make sure the floor is level in both directions. Determine the distance from the finished wall to the center of the floor water supply hose. Mark the centerline. Drill a 2" (51mm) diameter hole for the Hot and Cold water supply hoses. Insert the water supply hoses through the hole and place Tub Filler Assembly on the floor and check for alignment.

## Installation


4

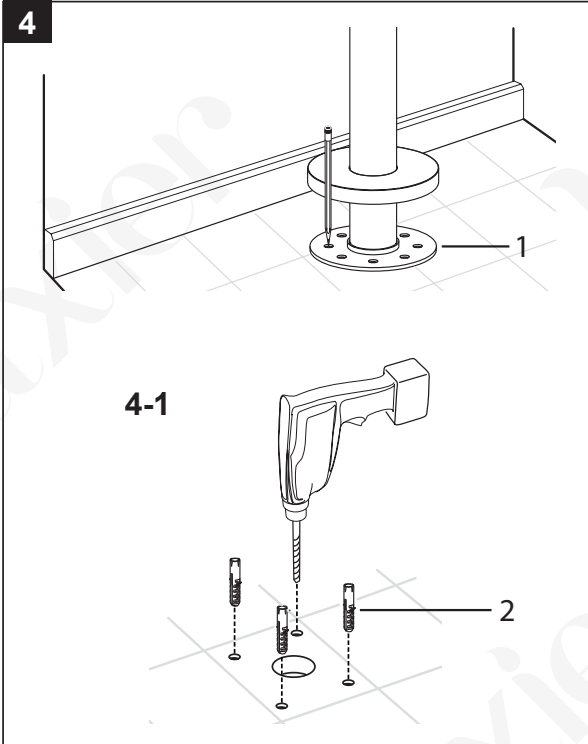

4. With the Tub Filler Assembly aligned in the desired position, mark each of the 4 mounting holes from the Mounting Flange (1) on the floor.


4-1. Use a drill with 1/4" drill bit, drill the holes 1 3/4" deep and insert the included Anchors (2). Make sure the Anchors are flush with the finished floor.

5

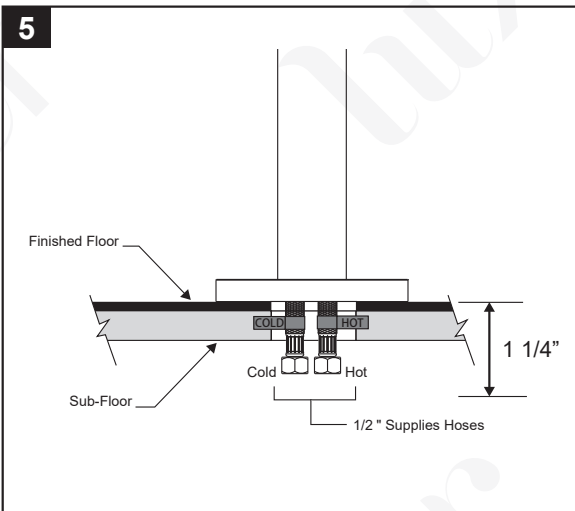


5. Make sure both Hot and Cold water supply hoses pass through the 2" mounting hole with at least 1 1/4" of the hose in the floor space.

6

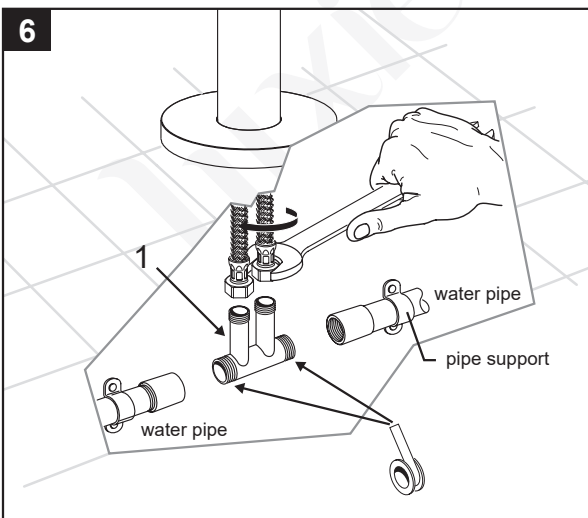


6. Apply PTFE tape to the threads of the T-Connector (1) and the 2 Thread Adapters. Connect the 2 adapters to the T-Connector (1) and tighten fully. Secure pipe below floor to floor joist with pipe supports. Connect the 2 water supply hoses to the T-Connector (1) and use an adjustable wrench to tighten connections. Do not over tighten the connections.

## Installation

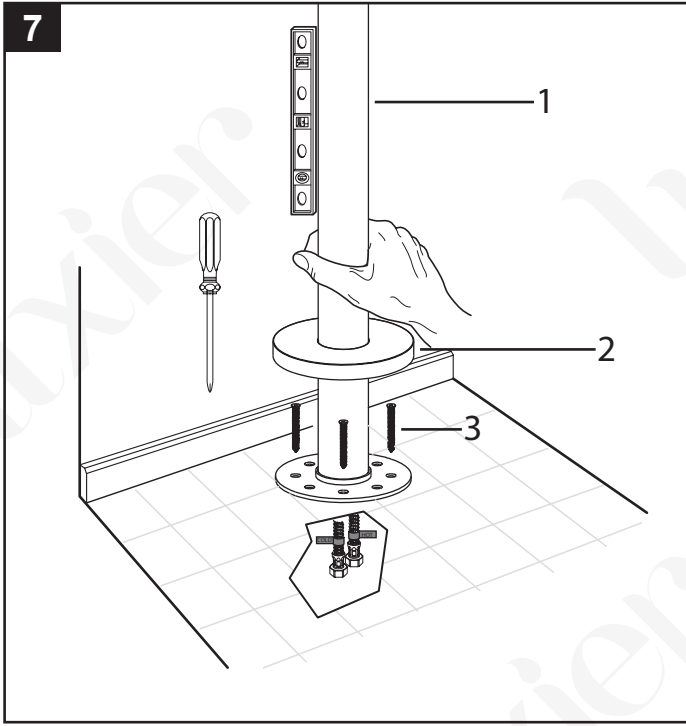

7. Hold the Tub Filler Assembly (1) in place and install the four Mounting Screws (3). Check alignment and level before fully tightening the Mounting Screws (3). After tightening the screws slide the Escutcheon (2) down to cover the flange.

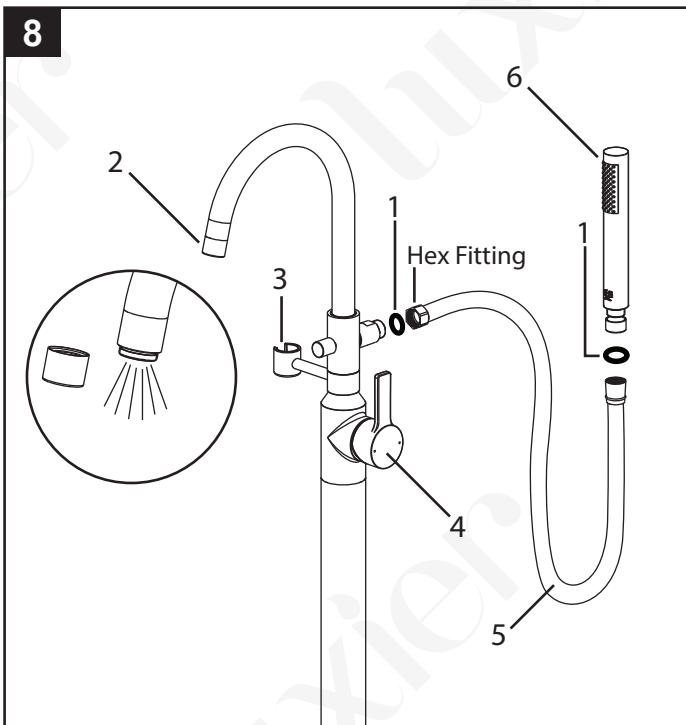


8. Connect the Hand Shower Hose (5) to the Tub Filler. Use an adjustable wrench to connect the Hand Shower Hose (5) with hex nut end to the Tub Filler. (**NOTE:** Make sure the rubber washers (1) are installed on both end of the hose)

Hand tighten the Hand Shower Wand (6) to the Hand Shower Hose (5). The Hand Shower Wand should be placed in the Holder (3) when not in sue.

Remove the aerator assembly (2) from the spout and turn on water for couple of minutes and check all connections for leaks. Move the Handle (4) throughout the temperature range to flush out any debris in both hot and cold water lines thoroughly.

## Operations

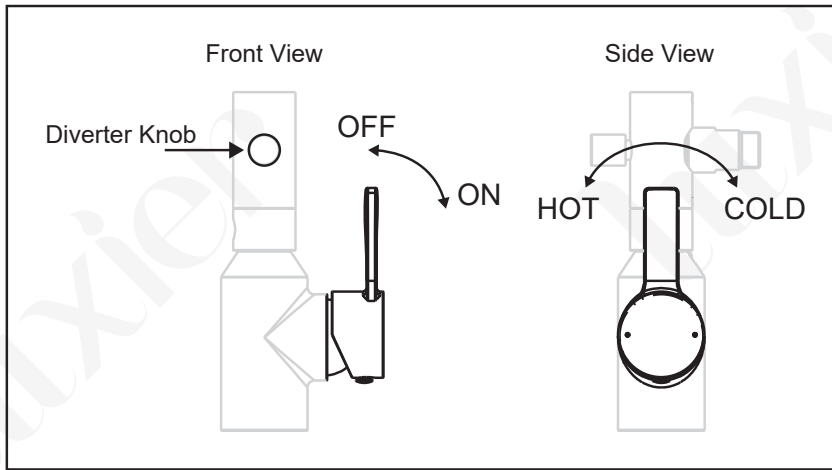

To operate the tub filler simply move the handle to the ON position to turn on the water. Adjust the temperature by moving the handle from side to side to set the desired water temperature.

To operate the hand shower wand, remove the hand shower from its holder and direct the jets into the tub. Pull the diverter knob on the faucet body. Push the diverter knob to direct the water back to the spout.

## Parts

01. Aerator Assembly
02. Hand Shower Wand
03. Diverter Knob
04. Hand Shower Hose
05. Hot and Cold Water Supply Hose
06. T-Connector
07. Mounting Screws and Anchors
08. Escutcheon
09. Cartridge
10. Cartridge Locking Nut
11. Dome Cap
12. Cap, Setscrew and Hex Wrench
13. Handle
14. Diveter Cartridge
15. Hand Shower Connector Assembly
16. Setscrew

