



How to setup a IP camera from a Local Network connection onto the QT NVRs

What makes Internet Protocol (IP) or Network cameras different is that they each have a little computer processor inside them that allows them to talk to the NVR over a network – including over the Internet.

There are three ways you can connect your cameras to your NVR:

1. Directly through the PoE (Power over Ethernet) Ports
2. Through your local network
3. Remotely over the Internet

In this how to we will be speaking about the Second point.

Through your Local Network –

Instead of trying to connect the IP camera to the NVR directly due to a distance issue, you can connect the IP camera to a router that is on the same Local Network as your NVR.

PLEASE NOTE: In this case you will be required to connect the camera to a power supply or a “POE Injector” near the camera’s connection.

Step 1: Make sure that your NVR is:

- A. Connected to a VGA or HDMI connection to the monitor.
- B. The mouse and power connections are connected to the NVR.
- C. Now turn on the NVR.

Step 2: Next, connect your camera to the RJ-45 connector to the CAT-5 cable connection.






How to setup a IP camera from a Local Network connection onto the QT NVRs

Step 3: At the end of the cable you will need to connect the POE Injector with a Ethernet cable connected to the router.



Step 4: Please repeat steps two and three for additional cameras

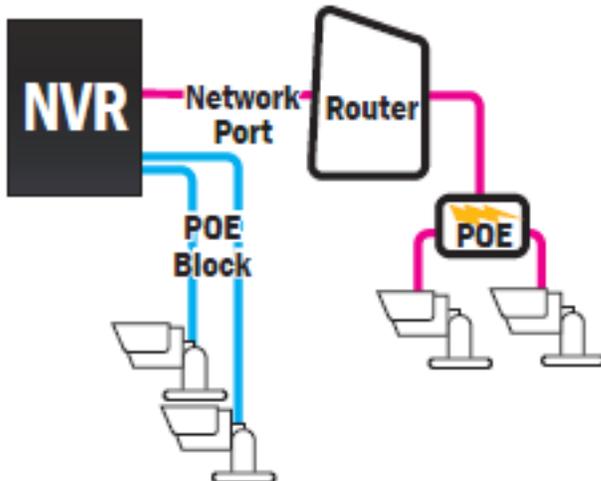

Step 5: Now plug in the POE Injector into the outlet.





How to setup a IP camera from a Local Network connection onto the QT NVRs

Step 6: On your NVR, go to the Main Menu, and click on IP Camera.



Step 7: Since your camera is in the same network as the NVR, the camera will show in the Device manager screen.

The image shows the Device Management screen with a table of detected devices. The table has columns for CH, Device NetAddress, Manufacturer, Product Model, and Status. The first row shows a device with CH '1', NetAddress '10.151.151.100', Manufacturer 'TVT', Product Model '9322M_ONVI', and Status 'Connected'. The second row shows a device with CH 'None', NetAddress '192.168.0.149', Manufacturer 'ONVIF', Product Model 'ONVIF', and Status 'Disable'. The table is currently showing 1/1 devices.

CH	Device NetAddress	Manufacturer	Product Model	Status
1	10.151.151.100	TVT	9322M_ONVI	Connected
None	192.168.0.149	ONVIF	ONVIF	Disable




How to setup a IP camera from a Local Network connection onto the QT NVRs

Step 8: To select the camera Double click the mouse.

CH	Device NetAddress	Manufacturer	Product Model	Status
1	10.151.151.100	TVT	9322M_ONVI	Connected
None	192.168.0.149	ONVIF	ONVIF	Disable

Step 9: in the ADD DEVICE menu you will need to

- 1) Now select the ENABLE box. At which time a check mark will appear.
- 2) Then click okay.

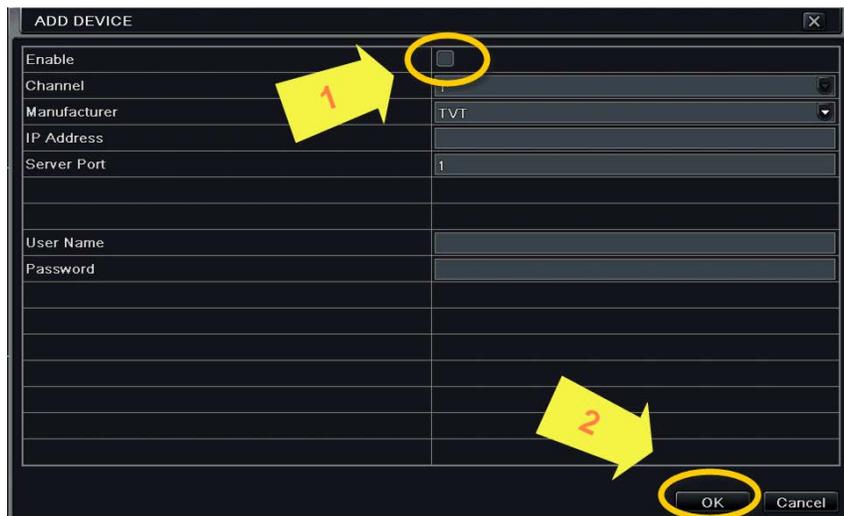

Step 10: You will need to repeat steps 7-9 to enable other cameras that are on the local network.

Step 11: Once completed, in the DEVICE MANAGER, click on the Apply and Okay buttons.



Now your cameras that are within your network will be able to be seen and recorded on your NVR.