

iSpring Reverse Osmosis Water Filtration Systems

INSTALLATION INSTRUCTIONS & OWNER'S MANUAL Ver. 02/2020



Filter.com

iSpring Water Systems, LLC (since 2005)

Copyright ©2005-2020 ISPRING WATER SYSTEMS, LLC. All rights reserved.



We stand behind our products

iSpring has been dedicated to providing high quality drinking water to families across the United States since 2005.

From various residential water filtration systems that purify your water in everyday life, to drinking water faucets that deliver pure, healthy, and tasty water to you and your family, iSpring strives for high standard products and aims to make excellent drinking water accessible for all households.

At iSpring, we strive for high standard products and aim to make excellent drinking water accessible for all households.

With affordable pricing, solid quality, prompt delivery, and top-notch customer service, we hope to assist in bringing you great water for years to come.

ATTENTION!

Please pay attention to the following installation and safety recommendations:

- **Installation and use MUST comply with all state and local plumbing codes.**
- **Read the Installation Manual before installing this system.**
- **Install the system at a location with adequate drainage.**
- **This water system unit is for INDOOR use ONLY. Do not install on hot-water supply lines, and protect against sudden temperature changes.**
- **Make sure ALL filter housings are tightened securely by using the housing wrench provided.**
- **Wait and inspect the system AFTER the water is pressurized.**
- **Inspect ALL connections after the installation to make sure NO LEAKS occur.**
- **A pressure regulator is required if incoming water pressure is over 80 psi.**
- **Strongly recommended: SHUT OFF the water supply when homeowner/user will not be using the water system for longer than a week.**
- **Replace the filter cartridges regularly based on your water quality and usage.**

WARNING

DO NOT install the system where the water is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.

Table of Contents

System Installation

Prior to Installation	3
Component Identification	4
Installation Tips	5
Installation Steps.....	7
Step 1: Installing the Feed Water Adapter	7
Step 2: Installing the RO Faucet.....	8
Step 3: Installing the Drain Saddle	8
Step 4: Installing the Vertical Filters: Stages 1, 2, and 3	9
Step 5: Installing the Tank Shut-Off Valve.....	9
Step 6: Installing the Reverse Osmosis Membrane.....	9
Step 7: Tubing Hook Up.....	10
Step 8: System Start Up.....	12
Leak Stop Valve Installation	13

Owner's Manual

Section 1: iSpring RO System Maintenance	14
Section 2: Troubleshooting Guide for Newly Installed Systems	18
Section 3: Glossary and Terms to Know	20

Warranty

Warranty	22
Warranty Registration.....	23

System Installation

Prior to Installation

Inspect the package

Open the box and remove all of the components. Inspect them to ensure nothing was damaged during shipping. If any part is cracked or broken, please immediately contact iSpring Customer Support for a replacement. Identify and get familiar with the components.












Recommended tools list

- Variable speed drill with two bits: ¼” (for drilling a hole on PVC drain pipe), ½” hollow diamond (for drilling a hole on countertop for drinking faucet)
- 5/8”, 9/16” open-end wrench, or adjustable wrench, pliers
- Phillips head screwdriver
- Scissors or utility knife

Operating conditions

- Minimum water pressure: 45 PSI, otherwise a booster pump is necessary to raise the incoming water pressure and improve the RO efficiency.
- Maximum water pressure: 70 PSI, otherwise a pressure regulator (part no. APR70) is required to lower the PSI to the maximum level.
- Operating water temperature range: 40 – 100 °F (4 - 37 °C) (This RO system is NOT designed for HOT water). The RO process will be slightly faster the warmer the source water is and vice versa.
- Maximum TDS: 750 ppm
- Install this RO system in a location where it is safe from hot/cold weather and direct sunlight. Avoid hitting, dropping, or dragging the system as this can cause cracks and leaks.

Component Identification

		
<p>RO Machine Head * (membrane not yet installed)</p>	<p>RO Membrane</p>	<p>3 Pre-Filter Housings and Cartridges</p>
		
<p>Storage Tank</p>	<p>RO Faucet w/ Installation Kit</p>	<p>Feed Water Adapter</p>
		
<p>4-Color Tubing Set</p>	<p>Drain Saddle 1/4"</p>	<p>Tank Valve</p>
		
<p>Housing Wrenches</p>	<p>Leak Stop Valve</p>	<p>Spare O-Rings and Fittings (Real package quantity may vary)</p>

Installation Tips

How to use the Quick-Connect fittings



Figure 1

To connect:

1. See Figure 1. Check and cut the tubing end squarely and cleanly with utility knife or scissors.
2. Make a $\frac{5}{8}$ " mark at the end of the tube so you will be able to confirm when the tube is inserted fully into the fitting.
3. Remove the blue lock clip from the fitting with your nail. If the lock sleeve pops out of the fitting when doing this, simply pop it back in.
4. Insert the tube into the fitting until you reach the $\frac{5}{8}$ " mark on the tube. You will feel resistance when the tube reaches the small rubber O ring inside the fitting. You will need to wiggle the tube and apply additional pressure to get it passed this O ring and create the seal. **If the tube is not $\frac{5}{8}$ " into the fitting and past the O ring, no seal will be created and leaking will occur.**
5. Once the tube is fully inserted into the fitting, pop the blue lock clip back on the fitting. This will lock the tube in place and prevent it from moving.



To Connect: Push tubing into Lock Sleeve and reach bottom about 1/2 inch deep

To Disconnect: Remove Lock Clip, while PRESSING Lock Sleeve Down to eliminate Gap, pull out tubing

Figure 2



With two fingers
PUSHING IN and PRESSING DOWN
Lock Sleeve, pull out tubing

Figure 3

To disconnect:

1. See Figures 2 and 3. Remove the blue lock clip from the fitting.
2. With the blue lock clip removed, use your thumb and index finger to hold down the lock sleeve. This will release the metal teeth holding the tube in place. While holding the lock sleeve down with that hand, use your other hand to remove the tube from the fitting.

How to drill a ½” hole in your sink or counter-top

1. It’s highly recommended to watch the **YouTube video “How To Drill Faucet Holes”** to get a better understanding of the process. Depending on what kind of countertop you have, you may want to hire an experienced professional to ensure the hole is drilled correctly.
2. Choose a half inch Diamond Core Bit for granite, and a titanium drill bit for steel. Do NOT use a hammer drill on nature stone, glass, and ceramic.
3. An indent should be made with a punch on steel before drilling to help guide the bit.
4. Use caution when drilling on a Porcelain sink, as it could be easily chipped. Set drill speed on slow. Press the bit downward firmly until breaking through the slippery surface. Some people found it is easier to secure the bit by drilling through a piece of wood that is firmly pressed on the surface.
5. Use coolant to disperse heat. Choose water for granite, and oil for steel. Use the Water Suction Cup to hold coolant inside and prevent the drill bit from slipping.
6. Starting at slowest speed, hold the drill firmly and vertically and prevent the drill bit from slipping on the counter.
7. Once breaking through the smooth surface, swirl the drill a little to apply pressure in a circle evenly.
8. Be patient and deliberate. It can take 20 – 40 minutes to drill through one inch.

Sample Installation

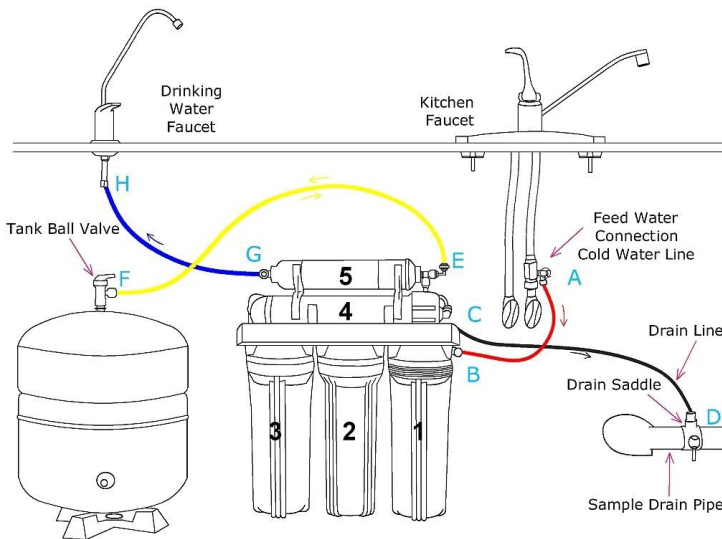


Figure 4

- A. Source water from Feed Water Adapter → B. Source water to 1st stage water inlet
 C. Waste water from Flow Restrictor → D. Waste water to Drain Saddle/drain pipe
 E. RO water from stage 5 “T” fitting → F. RO water to Storage Tank
 F. When the drinking faucet is opened, RO water from the tank passes through E and G → H. RO water to the drinking faucet

Installation Steps



Before you begin the installation, it is highly recommended that you watch the video “iSpring Reverse Osmosis Installation” on **YouTube**.

Note: If you plan on mounting/hanging the system, it is highly recommended to include supports under each of the bottom three housings. Supports under the housings will take the water weight off the housing threads, and ensure the thread strength does not decay over the years.

Note: Steps 1 – 7 are independent, and can be performed in any order.

Step 1: Installing the Feed Water Adapter

(The bushing can convert 3/8” comp. to 1/2” NPT.)

- 1.1 Turn off the Cold Water Line via the Cold Water Supply Valve (CWSV) under the sink. Open the kitchen faucet to release any pressure and make sure the water has stopped before proceeding to the next step. Get a towel or bucket to catch any water drips. Disconnect the Kitchen Faucet Connector (KFC) pipe from the CWSV.
- 1.2 Check to make sure the O-ring is seated inside the Feed Water Adapter female end, and twist it onto the CWSV. Tighten it using a wrench or pliers.
- 1.3 Twist the KFC onto the male end of the Feed Water Adapter. Turn the handle of the Feed Water Adapter to the perpendicular OFF position. Turn on the CWSV slowly, and ensure you are getting a proper seal.
- 1.4 Connect the 1/4” **RED** tubing to the Feed Water Adapter.


Feed Water Adapter with Bushing to convert 3/8” COMP to 1/2” NPT



For 3/8” COMP




For 1/2” NPT

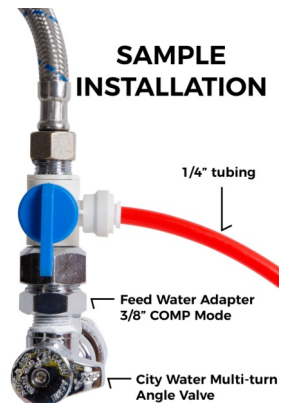

Step 2: Installing the RO Faucet

- 21 If your kitchen sink does not have an existing ½” faucet hole, you will have to drill one. (Refer to How to drill a Hole on Sink or Counter-top). Wipe clean and dry the area.
- 22 Slip the front plate on the faucet stem, followed by the rubber washer. Insert the faucet stem into the hole on the countertop. Under the sink, slip on the back rubber washer, and tighten the nut with the plastic wing.
- 23 Slide the quick connecting up the push-in adapter on the base so that it seats securely into the faucet stem, then lock it in place by sliding the blue clip under the collet.
- 2.5 Insert the **BLUE** tubing about 1/2 inch into the push-in fitting, and again, secure it with the blue clip.

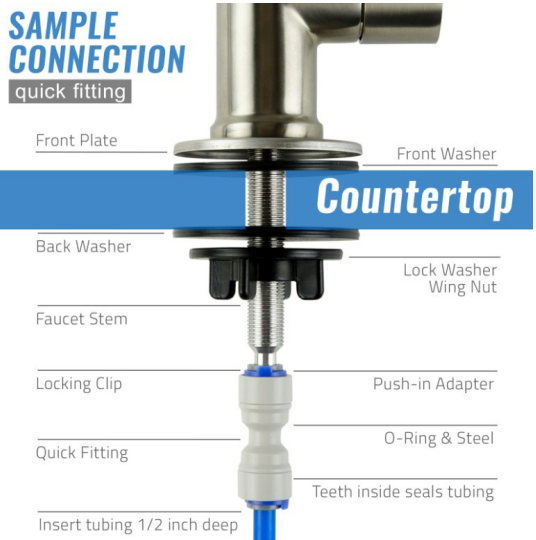

Installing the Faucet Bracket (included)

If your kitchen sink does not have an existing ½” faucet hole, you can either drill a hole, or use the enclosed faucet bracket.

To use the faucet bracket, mount the bracket to the sidewall of the cabinet, insert the faucet stem into the hole on the bracket, slip on the back rubber washer, and tighten the nut with the plastic wing.

Step 3: Installing the Drain Saddle

- 3.1 Choose a spot on the drain pipe that is convenient for installing the drain saddle and tubing. A horizontal pipe is recommended to minimize the dripping sound.
- 3.2 Drill a 1 /4” hole in the drain pipe, and paste the black sticky pad around the hole.
- 3.3 Cut the **BLACK** tubing end to make a 45 degree angle. Insert the tubing into the 1/4” hole in the drain pipe, install the back plate, and tighten the two screws with hex nuts while the tubing remains in the hole.
- 3.4 Insert Lock Clip. Pull the tubing lightly to make sure it is secure.



Step 4: Installing the Vertical Filters: Stages 1, 2, and 3

- 4.1 Make sure the O-ring is seated inside the groove on top of the filter housing. A light amount of food-grade silicon jelly may be used to help the O-ring seal better, but is not required.
- 4.2 The filter cartridges are preserved in shrink wrap. Note the direction sign on the sticker before removing the wrap.
- 4.3 When placing the filter cartridge into its housing, make sure it is centered and the knob protruding from the bottom of the housing fits in the central hole of the filter.
- 4.4 Screw the housing, with filters attached, onto the housing caps (caps are pre-assembled on the machine head). The cap also has a center knob which should be inserted into the center hole of the filter cartridge. Twist the housing on in a clockwise direction by hand, and then use the housing wrench to tighten it another 1/4 – 1/2 of a turn. **Do not over tighten. This can cause leaks and make it difficult to unscrew the housing when replacing filters.**
- 4.5 Follow steps 1.1 – 1.4 to install the GAC and CTO filters. *Note* the second stage GAC is the only filter that must go in a certain direction. Make sure the end with the rubber washer faces up, thereby attaching it to the housing cap.



Step 5: Installing the Tank Shut-Off Valve (TSV)

- 5.1 Wrap 10 - 15 wraps of Teflon tape clockwise (when looking from above) onto the metal thread at the top of the tank.
- 5.2 Screw (clockwise) the Tank Shut-off Valve on and tighten it by hand. Do not over tighten.
- 5.3 Connect the **YELLOW** tubing into the Quick-Fitting on the TSV.

Step 6: Installing the Reverse Osmosis Membrane


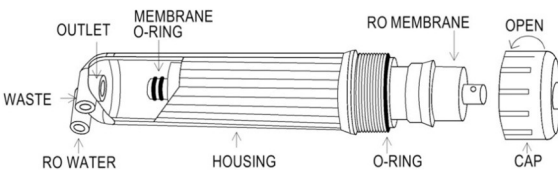


Figure 8

- 6.1 First, disconnect the white tube from the quick-fitting connection on the membrane cap. This will allow you to unscrew the membrane housing cap.
- 6.2 All the systems are wet tested without filters prior to shipment, so you may notice some water drops still inside the housing.
- 6.3 Unscrew (counter clockwise) and remove the membrane cap.
- 6.4 Note: Following the flow direction sign on the membrane, cut open the “small end” of the bag, hold the membrane with the bag to avoid touching or contaminating it, and firmly insert it into the housing. **This way the end with the two small black O-rings towards the bottom.** When it is inserted fully and properly, the “bigger” end of the membrane will be

Figure 9

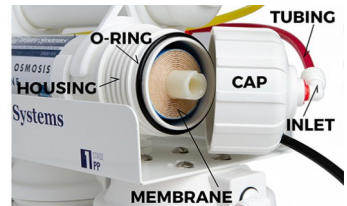


even with the housing opening. See Figure 8-9. After the membrane has been fully inserted you may then disregard the bag.

- 6.5 Before twisting the housing cap back on, make sure the **O-ring is seated at the end of the membrane housing** as shown in figures 8 and 9. **This is very important to avoid leaking and damage to the O-ring.**
- 6.6 Place the membrane housing cap back on and hand tighten it, then use the housing wrench to tighten it another ¼-½” of a turn. Do not over tighten.
- 6.7 DO NOT reconnect the tubing to the fitting on the cap at this point (will be done in system start up).

Step 7: Tubing Hook Up (model specific sub-steps are marked with *)

- 7.1 See figure Sample Installation and figures of system top view, and note connection points A- B, C-D, E-F, and G-H.

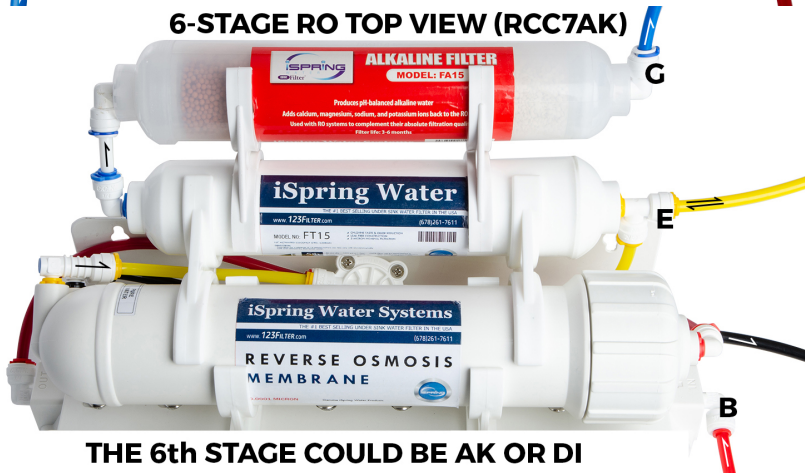

THE 6th STAGE COULD BE AK OR DI

- 72 Facing the front of the system, the 1st stage is the see through housing located on the right hand side. Connect the **RED** tubing Feed Water Adapter (point A) to the stage 1 elbow fitting (point B).
- 73 Connect the Flow Restrictor (point C, 3-inch long cylinder with a FLOW labeled on it) to the Drain Saddle (point D) with the **BLACK** tubing.
- 74 On the right side of the Post Carbon Filter (FT15, 5th stage), connect the T-fitting (point E) and the Tank Valve (point F) with the **YELLOW** tubing.
- 75 At the left end of the stage 5 FT15 filter, insert the **BLUE** tubing (links to RO faucet) into the elbow fitting.
- * Models with AK/DI: RO water flows out of point G at FT15 and flows into the input (left) side of the next stage. So the **BLUE** tubing should be connected to the output side of the final stage.
- 7.6 Connect the other end of the **BLUE** tubing to the RO faucet.
- 7.7 You may neatly organize the tubings, but make sure to leave enough length so the filter system can be moved freely in and out of the cabinet when replacing filters.
- 7.8 You can mount the system using two 10 x 1-1/4 Phillips Flat Wood Screws. This will make replacing filter cartridges easier.




Note: If you plan on mounting/hanging the system, it is highly recommended to include supports under each of the bottom three housings. Supports under the housings will take the water weight off the housing threads, and ensure the thread strength does not decay over the years.

Step 8: System Start Up (model specific sub-steps are marked with a *)

- 8.1 Make sure no tubings are kinked. **Turn the Tank Shut-off Valve OFF (perpendicular to the yellow tube)**. Place a towel under the system to catch any possible water leaks.
- 8.2 To prevent any residual carbon from the carbon pre filters from getting into the RO membrane, you previously left the tubing to the inlet of the RO membrane housing cap disconnected. Open the Feed Water Adapter Valve and Cold Water Supply Valve (CWSV), and flush the first three stages into a bucket until the water turns clear.
- 8.3 Once the water is clear, shut off the Feed Water Adapter and re-connect the tubing to the RO membrane housing cap. You will want to flush the system like this whenever the first three stages are changed.
- 8.4 Open the RO faucet. Slowly open the Feed Water Adapter back up and **check for any leaks**.
The **top 3 causes of leaks** are:
 - 1) The tubing is not fully inserted into the quick-connect fitting.
 - 2) The O-ring is not in the correct place or is kinked.
 - 3) The Housing/Cap is not tightened properly or misaligned with the threads.
- 8.5 Within 5 minutes, RO water will start slowly trickling from the faucet. Let the faucet trickle for at least 15 minutes to flush out the entire system apart from the tank. The water may appear black due to loose carbon from new carbon filters. It will eventually turn clear apart from many tiny air bubbles leaving the system.
- 8.6 Shut off the RO Drinking Faucet. Turn on the Tank Shut-off Valve. Wait for the tank to fill up completely. It will take 1.5 to 2.5 hours depending on your water temperature (40F-100F, the warmer the faster), water TDS (up to 750, the lower the faster), and incoming water psi (45-70, the higher the faster).
- 8.7 After the tank is full, open the RO Drinking Faucet to drain the tank completely. Do not use the first tank of water. Let it drain into the sink until the stream turns back to a trickle - this means the tank has emptied and you can close the RO faucet to let it begin filling again.
- 8.8 The TDS (total dissolved solids) of the water should be tested periodically to verify that the system is performing properly.
- 8.9 Check for leaks daily for the first two weeks after installation to ensure the system is functioning properly. Install the included Flood Alarm to provide additional peace of mind and protection.


Leak Stop Valve Installation

The Leak Stop Valve is a reusable mechanical leakage protector. When the pulp detects water leakage, it will expand and shut down the feed water. Before connecting the tubing into the fitting, make sure the end of the tubing is cut square and not damaged or scratched.

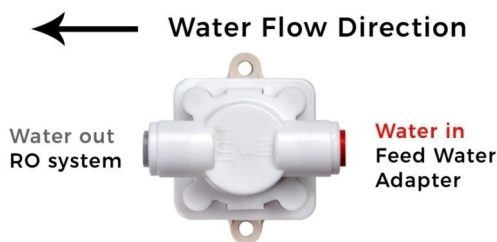

Tape the bottom against the floor

Replace expanded pulp

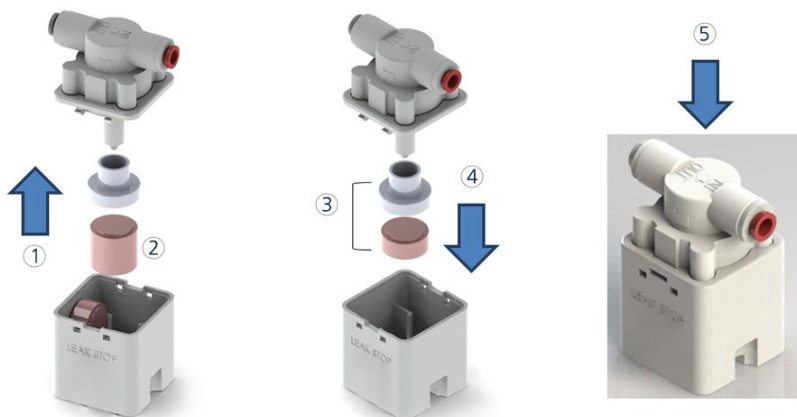

① Pull(↑) the Upper cover upward and separate it from the Lower body.

② Take out the expanded P-pulp.

③ Assemble the spare P-pulp with the P-pulp case.

④ Insert the Assembled P-pulp into the Lower body.

⑤ Push the Upper cover downward and unite with the Lower body.

Congratulations, you have successfully installed your iSpring Reverse Osmosis Water Filtration System!

Start enjoying fantastic reverse osmosis water right from your tap!

End of Installation Section

OWNER'S MANUAL

Please read this manual for useful reverse osmosis system maintenance information.

Section 1: iSpring RO System Maintenance

All iSpring RO systems are designed with ease of use and low maintenance in mind. If the filter cartridges are changed on schedule as suggested, the system will work properly for years to come. See the chart below for the filter pack model numbers for your system. The filter packs can be found on 123filter.com, Amazon, or HomeDepot.com.

<u>System Model</u>	<u>1-Year Filter Pack</u>	<u>2-Year Filter Pack</u>	<u>3-Year Filter Pack</u>
RCC7, RCC7P	F7-GAC	F15-75	F22-75
RCC7AK, RCC7P-AK	F9K	F19K75	F28K75
RCC7AK-UV	F10KU	F21KU75	F31KU75
RCC7D	F9D	F19D75	F28D75
RCC7U	F8U	F17U75	F25U75
RCC100P	F7-GAC	F15-100	F22-100
RCC100PAK	F9K	F19K100	F28K100
RCC1UP	F8U	F17U100	F25U100
RCC100UP-AK	F10KU	F21KU100	F31KU100
RCW5	F7-GAC	F15-50	F22-50

FILTER CARTRIDGE REPLACEMENT SCHEDULE

STAGE 1	STAGE 2	STAGE 3	STAGE 4	STAGE 5	STAGE 6
Sediment #FP15	GAC #FG15	CTO #FC15	RO Membrane #MC7	T33 Fine Carbon #FT15	Alkaline & Mineral #FA15
6-12 months	6-12 months	6-12 months	1-3 years	12 months	6-12 months

Many vendors claim their filters will last longer than 6 months in order to make a sale. Professional opinion and industry standards suggest changing the filters no later than every 6 months to minimize contamination risks and ensure the intended filtration performance.

Note: Stages 6 and/or 7 only exist on certain models.

Stage 1 – 3 Pre-Filters

Replace every 6 months or sooner if you notice a decrease in water flow or quality. The replacement frequency depends on your water usage and source water quality. To protect the RO membrane from chlorine and other damaging contaminants, it is important to change the pre-filters according to schedule.



How to change the stage 1 – 3 pre-filters:

1. Shut off the cold water supply valve and tank valve, and open the RO faucet to depressurize the system. Place a bucket or towel under the system to catch any water spills.
2. If there is enough room under the sink and the filter system is hung on the wall, you can twist the filter housing off without removing the system from the wall. Otherwise, you will need to pull the system out, lay it down, and remove the housings at that point. Be careful with the tubing connections when removing the system.
3. Twist off the filter housings in a counter-clockwise direction using the filter housing wrench.
4. Refer to Installation Step 1.1 to install the new vertical filter cartridges, and tighten the filter housings back on. Remember not to over tighten them or they will be hard to unscrew next time.

Stage 4 RO Membrane

Replace every 2-3 years or sooner if the TDS level starts increasing. Check the TDS level at least once a month to monitor the system's performance. The TDS rejection rate should be 90%+. To calculate the rejection rate, divide the RO water TDS into your tap water TDS and subtract from 1. For example, 20 (RO TDS) / 200 (Tap water TDS) = 0.1 1-0.1 = 0.9 so the TDS rejection rate would be 90%. (NSF/ASIN STANDARD 58 for RO water filter).

How to Change the Reverse Osmosis Membrane

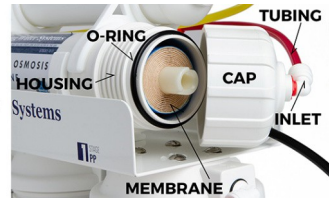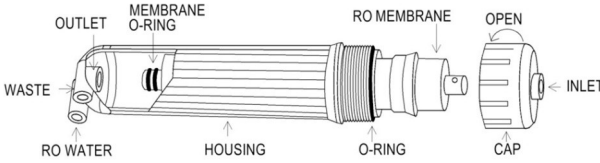

1. The RO membrane typically lasts about 2 – 3 years. The membrane life span depends on the source water quality, your water usage, and how often the three pre-filters are replaced. To ensure the system's performance and water purity, it is important to replace the pre-filter cartridges on schedule. Use a TDS meter to periodically to check the RO water purity.
2. Shut off the cold water supply valve and tank valve, and open the RO faucet to depressurize the system. Place a bucket or towel under the system to catch any water spills.
3. Remove the tubing from the quick-connect fitting on the membrane housing cap. Use the membrane housing wrench to twist off the housing cap in a counter-clockwise direction.
4. Pull out the old membrane. Use scissors or pliers to apply leverage if necessary.
5. Clean the membrane housing using hot water and scent-free dish soap (optional). Rinse thoroughly.
6. Cut open the small end of the vacuum sealed packaging containing the new RO membrane. Hold the new membrane through the packaging, and insert it into the housing without touching the membrane with your bare hands to avoid contamination of the membrane.
7. Make sure the O-ring is properly seated on the end of the membrane housing as shown in the previous images. We recommend replacing the O-ring every 3 years to prevent leaking due to an expired or dried out O-ring.
8. Place the membrane housing cap back on and hand tighten it, then use the housing wrench to tighten it another ¼-½ of a turn. Do not over tighten.

Stage 5 FT15 Inline Post Carbon Filter and Stage 6 Inline Alkaline Filter*

Replace the FT15 every 12 months and the Alkaline filter every 6 months

1. Remove all quick-connect tubing connections from the FT15 Post Carbon Filter.
2. Unscrew the fittings from both ends of the old Post Carbon Filter. Wrap the thread of each fitting 2-3 times with Teflon tape, and screw them into their respective sides on the new Post Carbon Filter.
3. Reconnect the quick connect tubing connections to the new Post Carbon Filter.


Tank Maintenance

It is recommended to fully empty and refill the tank at least once a month. This keeps the water inside the tank fresh and not sitting for an extended period of time.

What should I do with the system when going out of town?

When you are leaving for an extended period of time, you will want to shut off the water supply to the system and empty the tank. To do this, close the knob on the feed water adapter, and open the faucet until it stops running. This will signify that the tank is empty. If you are going to be gone for more than a week, you will also want to remove the RO membrane and store it in a damp Ziploc bag in the refrigerator.


Optional Add-Ons

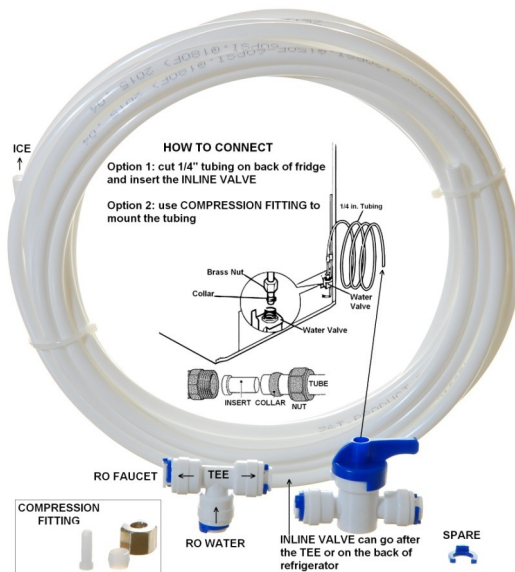

Ice Maker Kit (ICEK)

The Ice Maker Kit (model#: iSpring **ICEK**) can be purchased separately to feed RO water to your refrigerator for crystal clear ice cubes and great tasting water. If you choose to hook up the system to your refrigerator output, it can take the place of primary output over the RO faucet.

Section 2: Troubleshooting Guide for Newly Installed Systems

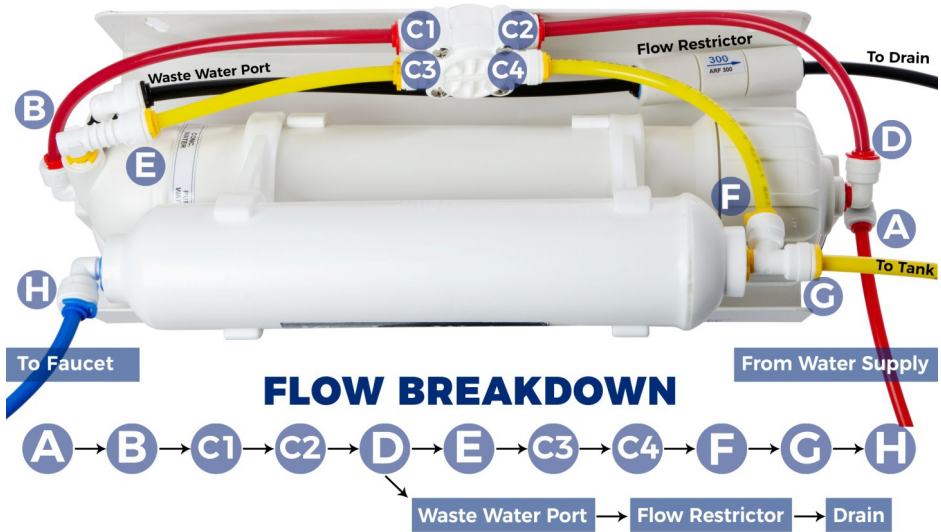

1) Zero output water from RO faucet

- a) Water supply is closed. Open the water supply to the system so the valve is in line with the red tubing.
- b) Incorrect installation. Verify all tubing connections.
- c) A tubing is crimped, blocking the water flow. Check all tubings and uncrimp any crimped tubings.

2) Tank not filling after several hours

- a) Incoming water pressure is below the minimum required level of 45 PSI. In this scenario, there is not enough water pressure to force the water through the RO membrane. Therefore, the tank does not fill, and the system drains continuously.
- b) Incorrect installation. Verify all tubing connections.
- c) Tank valve is closed. Make sure the tank valve is in line with the yellow tubing.

3) Leaking from where the tubings are inserted into the fittings

- a) The tubing is not pushed in past the O-ring inside the fitting, therefore not creating a seal. Make sure the tubing is pushed in a full 5/8" into the fitting. It will take some extra pressure, but you will feel the tube go fully into the fitting when it does so.
- b) The O-ring inside the fitting is not creating a seal with the tubing. Unscrew the elbow fitting, and replace it with one of the spare elbow fittings. Make sure to wrap the new fitting thread several times with Teflon tape before screwing it in.

4) Leaking from between the membrane cap and membrane housing

- a) If the membrane housing is leaking, make sure the O-ring is seated correctly as shown in sections "Installing the RO Membrane" and "How to Change the RO Membrane". It should be seated on the end of the membrane housing before the threads begin. The membrane cap is then screwed on over it. When positioned incorrectly, it will create a gap or damage the O-ring. When in the correct place, there will not be any pressure or tension on the O-ring.

5) Low water flow (trickle) at RO faucet

- a) Tank has not been given the chance to fill. Allow approximately two hours for the tank to fill.
- b) Incoming water pressure is below 45 PSI. If this is the case, the system will need a booster pump or permeate pump to raise the input water pressure going to the membrane. In this scenario the tank would only fill a little or not at all.

6) High TDS in RO water

- a) The system will provide a 90%+ TDS rejection rate when working properly. Meaning if your tap water TDS is 500 ppm, the water from the system should be 50 ppm or lower.
- b) Incorrect installation. Verify all connections on the system.
- c) If the TDS of the tap water and water from the system are about the same, make sure the RO membrane is in fact installed. The semi permeable membrane is blue, comes in sealed packaging, and goes in the stage 4 membrane housing.
- d) If you are getting some reduction in TDS but not 90%+, some water could be bypassing the membrane. This could be due to a faulty automatic shut-off valve, or the membrane itself. Contact iSpring customer support to identify the exact cause.

7) Cloudy water after installation

- a) In the weeks after installing the system or changing the filters, you will see many tiny air bubbles in the RO water. This can cause the water to appear “cloudy”. The bubbles will disappear as the system clears itself of trapped air, and are harmless for the time being.

8) The system drains water 24/7 (continuous drain)

- a) Keep in mind that it will take anywhere from 1-3 hours for the system to fill the tank from empty, and the drain line will be trickling during this time. If the drain line continues to run for 4+ hours, one of the following reasons could be the problem.
- b) Incoming water pressure is below the minimum required level of 45 PSI. In this scenario, the incoming water pressure is not strong enough to fill the storage tank and trigger the system to shut off, and the system will therefore drain continuously. Adding a booster pump or permeate pump to the system will raise the input pressure to a suitable level for the reverse osmosis process.
- c) The Automatic Shut-Off Valve (ASOV) or check valve is defective. To test if one of these valves is the cause of the continuous drain, try the following.
 - i) Fill several glasses of water from the RO unit to ensure the drain water is flowing.
 - ii) Close the blue valve on top of the tank.
 - iii) Wait approximately five minutes, then remove the drain tube to check if it is still flowing or not. If it is not flowing, the ASOV and check valve are in good working condition.
 - iv) If it is still flowing, this means either the ASOV or check valve are faulty. Open everything on the system back up and allow the tank to fill if it is not already. Tilt the tank to check the weight and ensure that it is filled at least partially. Then close the feed water adapter, cutting off the water supply to the system. With the tank valve open, leave the system for 15-30 minutes, and check the weight of the tank when you return. If it has emptied, the check valve is the source of the continuous drain.

9) Leak from tank valve connection

- a) Make sure you have applied Teflon tape to the tank threads before screwing on the tank valve. There should be at least 8-10 wraps of Teflon tape to ensure a proper seal. If you have done this and it continues to leak, contact iSpring customer support for an immediate replacement.

10) Water from the system tastes the same as tap water

- a) Incorrect installation. Verify all connections on the system.
- b) The RO membrane is not installed in the membrane housing. Ensure that the membrane has been installed.

Section 3: Glossary and Terms to Know

Add-On Kit (#ACL1): Filter add on kit for adding additional in line filters to an existing system. Comes with quick-connect elbow fittings, filter clamps, and additional tubing

Alkaline Remineralization Filter* (#FA15): 6th stage. Remineralizes the RO water and neutralizes the pH

Automatic Shut-Off Valve (#AAS2): The white, four way valve that automatically starts and stops the system's water production through pressure signals

Check Valve (#ACV1K): One way valve that does not allow water back into the membrane housing. Looks like a standard elbow fitting and is located on the "Pure" water port of the membrane housing

CTO Carbon Block Filter (#FC15): 3rd stage. 5 micron 10" carbon block filter. Further removes any residual chlorine, tastes, and odors before the water reaches the RO membrane

Drain Saddle (#ADS1): Attaches to your under-sink drain pipe to secure the drain tube coming from the system

Drinking Faucet: The output source for the RO water. The faucet is a non air gap faucet with a ¼" tubing connection. The optimal sized counter-top hole for the faucet is ½", but holes up to approximately 1 ½" will work

Elbow Fittings (#4044K): Quick connect elbow fittings used on the system (except for on the membrane housing and cap). ¼" tubing connection and ¼" NPT male thread

Elbow Fittings on Membrane Housing (#4042K): Quick connect elbow fittings used on the membrane cap and drain port of the membrane housing. ¼" tubing connection and ⅛" NPTF male thread

Feed Water Adapter: Goes in line with your cold water line and branches off a water supply line to the RO system. Can adapt to ¾" and ½" cold water lines

Flow Restrictor (#AFR300): Limits the drain water flow, keeping pressure in the system and allowing the RO process to occur

GAC Filter (#FG15): 2nd stage. 5 micron 10" granulated activated carbon filter. Removes chlorine, tastes, and odors from the water

GPD: Gallons Per Day

Housing Wrench for Membrane Housing (#AWR1): Housing wrench used to screw on and unscrew the membrane housing cap

Housing Wrench for Stages 1, 2, and 3 (#AWR2): Housing wrench used to screw on and unscrew the stage 1, 2, and 3 filter housings

Ice Maker Kit (#ICEK): Add on kit that allows you to run water from the system to your fridge ice maker or fridge water dispenser

Leak Stopper (#ALS1): Protects from any possible leaks by cutting off the water supply when the sponge absorbs water

Membrane Housing and Cap (#NW12): Horizontal housing that the RO membrane is inserted into

Membrane Housing O-Ring (#ORM): 2 ½" O.D. O-ring used to create the seal between the membrane housing and the membrane cap

Post Carbon Filter (#FT15): 5th stage. Works as a final polishing filter before the water is delivered to the faucet

PPM: Parts Per Million, a unit used to measure TDS readings

Pressurized Holding Tank (#T32M): 3.2g capacity pressurized water holding tank. The air bladder forces the water to the drinking faucet when the faucet is opened. Tank comes pre-pressurized and should read 7-10 PSI when empty

PSI: Pounds Per Square Inch, a unit used to measure water pressure

Quick Connect Fitting: A secure, easy to connect and disconnect type of fitting used on the system. The tubing is inserted past the tiny O-ring located inside each fitting, then locked into place by the spider lock and blue clip

Reverse Osmosis (RO) Membrane (#MC7): 4th stage. High rejection, 0.0001 micron, thin-film composite (TFC) reverse osmosis membrane, the heart of the reverse osmosis process

Sediment Filter (#FP15): 1st stage. 5 micron 10" polypropylene sediment filter. Traps particulate matter such as dirt, rust, and silt

Stage 1, 2, and 3 housing O-Rings (#ORF): 3 5/8" O.D. O-ring used to create the seal between the stage 1, 2, and 3 filter housings and their respective caps

Stage 1 See-Through Sediment Filter Housing (#HC12): Transparent stage 1 housing that holds the sediment filter. The see through housing allows for the sediment filter to be visually inspected

Stage 2 GAC Filter Housing (#HW12): Solid white housing that holds the stage 2 GAC filter

Stage 3 CTO Filter Housing (#HW12): Solid white housing that holds the stage 3 CTO filter

T Fitting on Stage 5 Post Carbon Filter (#7544K): T fitting located on the right side of the stage 5 Post Carbon Filter

Tank Valve (#ABV2K): On/off valve that screws onto the top of the tank

TDS: Total Dissolved Solids, a measure of the contamination level of a water source

TDS Meter (#TDS3): Handheld meter used to measure water quality

Tubing (#T14B / #T14W): 1/4" food grade tubing used on the system

Warranty

This Limited Warranty extends to the original purchaser of the system only. This warranty covers all Manufacturer-supplied items only that prove to be defective in material, workmanship, or factory preparation. This warranty covers parts only; all labor is excluded from this warranty, including, but not limited to, services related to the removal, replacement, installation, adjustment, maintenance, and/or repair of the unit or its components items. excludes all non-Manufacturer labor required for any servicing of the unit, including, but not limited to, servicing related to installation, adjustment, maintenance, and repair of the unit. This warranty applies only for the first full calendar year from date of purchase. The following items are excluded from this warranty: membranes, filters, O-rings, and all other parts or components that require regular replacement as a result of ordinary usage.

Disclaimers: This Limited Warranty applies only if the system is installed, used, and maintained in compliance with all instructions and requirements enclosed with the system. This warranty will be void for failure to observe the following conditions:

1. The system is to be used with potable water supply only.
2. Feed water pressure to the unit is no less than 45 PSI (30 PSI for systems with built-in booster pump) and no greater than 70 PSI.
3. The system is to be used on water supplies with chlorine concentrations of 1.0 mg/L (ppm) or less.
4. Feed water temperature to the unit must be no less than 40°F and no more than 100°F.
5. Total dissolved solids (TDS) in feed water must be less than 750 mg/L (ppm).
6. Feed water must have a pH between 4 and 8.
7. Turbidity must be less than 1.0 NTU.
8. SDI must be less than 5.
9. Feed water must be completely free of iron, manganese or hydrogen sulfide.

While the testing was performed under standard laboratory conditions, actual performance may vary. The Manufacturer does not know the characteristics of your water supply. The quality of water supplies may vary seasonably or over a period of time. Your water usage may vary as well. Water characteristics can also change if the drinking water appliance is moved to a new location. The Manufacturer assumes no liability for the determination of the proper equipment necessary to meet your requirements, and we do not authorize others to assume such obligation on our behalf.

This Limited Warranty does not cover any Manufacturer-supplied items that are defective as a result of the use of improper parts, equipment or materials. This warranty does not cover alterations or modifications of the unit or failure of a unit caused by such alterations and modifications.

This Limited Warranty does not cover malfunctions of the unit due to tampering, misuse, alteration, lack of regular maintenance, misapplication, fouling due to hydrogen sulfide, manganese or iron, scaling from excessive hardness, turbidity greater than 1.0 NTU, Silt Density Index (SDI) greater than 5.0 SDI, or excessive membrane hydrolysis due to chlorine levels in excess of 1.0 mg/L (ppm). In addition, damage to the unit due to fire, accident, negligence, act of God, or events beyond the control of the Manufacturer are not covered by this warranty.

Incidental and Consequential Damages Limitation: The Manufacturer will not be responsible for any incidental or consequential damages as a result of the failure of this unit to comply with express or implied warranties or any defect in the unit, including but not limited to, lost time, inconvenience, damage to personal property, loss of revenue, commercial losses, postage, travel, telephone expenditures, or other losses of this nature. In case some states do not allow the exclusion or limitation of incidental or consequential damages, you may choose to return the system. If you choose to keep it, you insist this exclusion STILL apply to you.

Owner's Warranty Responsibilities: As a condition of this Limited Warranty, the owner must ensure that periodic maintenance of the system is performed as described in the literature enclosed with the system. Neglect, improper maintenance, abuse, modification, or alteration of the unit will invalidate this Warranty. Should your unit develop a defect or otherwise fail to perform in accordance with this warranty, you should contact the retailer from whom the product was originally purchased.

Implied Warranties: The implied at-law warranties of merchantability and fitness for a particular purpose shall terminate on the date one year after the date of purchase.

NOTE: IN CASE SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, YOU MAY CHOOSE TO RETURN THE SYSTEM. IF YOU CHOOSE TO KEEP IT, YOU AGREE THAT THE ABOVE LIMITATIONS STILL APPLY TO YOU.

Warranty Registration

To register your product for the warranty, please visit our website at 123filter.com and go to “Warranty Registration” tab.

We provide a 30-day money back guarantee, a 1 year manufacturer warranty, and lifetime tech support for all of our products. However, we do not have the order information from websites other than 123Filter.com (Amazon, Home Depot, etc.), so please be sure to fill in that information upon registration of your system. If you have any questions or concerns about your product, please do not hesitate to call or email us, or put it in the notes/comments upon your warranty registration. Your satisfaction is our business!

If you are happy with our products and service, please show your support by writing a product review on Amazon, even just a single line. It takes you just a minute, but means a lot to us. Thank you!

How to Contact Us

Office Hours: Monday-Friday 8:30 a.m. - 5:30 p.m. EST

Phone: (678) 261-7611

Email: support@123filter.com



3020 Trotters Parkway
Alpharetta, GA 30004, USA

iSpringFilter.com

For questions, comments, or technical support, please contact us at:

support@123Filter.com

(678) 261-7611

Monday-Friday 8:30 a.m. - 5:30 p.m. EST