

FLOWTRON[®]
electric
Leaf Eater
the Ultimate MULCHER

SHREDS LEAVES,
GRASS
CLIPPINGS,
PINE NEEDLES . . .

**OWNER'S
MANUAL**

**MODEL
LE-900F**

- **Assembly**
- **Operation**
- **Maintenance**
- **Repair Parts**



WARNING

Carefully read and follow safety rules, precautions and operating instructions. Failure to do so can result in serious personal injury.



Instructions given with this symbol are for personal safety. Be sure to follow them.

Always Wear Eye Protection During Operation

ONE Year Limited Warranty on FLOWTRON LEAF-EATER THE ULTIMATE MULCHER — LE-900F

FLOWTRON, division of Armatron warrants your Flowtron Leaf-Eater to be free from defects in materials or workmanship under normal use and service for one year from date of the original purchase. All parts which are defective will be repaired or replaced free of charge. Any implied warranties, including the implied warranty of merchantability are also limited in duration for one year from the original purchase date. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

The provisions of this warranty shall not apply to any Flowtron Leaf-Eater which has been subject to misuse, neglect or accident, nor which is used for a purpose for which it is not designed, or which shall have been repaired or altered in any way so as to adversely affect its performance and reliability. Service by unauthorized parties voids your warranty. Warranty covers only the original purchaser. Commercial and/or professional use is excluded from warranty coverage.

Flowtron neither assumes nor authorizes any person to assume for it any other liability in connection with its products. No responsibility is assumed for any consequential damages that may result from the use of a Flowtron product, not for damages due to accident, abuse, lack of responsible care, the affixing of any unauthorized attachments, loss of parts or subjecting this unit to any but the specified voltage. Some states do not allow the exclusion or limitation of the incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

FLOWTRON Outdoor Products, 15 Highland Ave, Malden, MA 02148 • an ARMATRON Co.

Flowtron Outdoor Products
15 Highland Ave, Malden, MA 02148 • an ARMATRON company
781-321-2300 • www.flowtron.com

KNOW YOUR FLOWTRON ULTIMATE LEAF-EATER

Your Flowtron Ultimate Leaf-Eater is a quality built product that is designed to provide you with a unit that is affordable and will perform with a minimum of care and maintenance.

A. Special Features Include:

- Coarse to fine leaf reduction with special positions for pine needles and grass clippings.
- Unique leg design – functions upright or straddles trash barrel.
- Tilt feature makes loading easy; body of unit flips 180° for simple, compact storage.
- Bungee cord surrounding bottom of unit firmly holds leaf bag in position.
- Storage compartment with hinged door holds cutting lines, gloves, safety glasses, etc.
- Foam cushion handle grips ensure comfort and ease of carrying.
- Powerful universal electric motor.
- Runs on ordinary 120 volt, 15 amp household current.

B. Unpacking Instructions

Your unit has been carefully packed at the factory to prevent damage during shipment and storage.

Carefully unpack the carton as follows:

1. Check parts against list shown.
2. Examine for damage

Carton Contents		
Key #	Description	Qty.
1	Funnel Half	2
2	Housing	1
3	Leg Left	1
4	Leg Right	1
5	Hardware Package	1
6	Owner's Manual	1

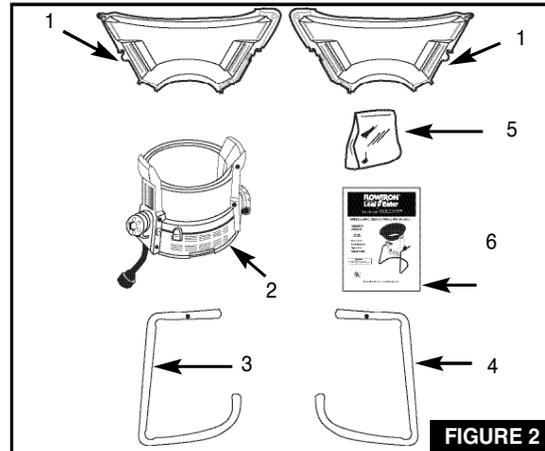


FIGURE 2

ASSEMBLY

Hardware Bag Contents:

Qty.	Part #	Description
2	352 3533	Leg Connector
2	245 6225 P58	#10-32 Phillips Pan Head Screw, 1 1/2" long
2	396 2599	Leg Hub Spacer
2	245 6237 P28	#8 Phillips Pan Head Sheet Metal Screw, 1/2" long
2	396 2438	Handle Grip
2	345 2181	#10-32 Wing Nuts
4	345 2285 P28	#8-32 Phillips Pan Head Screw, 1/2" long
36	396 2877 P01	Cutting Lines

A. Preparation

Your Owner's Manual has been developed to help you assemble the unit and to understand its safe operation. It is important that you read your manual completely to become familiar with the unit before you begin assembly.

Tools you will need:

#2 phillips head screwdriver



1. Assemble Funnel

a. Place funnel halves on flat surface with narrow

opening facing up. Align both halves and press locating pin of funnel half into locating hole on adjacent funnel half. See figure 3. Using two (2) #8 x 1/2" screws, fasten both halves together.

NOTE: Flange on funnel half overlaps outer surface of adjacent funnel half as shown in figure 3.

b. Rotate Funnel 180° and repeat step a for opposite side.

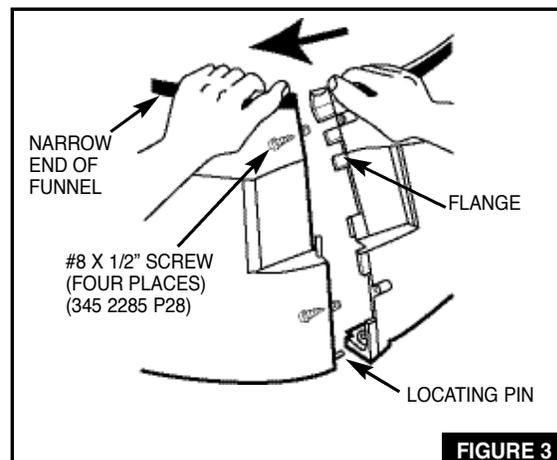


FIGURE 3

ASSEMBLY (continued)

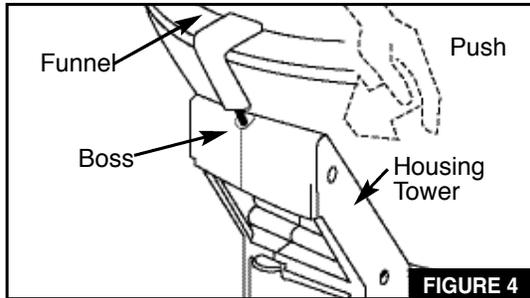


FIGURE 4

2. Attach Funnel to Housing

Place narrow opening of funnel on upper end of housing and position funnel so that flat areas of funnel are located at the right and left housing towers. Align boss on funnel with hole at top center of housing tower as shown in figure 4. Repeat for opposite side. With bosses aligned, press funnel firmly down onto housing. Apply pressure all around edge of funnel until funnel snaps into place and is seated evenly around the housing.

3. Assemble Legs

Position the two curved leg sections to form a semi-circle. Place leg connector brackets at the junction of the two leg sections and align the holes in the brackets with the holes in the legs. Fasten using two #10 x 1 1/2" screws and two #10 x 32 wing nuts. See figure 5.

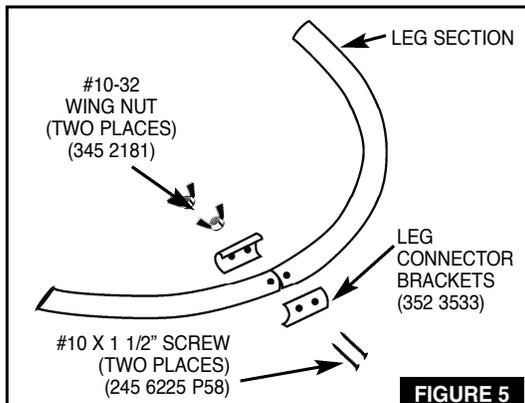


FIGURE 5

4. Attach Spacer and Handle Grips to Legs

Locate holes on sides of horizontal portion of leg sections. Holes are located approximately 7" from end of leg.

Install a spacer on a #8 x 1/2" pan head sheet metal screw and fasten to outside surface of leg. Repeat for opposite side. See figure 6.

Place handle grips on horizontal ends of both leg sections.

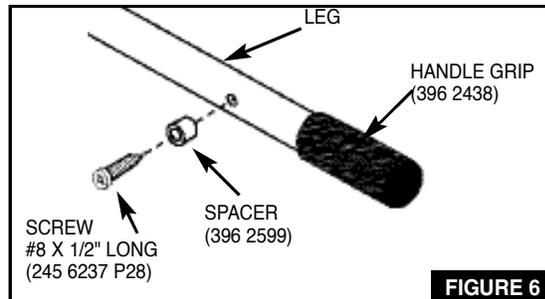



FIGURE 6

5. Assemble Housing To Legs

Remove knobs and hubs from both sides of the housing by unscrewing knob and pulling hub off threaded stems located on either side of the housing. Do not remove friction pads. See figure 7.

Place housing on legs with funnel facing downward. Position with Flowtron Leaf-Eater label facing semi-circle, and with threaded stems of housing above leg spacers. Place hub on leg making certain that spacer on leg passes through slot on hub. See figure 7.

Insert threaded stem through hole in center of hub and fasten by threading knob onto stem. **DO NOT OVERTIGHTEN.** Repeat for opposite side. Position unit at desired angle and tighten left and right knobs

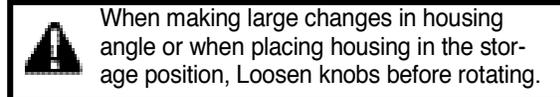

When making large changes in housing angle or when placing housing in the storage position, Loosen knobs before rotating.

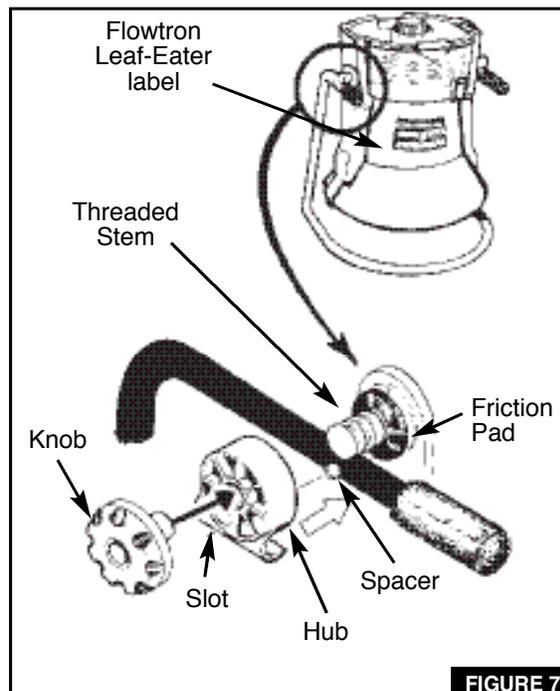


FIGURE 7

SAFETY RULES AND PRECAUTIONS

Warning: To reduce the risk of fire, electric shock, and personal injury, the following basic safety precautions should always be followed.

READ ALL INSTRUCTIONS

1. Become familiar with all sections of this owner's manual before attempting to operate the shredder. This shredder should be used solely for the purpose it was intended.
2. Use only parts or accessories specifically designed for use with this shredder. Using other parts or accessories could increase risk of injury.
3. Keep Children Away – all visitors should be kept at a distance from the work area.
4. Never allow your hands or any part of your body or clothing inside the upper housing area.
5. Avoid Dangerous Environments – do not use shredder in damp or wet locations. Do not operate or store shredder in wet areas. Do not operate in rain. Store indoors when not in use, in a dry, and high or locked-up place – out of reach of children.
6. This shredder should be operated on a solid, level surface.
7. Dress Properly – do not wear loose clothing or jewelry. They can be caught in moving parts. Use of work gloves and substantial footwear is advised when working outdoors. Wear protective hair covering to contain long hair.
8. Stay Alert – Watch what you are doing. Use common sense. Do not operate shredder when you are tired.
9. Do not Abuse Power or Extension Cords – Never carry unit by its power cord or yank cord to disconnect from receptacle. Keep all cords clean and away from heat, oil and sharp edges and inspect for damage before each use.
10. Ground unit properly. Follow instructions on page 5 when connecting to electrical outlet.
11. Warning – To reduce the risk of electrical shock, use only an extension cord intended for outdoor use. See page 5 for additional information on extension cords.
12. Ground fault circuit interrupter (GFCI) protection should be provided on the circuit(s) or outlet(s) to be used for this shredder. Receptacles are available having built-in GFCI protection and may be used for this measure of safety.
13. If it is necessary for any reason to inspect, clean or repair the shredder, turn the shredder off and wait until it comes to a complete stop, then disconnect the power cord before attempting such inspection or repair.
14. Disconnect shredder from the power source when not in use, before servicing, and when changing cutting lines.
15. When feeding material into the shredder be extremely careful that pieces of metal, rocks, bottles, cans or other foreign objects are not included.
16. Do not force the shredder. It will do the job better and with less likelihood of a risk of injury when used at the rate for which it was designed.
17. If the cutting mechanism strikes a foreign object or if your shredder should start making an unusual noise or vibration, immediately switch it off, wait until the shredder has come to a complete stop, then disconnect the power cord and take the following steps:
 - A. Remove any foreign or clogged material.
 - B. Check for any loose parts and tighten to assure continued safe operation.
 - C. Replace or repair any damaged parts.
18. Avoid unintentional starting. Be sure switch is off when plugging in the shredder.
19. Always use safety glasses. Wear face or dust mask if operation is dusty.
20. Check discharge area periodically after stopping shredder to assure the processed material does not build up and clog motor cooling vents.
21. Do Not Overreach – keep proper footing and balance at all times.
22. Do not move shredder when motor is running or with finger on the switch.
23. Maintain Shredder With Care – Follow instructions for replacing cutting lines and for cleaning air filter. Inspect shredder power cord periodically, and if damaged, have it repaired by an authorized service facility. Keep handles dry, clean, and free from oil and grease.
24. Check Damaged Parts – Before further use of the shredder, any part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other condition that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless indicated elsewhere in this manual.

SAVE THESE INSTRUCTIONS

ELECTRICAL REQUIREMENTS

Important: Use a 14 ga. or heavier extension cord with a maximum length of 100 ft.

Grounding Instructions


This shredder should be grounded while in use to reduce the risk of electric shock to the operator.

The shredder is equipped with a three-conductor cord and three-prong grounding plug. The green or green and yellow conductor in the cord is the grounding wire. Never connect the green or green and yellow wire to a live terminal.

The shredder is intended for use on a circuit that has a grounded outlet box that looks like the one illustrated in figure 8, sketch A.

An adapter which looks like the adapter illustrated in figure 8, sketch B is available for connecting three-prong plugs to two-prong receptacles. The green colored rigid ear, lug, or the like on the adapter, must be connected to a permanent ground, such as a properly grounded outlet box, using a metal screw.

Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the shredder is properly grounded.

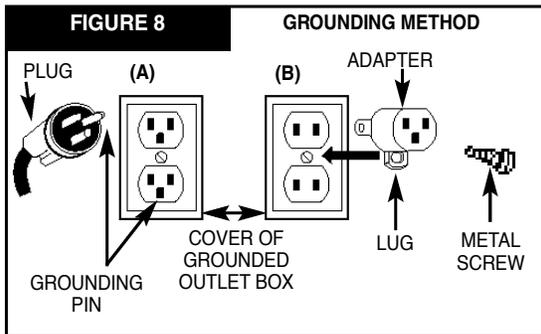


Extensions Cords

Only use three-wire extension cords that have three-prong grounding plugs and three-hole receptacles that accept the shredder's plug. When using an extension cord, make sure that it is in good condition.

Use a 14 ga. or heavier extension cord with a maximum length of 100 ft. An undersized extension cord will cause a drop in line voltage resulting in loss of power and overheating.

Warning – To reduce the risk of electric shock, only use extension cords intended for outdoor use, such as cord types SW-A, SOW-A, STW-A, STOW-A, SJW-A, SJOW-A, SJTW-A or SJTOW -A.

To prevent disconnection of the shredder cord from the extension cord during operation, make a knot as shown in figure 9. Devices for retaining extension cords are also available at your local hardware retailer.

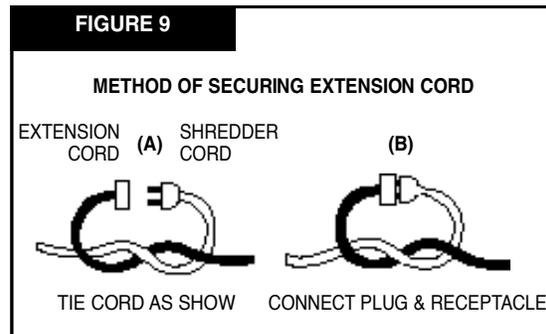

1. On/Off Switch

The On/Off switch is located on the side of the Lower Housing. To turn unit on push switch up to "On" position, see figure 10. To turn unit "Off" push switch down to "Off" position, see figure 10.

2. Circuit Breaker/Reset Button

The circuit breaker/reset button is located on the lower, outside front of the motor housing as shown in figure 10. The unit is designed to shut down in the event of an overload. To restart, place on/off switch in "off" position, push reset button, wait approximately three minutes and then place switch in "ON" position.

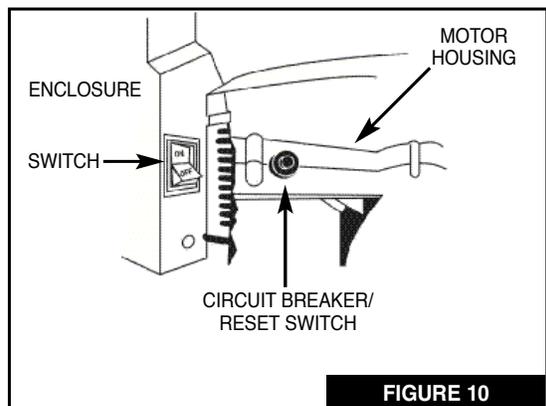


FIGURE 10

SAFE OPERATING INSTRUCTIONS

Your Flowtron Ultimate Leaf-Eater can be hazardous if improperly or carelessly used. The instructions and figure shown below demonstrate the right way to use your machine. Read and understand the operating instructions before you operate your machine. Always use safe and cautious operating methods. Please remember, the operating and safety instructions have been written for your use. Failure to read all instructions may result in injury. Be sure you have read "Rules for Safe Operation" on page 4 before proceeding.

⚠ CAUTION

Disconnect power cord from extension cord before moving machine from one location to another location.





Do not attempt to shred twigs, branches or other foreign objects. If detected during operation, stop the shredder and remove these items from the hopper.

1. Moving Your Unit

Disconnect the power cord from the extension cord or power source, grasp the unit along the top of the housing tower, lift and move to wherever you choose. To place unit on trash container, lift by grasping hand grips located on leg extensions. To use on legs with leaf bag, place bag around unit and retain with bungee cord. See figure 12.

3. Mulching Control Lever

The control lever, see figure 13, controls the particle size and speed at which material goes through the unit. With the control lever in the COARSE position, material will process through the unit faster but will give you a larger particle size than if the lever were in the FINE position. The FINE position setting will discharge material slower, but will give the smallest particle size. Use special settings for pine needles, grass clippings and thatch. For best results, material should be shredded when dry.

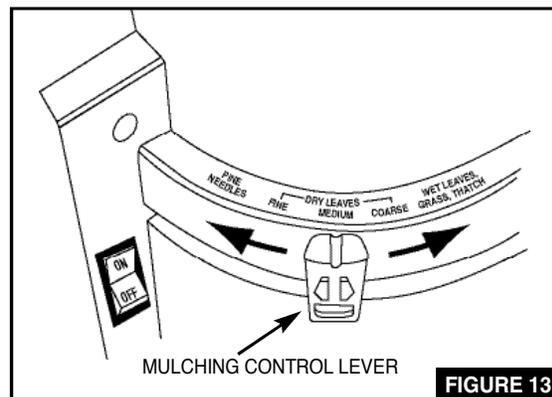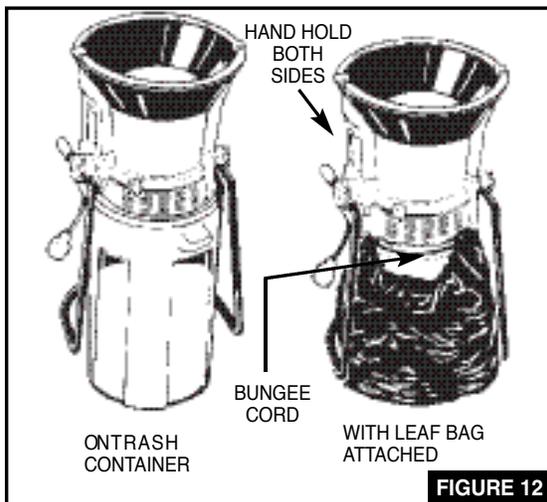

Filling hopper with unshredded material at a rate faster than the machine can handle may result in permanent damage to your motor.



Do not allow shredded material in trash container or leaf bag to reach bottom of motor housing. A reduction in airflow will result and may cause permanent damage to your motor.

2. Loading Your Machine

With the machine running, feed double handfuls of dry leaves, or single handfuls of wet leaves, into the hopper. Allow the machine to shred the load completely and regain speed before reinserting the next load. Do not overload the machine by letting it labor at low speed: this will cause the circuit breaker to shut the motor off. If this happens, turn the switch off, unplug the machine, clear the unshredded material from the hopper, reset the breaker and continue with your shredding.

MAINTENANCE

1. Cleaning Your Unit

Your unit requires a minimum of maintenance other than cleaning. It is recommended that you clean out built-up residue from inside the housing area during and after each use. Replace cutting line as often as necessary, see paragraph 2 below, and clean air filter frequently, see paragraph 4 below. Any other maintenance or repairs should be performed by Flowtron

2. Replacement of Cutting Line

Your unit is supplied with six strips of six (6) cutting lines each (for a total of 36 cutting lines). To separate individual lines simply pinch the indent between lines nearest strip end and peel away.

Replace cutting cord when a noticeable decrease in shredding efficiency is observed. To remove used cutting lines pull used line out of the spinner head inside the housing. To install new cutting lines place each end of new line through the two holes in the post on top of the spinner head and pull through so that both ends of the line are even. Thread lines through the two ferrules on the side of the spinner head and pull tight so that ends are even. See fig. 14.

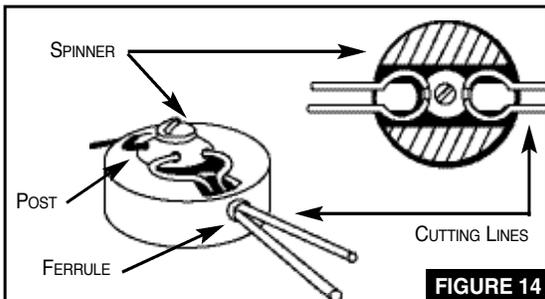


FIGURE 14

WARNING: Use only .080 diameter monofilament cord 12 3/4" long. Use of thicker lines, lines made of substitute materials, or lines greater than 12 3/4" long **MAY RESULT IN PERMANENT DAMAGE TO YOUR MOTOR AND/OR INJURY.**

NOTE: LER-100 Cutting Line Kit contains 12 replacement lines and may be purchased from your local dealer. If not available, order direct from Flowtron Outdoor Products or on line at www.flowtron.com

3. Replacement of Spinner

Remove screw and "O" ring from center of spinner. Lift spinner off shaft. Place new spinner over shaft and turn until hex falls in place. Tighten screw until "O" ring is depressed slightly.

Important

Do not attempt to run or use your machine with the Air Filter removed. Check frequently to insure that the Air Filter is clean. Always disconnect the power cord prior to removing Air Filter.

4. Cleaning Air Filter

The removable air filter is located on the side of the housing tower. To remove, grasp filter with fingers and pull out of compartment. (See figure 15.) Rinse with clear water and air dry. Replace air filter before using machine.

5. Storage

To reduce storage space requirements, loosen knobs and rotate unit 180°, (funnel facing downward).


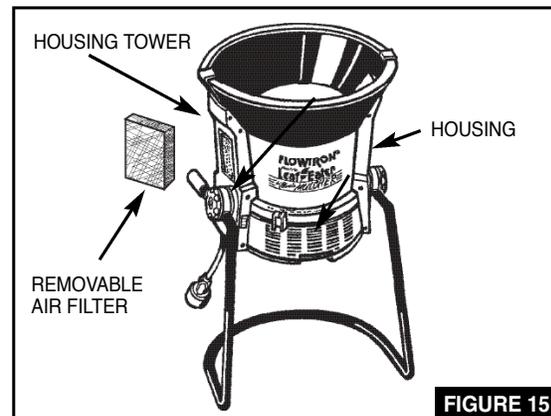


FIGURE 15

Symptom	Trouble Shooting Problem	Correction
Motor will not start	No electric power.	Check to be sure power cord is connected to the power source.
	Circuit breaker has tripped.	Clean filter and residue inside housing.
No cutting action/lack of power.	Cutting line is worn or residue has built-up inside of housing.	Replace cutting line with new line. Clean built-up residue in housing.
Motor does not sound like it is running properly.	Air filter is dirty.	Remove and clean air filter.
	Unit bound with debris.	Clean unit.

FLOWTRON EXPLODED VIEW OF LE-900F

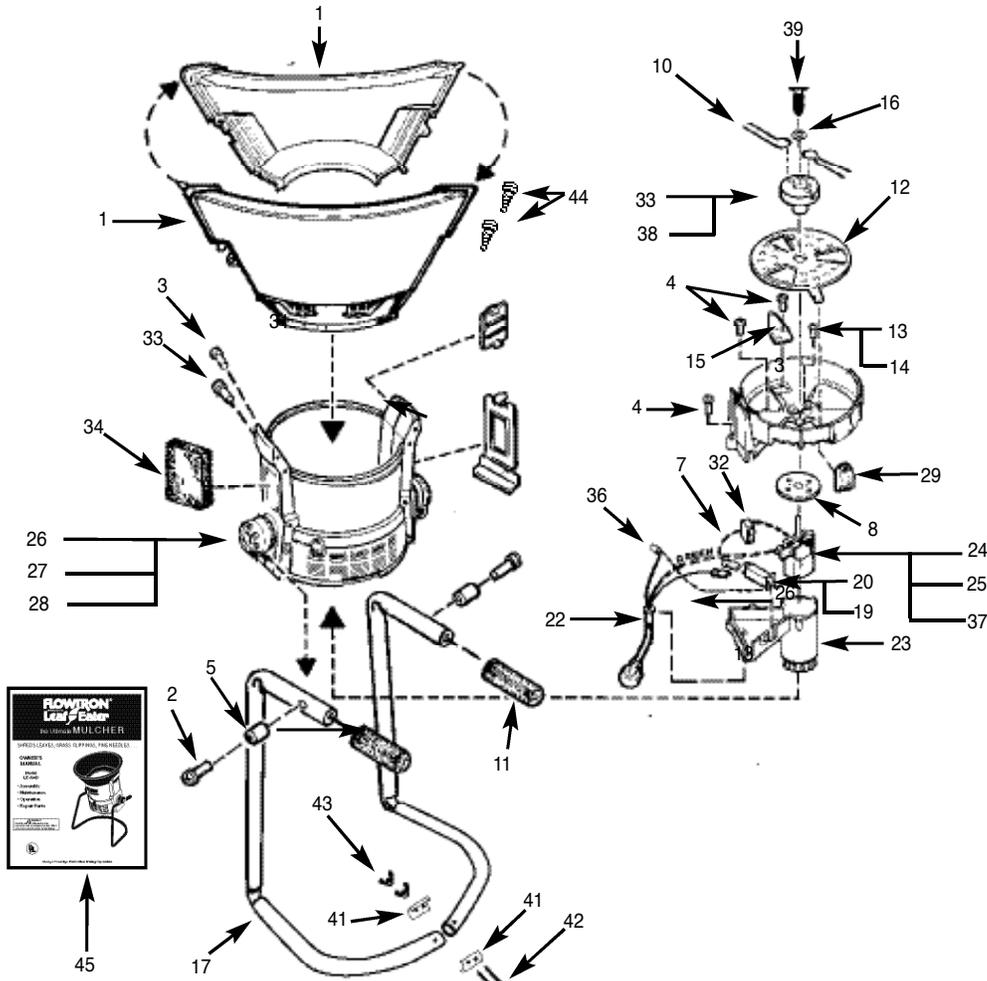

Ref #.	Part #	Description	Qty.	Ref #.	Part #	Description	Qty.
1	355 2118	FUNNEL	2	23	355 2115	MOTOR HOUSING	1
2	245 6237 P28	SCREW, SHT. MTL., PAN HD., PHIL., #8 X 1/2, BK.	2	24	343 3510	BAFFLE (NOT SHOWN)	1
3	345 2285 P42	SCREW, PAN HD., PHIL., #10 X-3/4	2	25	379 3449	MOTOR	1
4	345 2285 P29	SCREW, PAN HD., PHIL., #8 X 5/8	8	26	355 2134	LEG KNOB	2
5	396 2599	LEG HUB SPACER	2	27	355 2133	LEG HUB	2
6	355 2117	MAIN HOUSING	2	28	367 2574	FRICTION PAD	2
7	305 3015	JUMPER WIRE ASSY.	1	29	355 2555	ADJUSTMENT KNOB	1
8	355 3531	WASHER, BULK HEAD	1	30	355 2130	SWITCH COVER	1
9	355 2116	BULKHEAD	1	31	305 3034	SPINNER HEAD ASSEMBLY	1
10	396 2877 PO1	CUTTING LINE	2	32	394 3014	SWITCH, ON/OFF	1
11	396 2438	HANDLE GRIP	2	33	345 2285 P34	SCREW, PAN HD., PHIL., #8 X 1-1/4	6
12	355 3150	MULCHING DISC	1	34	367 3011	FILTER ELEMENT, REMOVABLE	1
13	345 2978	SCREW, PHIL., HEAD, #10-24 x 5/8	2	35	396 2136	BUNGEE CORD	1
14	245 6272 P04	#10 FLAT WASHER	2	36	595 1506	WIRE CONNECTOR	1
15	352 3149	CUTOFF BRACKET	1	37	345 1683	JAM WASHER, SPINNER (NOT SHOWN)	1
16	567 4675	"O" RING	1	38	369 1689	INSERT, SPINNER (NOT SHOWN)	1
17	368 2766 P1	LEG, LEFT	1	39	345 3512	SCREW NYLON, 5/16-18	1
18	368 2767 P1	LEG, RIGHT	1	40	355 3531	BULK HEAD WASHER (NOT SHOWN)	1
19	355 3105	SPACER, CIRCUIT BREAKER	1	41	352 3533	LEG CONNECTOR BRACKET	2
20	394 3511	CIRCUIT BREAKER	1	42	245 6225 P58	SCREW, PAN HD., PHIL PARK, #10-32 X 1 1/2	2
21	355 2135	STORAGE DOOR	1	43	345 2181	WING NUTS #10-32	2
22	312 2517	POWER CORD	1	44	345 2285	SCREW, PAN HD, PHILIP #8-32	4
				45	357 3151	OWNER'S MANUAL1	1