

OWNER'S MANUAL



TRINITY ECOSTORAGE[™] NSF 34" STAINLESS STEEL TOP KITCHEN CART Model # TBFZ-1419



Important / Important / Importante

FOR QUICK & EASY 3D ASSEMBLY INSTRUCTIONS

POUR DES DIRECTIVES D'ASSEMBLAGE 3D RAPIDES ET FACILES

PARA INSTRUCCIONES DE ENSAMBLAJE RÁPIDAS Y SENCILLAS EN 3D




DOWNLOAD THE FREE APP | TÉLÉCHARGER L'APPLICATION GRATUITE | DESCARGUE LA APLICACIÓN GRATUITA

PARTS LIST

Your TRINITY Stainless Steel Top Kitchen Cart should include the following parts. Please inspect box contents to ensure you have received all components.

If you are missing any parts, need assistance with assembly or have questions, please contact TRINITY Customer Service: 800.985.5506 or <u>customerservice@trinityii.com</u>. Parts can also be requested online via our "Contact Us" section <u>www.trinityii.com</u>.

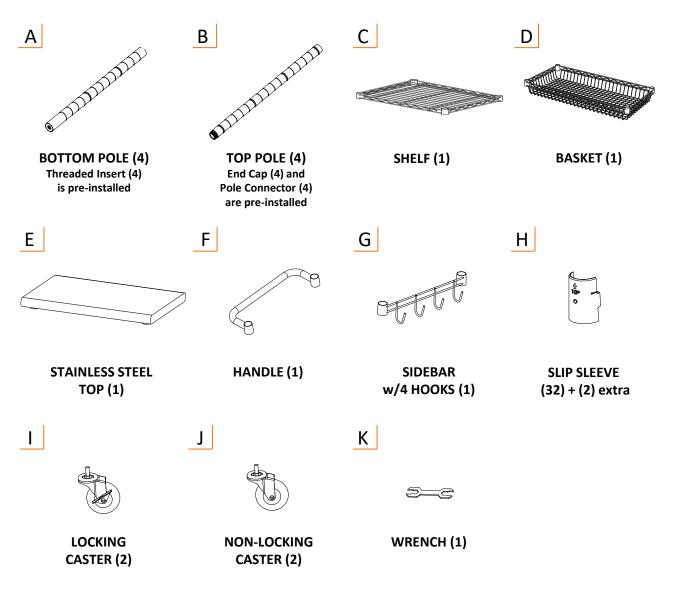




1


Note: The black circular plastic spacers in between Shelves are used only for packaging purposes. They are NOT needed. Please discard.

STEP 1

Screw CASTERS (I & J) into each BOTTOM POLE (A). Turn clockwise to screw in place.

<u>Use provided WRENCH (K) to tighten</u> <u>completely.</u> Failure to do as instructed could <u>result in caster stem breaking.</u>



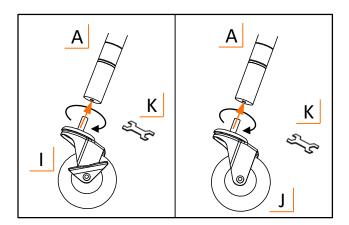


STEP 2

On BOTTOM POLE (A), place 1 pair of SLIP SLEEVES (H) at desired height **no higher than** 3rd indentation from bottom. Make sure arrow faces up and word "TOP" is right-side up. Do this for each BOTTOM POLE (A). Make sure SLIP SLEEVES (H) height is identical for each BOTTOM POLE (A).

Note that each POLE (A & B) has slight horizontal line indentations at 1" intervals. Each SLIP SLEEVE (H) has raised horizontal lines inside designed to lock in place on POLE (A & B).

Slide pair of SLIP SLEEVES (H) until you hear a click to confirm pair is locked onto BOTTOM POLE (A). Do NOT place more than one pair on each POLE (A & B) at a time.

Note: There will be a very small gap in-between two locked SLIP SLEEVES (H)—this is normal.

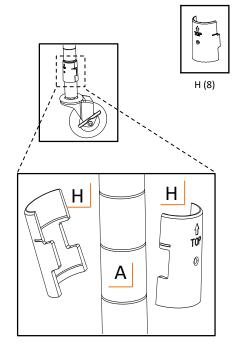


STEP 3

Place SHELF (C) on its side and slide each BOTTOM POLE (A) through each corner cylinder of SHELF (C). Make sure LOCKING CASTERS (I) are on same side and make sure corner cylinders are positioned over SLIP SLEEVES (H).

Slowly stand unit upright.

Note:

Level side of SHELF (C) is TOP side (TRINITY logo on the corner cylinders should be right-side up). Use a rubber mallet, if needed, to secure SHELF (C).

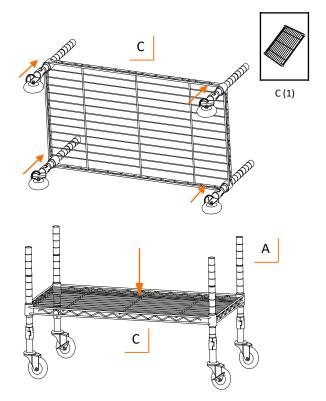


STEP 4

Screw TOP POLES (B) into BOTTOM POLES (A) in clockwise direction.

Note:

Top of each TOP POLE (B) is indicated by a BLACK END CAP. Pole Connectors are pre-installed in bottom of TOP POLES (B).

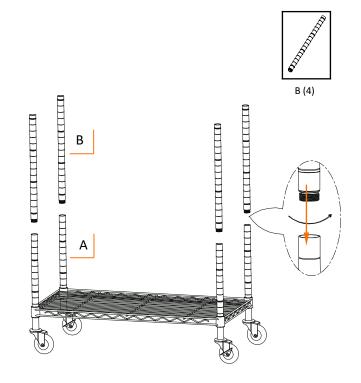


STEP 5

Repeat STEP 2 & 3 to assemble BASKET (D). Make sure SLIP SLEEVES (H) height is identical.

Note:

Use a rubber mallet, if needed, to secure BASKET (D).

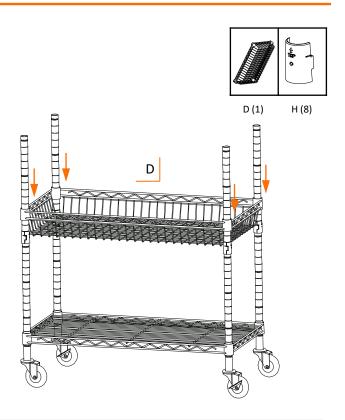

STEP 6


Attach one pair of SLIP SLEEVES (H) to poles on shorter side of Kitchen Cart as shown.

Slide HANDLE (F) onto poles, making sure corner cylinders are positioned over SLIP SLEEVES (H).

Repeat STEP to attach SIDEBAR (G) onto opposite side of Kitchen Cart.


Note:


Use a rubber mallet, if needed, to secure HANDLE (F) and SIDEBAR (G).

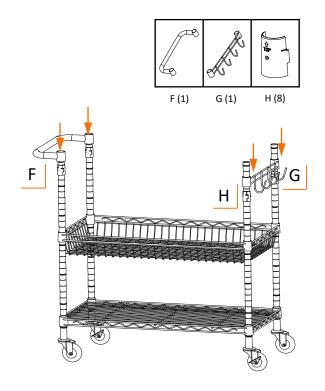

STEP 7

Repeat Step 2 for STAINLESS STEEL TOP (E) and place SLIP SLEEVES (H) at highest position on TOP POLES (B). Slide STAINLESS STEEL TOP (E) onto SLIP SLEEVES (H).




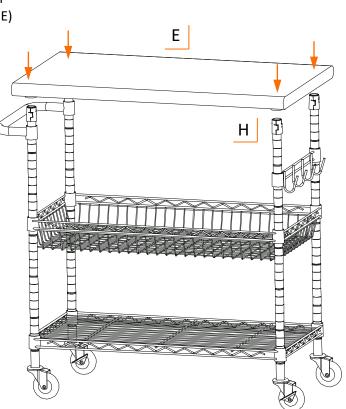

SERVICE PARTS LIST – TBFZ-1419

TRINITY Customer Service provides the following replacement parts:

	Part Number	Description		Part Number	Description
1)	XBS-06-016-3420	Stainless Steel Top	8)	ZSV-99-008-3010	Locking Caster
, 2)	ZSV-04-029-1675	Top Pole	, 9)	XXX-97-002-0001	Wrench
, 3)	ZSV-02-007-0009	Sidebar w/ 4 hooks	10)	ZSV-03-007-3216	Shelf
4)	XBK-01-012-2543	Slip Sleeve	11)	ZSV-21-005-3216	Basket
5)	ZSV-01-030-2523	Pole Connector	12)	ZSV-05-006-1600	Handle
5) 6)	ZSV-04-031-1525	Bottom Pole	13)	XBK-23-004-2517	End Cap
-			13)	XBN 23 004-2317	
7)	ZSV-99-007-3010	Non-locking Caster			

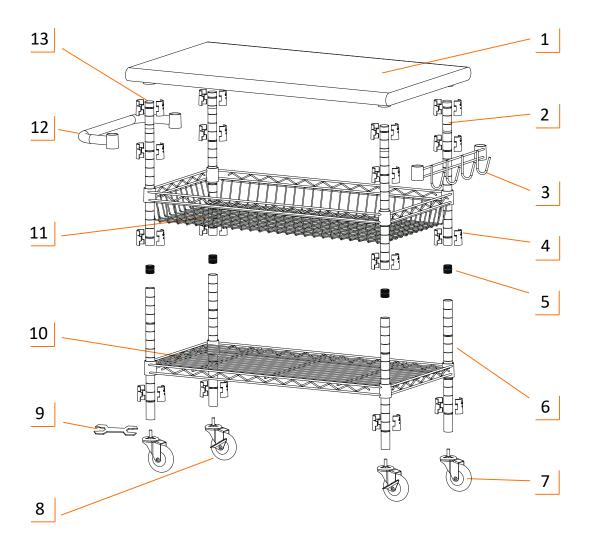

WARNINGS

- Read and understand all instructions. Failure to follow all instructions may result in injury and/or damage.
- 2. Use the provided caster wrench to tighten casters completely. Failure to do as instructed could result in the caster stem breaking thereby causing the cart to collapse.
- 3. The warnings, cautions, and instructions discussed in this manual cannot cover all possible conditions or situations that may occur. The user must always be aware of their environment and ensure that they use the product in a safe and responsible manner.
- 4. Do NOT modify the product in any way. Unauthorized modification may impair the function and/or safety of the product, and may affect the life of the product. Any modifications will void product warranty.
- 5. Check for damaged parts. Before using this product, carefully check that all parts are in good condition, and that the product will operate properly and perform its intended function. Check for damaged parts and any other conditions that may affect the operation of this product. Replace damaged or worn parts, and never use this product with a damaged part. Regularly secure all parts.
- 6. Do NOT roll product on an uneven surface. Only move product on a smooth surface. Rolling over rough or uneven surface may cause casters to break or items on the product to fall, resulting in injury and / or damage.
- 7. Do NOT overload the product.

Weight capacity per Shelf (evenly distributed)	200 lb
Weight capacity per Basket (evenly distributed)	150 lb
Total weight capacity of Cart (evenly distributed)	500 lb

- 8. Do NOT allow children to climb or play around the product. Tipping may occur causing injury.
- **9.** Do NOT stand on or use any part of this item as a step ladder. Only use the product on an even and stable surface. Tipping may occur causing injury.
- **10.** Make sure that the wheels are LOCKED when working on the stainless steel top.
- 11. Do NOT leave knives or sharp objects on kitchen cart unattended.

CARE AND MAINTENANCE

- Avoid harsh, abrasive cleaners, and other corrosive chemicals. Do not use scouring pad for cleaning.
- Use a quality stainless steel cleaner and follow instructions that come with the cleaner. Wipe ALONG the grain (NOT against).
- Keep casters locked when kitchen cart is stored.
- This product is designed for indoor use only.

PRODUCT REGISTRATION

Thank you for purchasing a TRINITY Stainless Steel Top Kitchen Cart. In order to register your product and receive streamlined customer service, please fill out the following Product Registration Form and (1) fax the form to 310.347.4134 (2) complete the Product Registration Form online at <u>www.trinityii.com</u> or (3) scan and email the form to <u>customerservice@trinityii.com</u>. Include a copy of your original receipt with your submission.

First Name:	Last Name:					
Address:						
City:	State: Zip Code:					
Email Address:	Phone:					
Product Model #:TBFZ-1419	Purchase Date: / /					
Location of Purchase:						
Please rate the importance of each feature (1=least important; 10=most important) Quality Price Size/Capacity Appearance Other						
How did you hear about our product? Magazine Ad Catalog Salesperson Word of Mouth Internet Store Display Other						
Marital Status: Single Household Income: Below \$50 Education: High Schol Primary Residence: Own Comments/Suggestions:	☐ Married 0,000					

1

1 YEAR LIMITED WARRANTY

TRINITY Stainless Steel Top Kitchen Cart Model # TBFZ-1419

Trinity International Industries ("Trinity") warrants to the original consumer purchaser ("Purchaser") of the TRINITY Stainless Steel Top Kitchen Cart ("Product") that each Product shall be free from defects in workmanship and materials for a period of 1 year from the date of original purchase. Trinity's obligation under this warranty shall be limited to repair or replacement of, or adequate compensation for the Product which shall not be greater than the amount of the purchase price of the Product, at the option of Trinity, during the warranty period. All replaced parts and Products become the property of Trinity and must be returned to Trinity.

This warranty excludes normal wear and tear of the Product and its parts or components, and damage arising from any of the following: negligent use or misuse of the Product, use contrary to this User's Manual, or alteration by anyone other than Trinity. The warranty period of 1 year shall not be extended or renewed by the repair or replacement of, or compensation for, the Product. Any warranty implied by applicable law is limited in duration to one year from the date of purchase and is subject to the same conditions and limitations as is provided for our express warranty.

Except as set forth herein, and to the extent of applicable there are no warranties on this Product either express or implied, and Trinity disclaims all warranties including, but not limited to, any implied warranties of merchantability, infringement or fitness for a particular purpose. No warranty or guarantee given by any person, firm, or corporation with respect to this product shall be binding on Trinity.

If your Product is defective or otherwise requires service or parts, please call TRINITY Customer Service tollfree at (800) 985-5506, between 5:00 a.m. and 5:00 p.m., PST. Please tell us which model you purchased, the date of the purchase, and the problem with your Product. A copy of your original purchase receipt must accompany your service request.

LIMITATION OF REMEDIES AND LIABILITY

Trinity (and its employees, officers, members, managers, affiliates and assigns) shall not be liable for any incidental, consequential, special, indirect, remote, special or punitive damages for breach of any warranty, express or implied, including, but not limited to, lost profits, lost savings, loss of anticipated benefits and attorneys' fees, which arise out of the purchase, use or inability to use the Product, whether arising out of contract, negligence, strict tort, product liability, or any other legal theory on which a claim is based. As noted above, to the extent damages are allowed by our express warranty or by applicable law, those damages may not exceed the purchase price paid for the Product. Without limiting the foregoing Purchaser assumes all risk and liability for loss, damage or injury to Purchaser and Purchaser's property and to others and their property arising out of the use, misuse, or inability to use this Product. This limited warranty shall not extend to anyone other than the original purchaser of this product, is nontransferable and states your exclusive remedy.

Some states do not allow the exclusion or limitation of incidental, consequential, special, or punitive damages, so the above limitation or exclusion may not apply to you. The above warranty gives you specific legal rights, and you may have other rights which vary from state to state.

CONTACT US

QUESTIONS? NEED PARTS? WE ARE HERE TO HELP!

Please feel free to contact us. There are no questions too small, or any problems too big. We're committed to providing our customers with the highest level of service.

TRINITY Customer Service TEL: 800.985.5506 FAX: 310.347.4134

EMAIL: customerservice@trinityii.com

Monday through Friday 5:00 AM – 5:00 PM (PST)

www.trinityii.com