Maxxus Infrared Sauna Instruction Manual

Model MX-K356-01



FOR CARBON MODEL SAUNAS
FOR INDOOR USE ONLY
110V/15 AMP DEDICATED CIRCUIT REQUIRED



Thank you for choosing Maxxus Infrared Sauna!

Index

	Page
Important Safety Guides	2
Introduction	3
Health & Beauty Benefits	3
Highlights	4
Assembly	4
Sauna Operation	12
Warnings	. 14
Troubleshooting	15
Maintenance	16
Transportation	16
Packing List	16
Warranty	17
Warranty Card	. 19
Circuit Diagram	21

WARNING: Visually inspect all heaters before assembly to make sure they are not damaged. Any excessive vibrations during transport could cause damage to the heating elements. DO NOT START the sauna if damage is detected! Contact your dealer or manufacturer for troubleshooting and replacement parts.

DISCLAIMER

The infrared rays emitted by your sauna are reported to offer a wide range of possible therapeutic benefits based on research completed over the last 25 years from all around the world. These benefits are presented for reference purposes only and no implication of infrared saunas creating a cure for or treating any disease is implied nor should it be inferred. If you have a health condition, are taking prescription drugs, or have acute joint injuries, please consult your medical physician before starting infrared therapy. Persons with surgical implants (metal pins and rods, artificial joints, silicone, or other types of surgical implants) typically do not experience any adverse effects, but should also consult their physician or surgeon before starting infrared therapy.

READ IMPORTANT SAFETY GUIDES BEFORE USING!

READ AND FOLLOW ALL INSTRUCTIONS

- A). Please following all warning labels and markings on the sauna room.
- B). Do not install any receptacles on the interior or exterior walls of the sauna room.
- C). No locking devices are installed or shall be installed on the door of the sauna room which could result in entrapment within the sauna room.
- D). During use, the ceiling vent can be in the opened position.
- E). CAUTION! Hyperthermia Danger: the normal body temperature can't rise above 103°F. Symptoms of excessive hyperthermia include dizziness, lethargy, drowsiness, and fainting. The effects of excessive hyperthermia may include failure to perceive heat, physical inability to exit sauna, unawareness of impending hazard, unconsciousness and fetal damage in pregnant women. Hyperthermia could make your body's core temperature rise. Setting desired temperature to an excessively high temperature is not recommended.
- F). Do not use drugs, medications, or consume alcohol prior to or during the sauna session as they may lead to unconsciousness and/or other harmful physical injuries. If absolutely necessary, persons using medications should consult a physician before using the sauna. Some medications may induce drowsiness while others may affect the heart rate, blood pressure, and/or blood circulation.
- G). WARNING! Your hands must be dry and free of moisture before plugging and unplugging cords and wiring harnesses from the power supply and circuit boards. Never operate the sauna with wet hands or wet feet to avoid risk of electric shock. Never touch the metal prongs of the plug.
- H). Persons suffering from obesity or with a medical history of heart disease, low or high blood pressure, circulatory system problems, or diabetes should consult a physician prior to using the sauna.
- I). Do not pour water or any other liquids on the infrared emitters. Do not place combustible materials near on or on the heaters. Do not bump, hit, or break the heating elements as it may cause an electrical short and pose a safety risk.
- J). To reduce the risk of injury, do not allow children to use the sauna unless they are closely supervised by an adult and use of the sauna has been prescribed by a medical physician.
- K). If the power supply cord becomes damaged, it must be replaced immediately by the manufacturer or its agent. If you find the power cord is too hot or that the electrical equipment may be experiencing technical problems, please contact the manufacturer or its agent immediately to avoid hazardous conditions.
- L). Pregnant or possibly pregnant women should contact their physician prior to using the sauna. Excessive temperature has a high potential for causing fetal damage during pregnancy.

- M). Never sleep inside the sauna.
- N). Do not use any type of cleaning agents on the interior of the sauna. Only wipe down with a cloth and water.
- O). Do not stack or store any object on top or inside the sauna.
- P). Do not use the sauna during an electrical storm to avoid risk of shock.
- Q). Do not attempt to make any repairs yourself. If a problem occurs with the sauna, please contact seller, distributor, or the manufacturer to avoid safety risks. Unauthorized repair attempts will void the manufacturer's warranty.
- R). Please make sure the outlet power supply meets the specifications required. Failure to meet the requirements may cause safety risks.
- S). Some sauna models are equipped with reading and roof lamps. Because the lamp temperature will become very hot once powered on, do not attempt to touch the lamp to avoid being burned. Do not attempt to touch it for at least 20 minutes after it has been powered off.
- T). Do not make any modifications to the sauna, the sauna structure, or the sauna components.

SAVE THESE INSTRUCTIONS

Introduction

We welcome you to the most affordable infrared sauna in the nation! We also congratulate you on your new path to better health! Thousands of users enjoy the benefits of infrared saunas every day. Infrared saunas help you burn calories, reduce toxins, relieve pain and even clear complexions. Now you can enjoy the great benefits of far infrared heat within the privacy of your own home.

Health & Beauty Benefits

Relieve pain: The far infrared rays of a sauna accelerate the blood circulation and supply more oxygen to the body. Increased blood circulation diminishes inflammation, relieves pain, and speeds up recovery. Infrared saunas have also been used to treat bursitis, rheumatism, arthritis, and hemorrhoids. Increased blood circulation not only alleviates internal ailments, but also skin conditions such as psoriasis, eczema and scars. Good circulation is essential for smooth and healthy skin.

Burn calories & fat: The far infrared rays of the sauna eliminate extra salt and subcutaneous fat. Burn up to 600 calories in a half hour session versus a half hour of jogging which burns 300 calories or a half hour of cyclingwhich burns 225 calories.

Relax your body and mind: Use the built-in CD player to listen to your favorite music to relax and reduce stress. Infrared saunas also improve symptoms of insomnia and other stress related disorders.

Reduce toxins and improve complexions: Perspiring in a lower temperature environment activates the sweat glands and expels toxins and heavy metals from the body.

Highlights

- a. High quality craftsmanship
- b. Automatic thermostat for constant temperature
- c. Timer and buzzer: buzzer sounds 5 minutes before the end of the sauna session
- d. Digital sensor and thermometer
- e. Infrared carbon heat emitter panels
- f. Wiring diagram:

Assembly

Assembly Requirements


- a. You will need a philips screwdriver, ladder, and two adults to assemble.
- b. Do not plug any other appliances into the power supply of the sauna room other than the designated sauna connections/plugs.
- c. Assemble the sauna room on a completely level surface.
- d. Do not spray or get water on the exterior/interior walls of the sauna room. If the floor is damp, install a floor separator to keep the sauna high & dry.
- e. Do not store flammable objects or chemical substances near the sauna.

Sauna Room Assembly:

- 1. Structure of Infrared Sauna. See FIG-1
- 2. Make sure all parts are present before installing the unit. See packing list below.

A. User manual
B. Floor Panel
C. Back Panel
D. Left Side Panel
E. Right Side Panel
F. Bench Heater Panel
G. Bench
H. Roof Cover
I. Front Panel
J. Roof Panel

K. Left Back Side Panel **L.** Right Back Side Panel

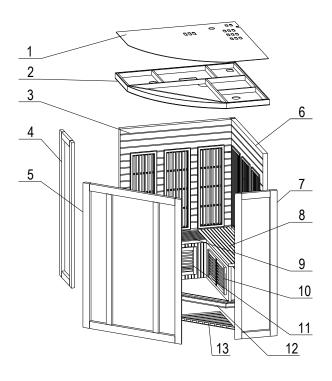

- 1- Roof Cover
- 2- Roof Panel
- 3- Left Back Panel
- 4- Left Side Panel
- 5- Front Panel
- 6- Right Back Panel
- 7- Right Side Panel
- 8- Right Bench
- 9- Left Bench
- 10- Right Bench Heating Board
- 11- Left Bench Heating Board
- 12- Floor Panel
- 13- Floor Heater

FIG-1

NOTE: The pictures and diagrams shown within this owner's manual are representations of this model. Actual model may vary.

3. 3-person sauna and 4-person sauna models are packed in three cartons. For example: C/NO: 002 1 OF 3, C/NO: 002 2 OF 3, and C/NO: 002 3 OF 3. See FIG-2.1 & 2.2

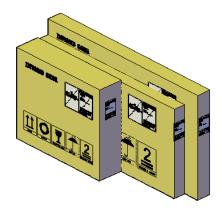


FIG-2.1 Cartons

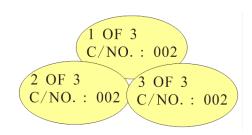


FIG-2.2 C/No.

4. Place the Floor Panel on a smooth/flat surface and make sure which side is the front and which side is the back.

See FIG 3.

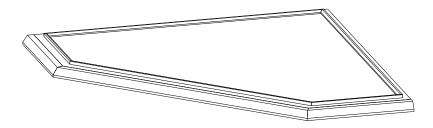


FIG 3 Placing Floor Panel

5. Align the Right Back Side Panel with the Floor Panel's corresponding wood pattern; make sure the wood pattern is flowing in the same direction. One person should hold the Right Back Side Panel while the other person continues to the next step. **See FIG 4**

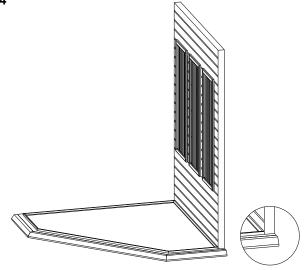


FIG 4 Assembling Right Back Side Panel

6. Align the Left Back Side Panel with the Floor Panel and the Right Back Side Panel. Make sure the Left Back Side Panel and Right Back Side Panel fit flush and use the latches to buckle together. See FIG 5 & 5.1

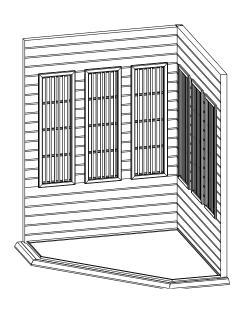


FIG 5 Assembling Left Side Panel

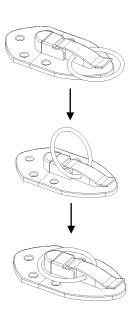


FIG 5.1 Buckle

7. The Right Back Side Panel will align with the Right Side Panel. Once they are aligned and fit together snug and tight, use the latches to buckle together. Do the same for the Left Back Side Panel and the Left Side Panel. See



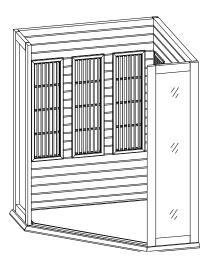


FIG 6 Assembling Back Side Panels and Side Panels

8. Lay the floor heater on the floor panel as seen in **FIG 7**. Next, insert the long Bench Heater Panel parallel to the Right Back Side Panel and into the corresponding wood guide slots on the Left Back Side Panel and the Right Side Panel. Insert the short Bench Heater Panel parallel to the Left Back Side Panel and into the corresponding wood guide slots on the Left Side Panel and the long Bench Heater Panel. Be sure that both Bench Heater Panels are inserted correctly into the wood guide slots. Next, connect the heater cords to their corresponding connections in the Left and Right Back Side Panels. Make sure the connections are snug and tight. **See FIG 8**

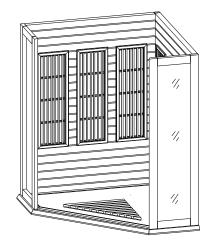


FIG 7 Inserting Floor Heater on floor

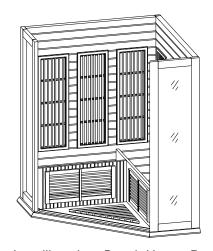


FIG 8 Installing short Bench Heater Panel

9. Insert the Benches onto the top of the Bench Heater Panels. Make sure to slide them all the way back and up against the Back Side Panels. Secure the Benches using the provided screws. See FIG 9 & FIG 10

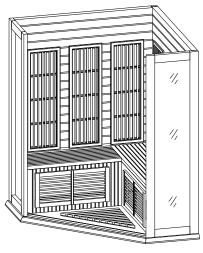






FIG 10 Securing Benches with screws

12. Align the Front Panel with the Floor Panel, Right Side Panel, and Left Side Panel. Next, latch the Front Panel with the Left and Right Side Panels respectively. Note: Be cautious with the glass door to avoid breakage. **See FIG 11.**

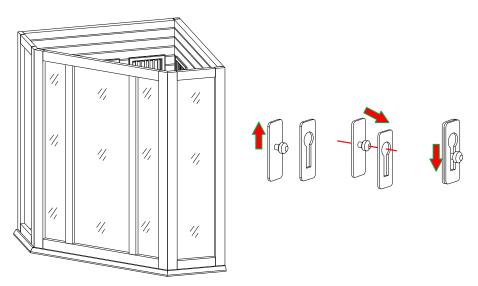


FIG 11 Assembling Front Panel

13. Place (flop) cords/wires coming up to through the top of the wall panels to the outside of the wall panels to avoid damaging the cords/wires during the roof installation. Open the door, lift the Roof Panel up and over the sauna room, and gently lower it into place resting it on the wall panels. Make sure that all cords/wires are slipped through the corresponding holes in the Roof Panel. All of the heaters are pre-assembled. Connect the wire connectors and plugs to their corresponding counterparts on the roof. Make sure the connections are snug and tight. See FIG 12, 13, & 14



FIG 12 Slip cords/wires through corresponding holes



FIG 13 Connecting cords/wires connectors

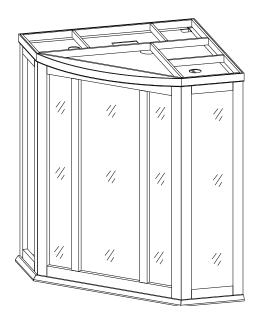


FIG 14 Slip cords/wires through roof

16. The CD Player will already be mounted in its wood housing box. Connect the antenna to the CD player. Next, feed the wires up through the roof. Then mount the wood housing box to the ceiling of the sauna room. **See FIG 15.1, FIG 15.2, FIG 15.3, and FIG 15.4.**

Note: CD player may not be available on all model sauna rooms







FIG 15.3 Feed the wires up through the roof



FIG 15.4 Screw wood housing to sauna room

17. Connect the CD Player wire harness on the roof. See FIG 16

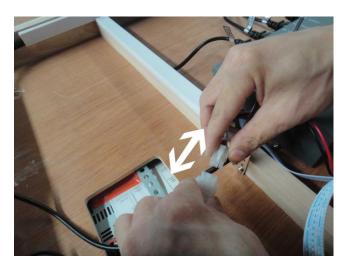


FIG 16 Connecting CD Player connection

18. Locate the Control Panel harness on the roof and make the connection. See FIG 17



FIG 17 Connecting the Control Panel Plug

19. Make sure all steps are completed correctly. Plug in the power cord to your wall outlet. Turn on the sauna at the control panel to confirm that the control panel is responding. Turn on the CD Player to confirm that is operates. If the control panel and CD Player respond accordingly, then proceed in putting the Roof Cover onto the Roof Panel. Make sure to pull the power cord through the corresponding hole in the Roof Cover and screw down the Roof Cover.

See FIG 18 & 18.1



FIG 18 Pull Power Cord through Roof Cover



FIG 18.1 Screw down Roof Cover

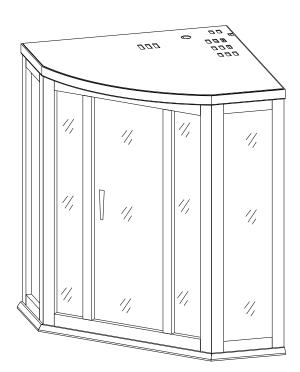


FIG 18.2 Sauna Room Assembled

19. Attach the door handle and screw into place. Screw cup-holder and magazine rack to the interior wall panel. (Cup-holder and/or magazine rack are not available on all models.)

Installation Completed.

Sauna Operation



1. Precautions

- **a.** Please make sure your wall outlet meets the specifications required. Failure to meet the requirements may cause safety risks.
- b. Set the temperature and time to a comfortable level. The average used temperature range is between 118°F 122°F. The average sauna session is approximately 20 30 minutes. You must pre-heat sauna room to the desired temperature before entering.

Note: If the ambient temperature is below $72^{\circ}F$, the sauna will take longer to pre-heat. It is not recommended to use the sauna in an environment with an ambient temperature below $60^{\circ}F$.

- c. Drink water prior to, during, and after your sauna session to replenish body fluids.
- d. After 2 hours of continuous use, the sauna needs to be shut down for one hour.
- e. To avoid burns, do not touch the heating element.

2. Operating The Sauna

- a. Review the electrical label on the sauna and then plug the sauna into the proper wall outlet. No other appliance can be operated on the same electrical breaker as the sauna when the sauna is in use. Proceed in turning on the sauna room using the ON/OFF button to activate the sauna.
- **b.** The sauna should be **unplugged** when not in use. If you do not have access to the plug, it is recommended to use a heavy duty surge protector.
- temperature buttons to increase or decrease the temperature to the desired temperature. If the "Heat" light is on, the temperature setting will increase one degree every time the button is pressed. If pressed for three seconds, the setting will increase quickly.

Decrease the temperature in the same manner by pressing the button. After the sauna reaches the desired temperature, the "Heat" light will turn off.



button to turn the light ON. If you want to use the Color Light Therapy System:

- 1. While the interior light is ON, press and hold down the button for 2 seconds. You will notice "2n" in the LED display. This indicates you are in the "light" mode. If you do not press any buttons for approximately 15 seconds, the "2n" will change back to the Timer mode.
- 2. While the "2n" is displayed, you can now turn the exterior light ON/OFF by pressing the



in the



section of the control panel.



button in the



section

You can also turn the interior light ON/OFF by pressing the of the control panel.

4. While the interior light is on and the "2n" is still displayed in the LED display, you can press the



button to scroll through the different colors within the Color Light Therapy System.

You will notice that you have two selections for "white":

- **A.** The first selection for "white" will allow the colors to go through a sequence of the different shades of colors.
- **B.** The second selection for "white" will continue to display the white light.



5. To return back to the Timer mode, press the

button.

- e. You can operate the sauna with the ceiling vent in the open or closed position.
- **f.** After your sauna session is over, you can turn the control panel off by pressing the ON/OFF button. You can unplug the sauna cord or switch the heavy duty surge protector to the OFF position.
- g. To set the time, press the



buttons. Press '






buttons to set the timer from 5 to

60 minutes. If pressed for three seconds, the timer will increase/decrease quickly. When the timer display shows "05", the timer will buzz and the sauna will shut off automatically after 5 minutes. To extend the sauna



session, reset the timer again by pressing the

h. The Fahrenheit and Centigrade display can be switched by pressing and holding the TEMPERATURE side





i. CD Player (optional)

Please read the instruction provided with the CD player.

CAUTION: Exit sauna immediately if you feel dizzy, sleepy, or any discomfort.

Warnings

1. Safety precautions

- a. To avoid fire, do not dry clothes or leave any towels in the sauna room.
- b. Do not install the sauna near water, near a bathtub, near a shower, in a wet basement, or near a swimming pool.
- c. To prevent burns or electric shocks, do not touch or use metal tools on the protective material covers of the heat emitter panels.
- d. When replacement parts are required, be sure they meet the specified requirements of the manufacturer.
 Unauthorized substitutes may result in fire, electric shock, or other hazardous conditions. After any repairs, please perform safety checks to determine that your sauna is working properly.
- e. While in the sauna, do not touch the light bulb. If the bulb needs to be changed, switch it off and wait until the sauna is shut off and the bulb is cool.
- f. Do not use any wall receptacle adapter or extension cord between the sauna cord and wall receptacle. An applicable heavy duty surge protector can be used.
- g. Do not spray water on the heat emitter panels. This may result in electric shock or damage to the heat emitters.
- h. Always consult your physician for medical advice before using the sauna room.
- i. Do not use the sauna if you have any of the following conditions below:
 - 1. Open wounds
 - 2. Eye diseases
 - 3. Severe sunburns
 - 4. The elderly & weak. Those suffering from any medical condition or disease. Pregnant women and children should not use the sauna room. Children should not use the sauna unless prescribed by a medical physician and under the supervision of an adult.
 - 5. If suffering from a disease directly related to temperature, seek the advice of a medical physician before using the sauna.
 - 6. Do not place pets in the sauna.
 - 7. Never use the sauna if you are taking medications or consuming alcohol.

Troubleshooting:

	problem	possible reason	countermeasure
1	indicator light for power	The connector is not connected	Check the connector or replace a new
	supply not working	properly	one
		No power supply input	Check your circuit breaker to confirm
			power at the wall outlet
		Indicator light is broken	replace the circuit panel
2	Indicator light for function	The heating indicator light is broken	Replace the relevant control panel
	is not working	The circuit board or components are	Replace the circuit board
		broken	
		The temperature sensor is broken	check the connection of the
			temperature sensor
3	Infrared Heater not	The heater is broken	Replace heater panel
	heating up	The wire junction or the heater's wire	Check that the connections are sung
		is not connected	and tight
		The temperature sensor is broken	check the connection of the
			temperature sensor
		The circuit board or the relay is not	replace the circuit board
		working	
4	Odor from the sauna	Power supply problem	Power supply may need to be
			replaced
5	Light bulb is not working	Light bulb is burned out	Remove burned out light bulb and
			replace it
		Light bulb wiring is loosen	Check connection and/or replace the
			lamp assembly
		Problems with electrical control panel	Replace the relevant control panel
6	Sauna is not powering up	Power cord is unplug	Plug the power cord into wall outlet
		Outlet has no power	Check your circuit breaker to confirm
			power at the wall outlet
		Power supply or circuit panel is	Replace the power supply or related
		broken	circuit board
7	The temperature display	The connector of temperature sensor	Disconnect and reconnect the
	shows "EP"	is loose, not connected, or sensor is	connector of temperature sensor or
		damaged	change to a new temperature sensor
8	The temperature display	The temperature inside the sauna	Turn off the unit, and contact the
	shows "H"	room is too high	manufacturer

9	Speaker does not work	The speaker is broken	Replace with a new one of the same specifications
		The speaker wire is loose	Disconnect and reconnect the speaker connections
		The power indicator light for CD is off	Turn on the switch to start work
10	CD-Player doesn't work	Power connector is loose or damage	Disconnect and reconnect the
			connection
		DC power supply has no power to the	Check DC power supply wiring or
		CD-player	replace the power supply
		CD-player is defective	Replace the CD-player
		CD-player protection fuses is burnt	Replace the fuses
		out	

Maintenance:

Cleaning

Do not use liquid cleaners or aerosol cleansers inside the sauna. Unplug the sauna from the wall outlet before cleaning.

Use plain water and a soft cloth for cleaning. Do not use benzene, alcohol, or strong cleaning chemicals in or on the sauna. NOTE: Any chemical that can damage wood or be absorbed into the wood will damage the sauna.

Transportation and storage

- 1. Avoid exposure to rain, snow or other strong weather elements.
- 2. Do not store in damp environments.

Packing list

1pc	Front Board	1pc	Back Board	2pcs	s Side panels
1pc	Bottom Panel	1рс	Ceiling	1pc	Ceiling Cover
4	Descri	4	Decel Header Decel	4	1.1-1.4

1pcBench1pcBench Heating Board1pcLight

1pc CD Player and 2pc Speakers 1pc CD Player Box 1pc Instruction manual

1pc Handle set

Limited LifetimeWarranty

*Limited Lifetime Warranty: Golden Designs, Inc. warranties the heating elements and electronics against defects in material and workmanship for the life of the product from the original date of purchase. This sauna is for INDOOR use only. Placing your sauna outdoors will VOID this warranty. Any damage due to exposure to outdoor elements such as rain, snow, sun, wind or extreme temperatures will not be covered by this warranty. Any damages as a result of modifications made to the sauna o its components will void this warranty.

Extent of WarrantyThis limited warranty applies to products manufactured or distributed by Golden Designs, Inc. under the Dynamic brand name, delivered in the continental United States or Canada and extends to the original purchaser at the original site of installation only. This warranty becomes valid at time of purchase and terminates either by specified time frame listed above, owner transfer, or relocation. Your sales receipt showing the date of purchase of the product is your proof of purchase.

Manufacturer Warranty

All Golden Designs, Inc. products are manufactured with the highest quality appliances and are warranted to be free from defects in material and workmanship at the time of delivery. The appliance warranty is extended through the manufacturer for the product including, but not limited to: stereos, CD/DVD players, etc. All exchanged parts and products replaced under this warranty will become the property of Golden Designs, Inc. Golden Designs, Inc. reserves the right to change manufactures of any part to cover any existing warranty. Any parts determined to be defective must be returned to Golden Designs, Inc. to obtain warranty service. You must prepay any shipping charges, export taxes, custom duties and taxes, or any other charges associated with the transportation of the parts. In addition you are responsible for insuring any parts shipped or returned. You must present Golden Designs, Inc. with proof of purchase documents (including the date of purchase). Any evidence of alteration, erasing or forgery of proof of purchase documents will be cause to **VOID** this limited warranty. Products on which the serial number has been defaced or removed is not eligible for warranty service.

Warranty Limitations

This warranty does not apply if the unit has been subject to negligence, alteration, modification, misuse, abuse, repairs by non-Golden Designs, Inc. authorized personnel, inappropriate installations, or any case beyond the control of Golden Designs, Inc. invalidating this warranty including but are not limited to:

- Use of lacquer or paints
- Sauna and other Golden Designs, Inc. products accessories placed on non-approved surfaces
- Outdoor applications
- Normal wear and tear or weathering
- Use of product not in accordance with instructions

Surface cracks are not considered defects in material or workmanship, as they are normal characteristics of all woods. This includes minor cracks due to wood expansion and contraction. Note: Since the wood used in construction has been kiln dried, a certain amount of expansion and contraction occurs in the wood in a sauna environment.

Disclaimers

Golden Designs, Inc. shall not be liable for loss of use of sauna or other Golden Designs, Inc. products or other secondary or incidental or consequential costs, expense or damages - which may include the removal of permanent deck or other custom fixtures or the necessity for crane

removal - arising directly or indirectly out of the use or inability to use the product. Any implied warranty shall have duration equal of the applicable warranty stated above. Under no circumstances shall Golden Designs, Inc. or any of its representatives be held liable for injury to any person or damage to any property, however arising. Specifications are subject to change without notice or obligation.

Legal Remedies

This limited warranty gives you specific legal rights. You may have other rights, which may vary from state to state.

Customer Service

For customer service, contact your authorized dealer. If you need additional information or assistance, please email Golden Designs, Inc. At info@goldendesignsinc.com or call (909) 212-5555.

^{*}Limited Lifetime Warranty of Sauna Products is 3 years on heating elements and electronics from the date of purchase. The radio and wood structure have a 1 year limited warranty.

PAGE INTENTIONALLY LEFT BLANK

WARRANTY CARD

Congratulations on your purchase of an Infrared Sauna from Golden Designs, Inc.	Please take the time to complete the
following Warranty Card and mail it back to:	

Golden Designs, Inc. 1920 Proforma Ave Ontario, CA 91761

Please include a copy of your sales receipt showing date of purchase as this will serve as proof of purchase.

Warranty will be VOID if the following warranty card is not mailed back within 60 days of purchase date along with proof of purchase.

**Serial nu	ımk	oer	(S/	N)	is l	oca	ted	on	the	sa	una	r's f	fror	ıt p	ane	el, r	ear	pa	nel	, or	on	the	e ca	rto	n.*	*		
													DI	ЕТА	СН	HER	RE											

WARRANTY CARD

All fields must be completed to valid	date the warranty.		
Name:			
Address:			
City:	State:	Zip Code:	
Phone Number:			
Purchase Date:			
Product Name:			
Purchase From:			

Serial Number: