


4-LIGHT PENDANT

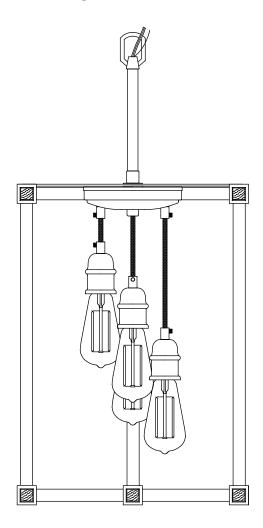

Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

Table of Contents

able of Contents	.2
afety Information	.2
arranty	
What is Covered	
What is Not Covered	
re-Installation	.3
Planning Installation	.3

Tools required	3
Hardware Included	3
Package Contents	4
Installation	5
Care and Cleaning	7
Troubleshooting	7

Safety Information



WARNING: Carefully read and understand the information given in this manual before beginning the assembly and installation. Failure to do so could lead to electric shock, fire or other injuries which could be hazardous or even fatal.

NOTICE:

Suitable for dry locations.

 \triangle

WARNING: Be sure the electricity to the wires you are working on is shut off. Either remove the fuse or turn off the circuit breaker.

NOTICE: The luminaires shall be installed by a qualified electrician or person who is familiar with the luminaires.

NOTICE: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warranty

WHAT IS COVERED

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling.

WHAT IS NOT COVERED

This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product such as surface and/or weathering, as this is considered normal wear and tear.

The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-800-986-3460 or visit HOMEDEPOT.COM/HOMEDECORATORS.

Pre-Installation


PLANNING INSTALLATION

Read all instructions before installation. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.




NOTE: Keep your receipt and these instructions for proof of purchase.

TOOLS REQUIRED

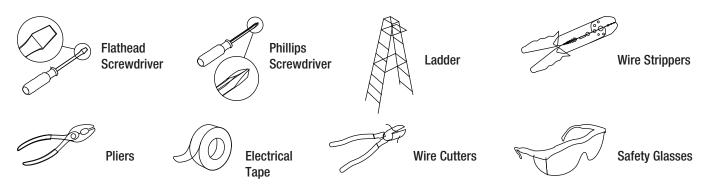


HARDWARE INCLUDED

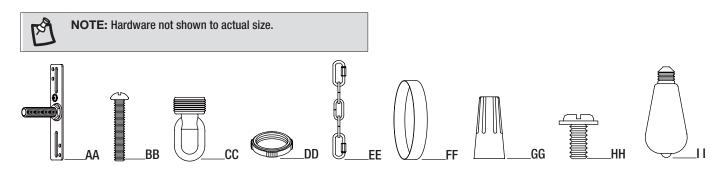

Part	Description	Quantity
AA	Cross Bar	1
BB	Outlet Box Screw	2
CC	Screw Collar Loop (preassembled to Cross bar (AA))	1
DD	Ring (preassembled to Cross bar (AA))	1
EE	Chain	1
FF	Canopy	1
GG	Wire Connector	3
НН	Ground Screw	1
П	Bulb (included)	4

Pre-Installation (continued)

PACKAGE CONTENTS

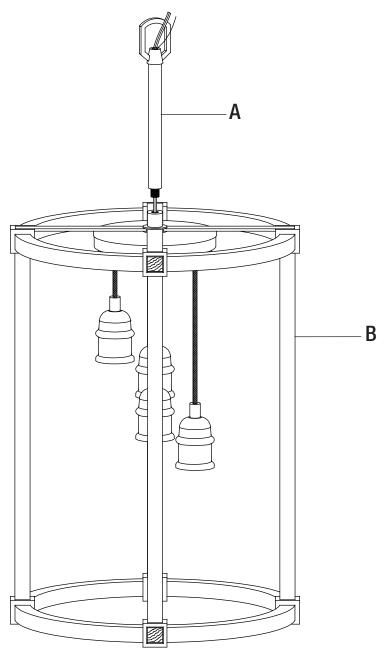


Part	Description	Quantity
Α	Pole	1
В	Fixture	1

Installation


Attaching the cross bar to the outlet box

- □ Remove the Ring (DD) and Screw Collar Loop (CC) from the preassembled threaded nipple on the Cross Bar (AA).
- □ Mount the Cross Bar (AA) to the outlet box using the two Outlet Box Screws (BB).

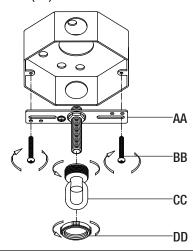

3 Connecting the electrical wires

- □ Wrap the ground wire from the fixture around the Ground Screw (HH) on the Cross Bar (AA). Connect the ground wire from the fixture to the ground wire from the outlet box.
- □ Connect the smooth wire (marked) from the fixture to the black supply wire.
- □ Connect the ridged wire (unmarked) from the fixture to the white supply wire.
- □ Cover the three connections using the three Wire Connectors (GG). Wrap the three wire connections with electrical tape for a more secure connection.
- $\ \square$ Position the wires back inside the outlet box.

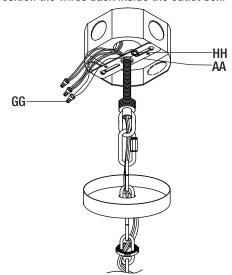


2 Attaching the chain

- Attach the Screw Collar Loop (CC) to the threaded nipple of the Cross Bar (AA). Choose the desired length of Chain (EE). Use a soft cloth and pliers (none included) to avoid damaging the finish of the Chain (EE) if any links are being removed.
- □ Open the top section of the Chain (EE) and attach it to the Screw Collar Loop (CC). Pass the Chain (EE) through the Canopy (FF) and Ring (DD).
- □ Then weave the fixture wire and the fixture ground wire from the Fixture (B) through the Chain (EE), Ring (DD), Canopy (FF), Screw Collar Loop (CC) and the threaded nipple on the Cross Bar (AA).




NOTE: The top and bottom section of Chain (EE) are required.

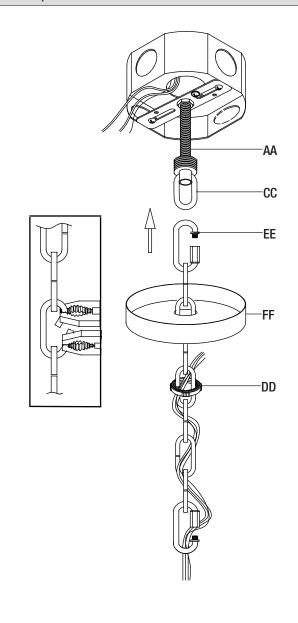

Installation (continued)


4. Securing the pole

 $\hfill\Box$ Screw the Pole (A) onto the Fixture (B).

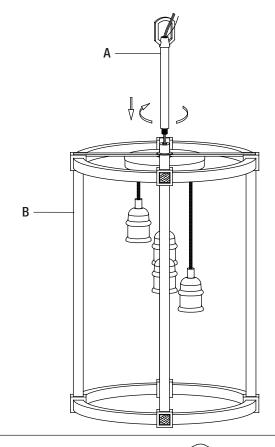

5 Securing the canopy

- $\hfill\Box$ Tighten the Ring (DD) onto the Screw Collar Loop (CC) to secure the Canopy (FF) over the Cross Bar (AA).
- $\hfill\Box$ Open the bottom section of the Chain (EE) and attach it to the Pole (A).

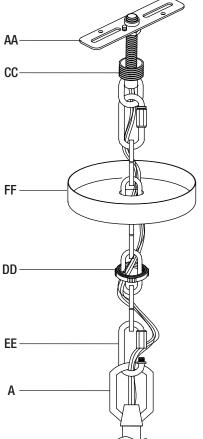


Installation (continued)

6 Installing the bulbs

 $\hfill\Box$ Screw the Bulbs (I I) into the sockets.



NOTE: For bulb replacement, use 60-watt max. medium base bulbs or medium base CFL equivalent bulbs.

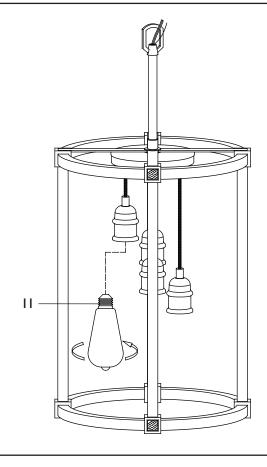

Care and Cleaning

- $\hfill\Box$ Clean the fixture with a soft, dry cloth.
- $\hfill\Box$ Do not use any cleaners with chemicals, solvents or hash abrasives.



CAUTION: Before attempting to clean the fixture, disconnect the power to the fixture by turning the breaker off or removing the fuse from the fuse box.

Troubleshooting

Problem	Possible cause	Solution
The fixture will not light.	The power is off.	Ensure the power supply is On.
	The circuit breaker is off.	Ensure the circuit breaker is in the On position.
The fuse blows or the circuit breaker trips when the light is turned on.	The wires are crossed or the power wire is grounding out.	Check the wire connections. Contact a qualified electrician or call the Customer Service Team at 1-800-986-3460.



Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.